





# BERLYN

## King Bed

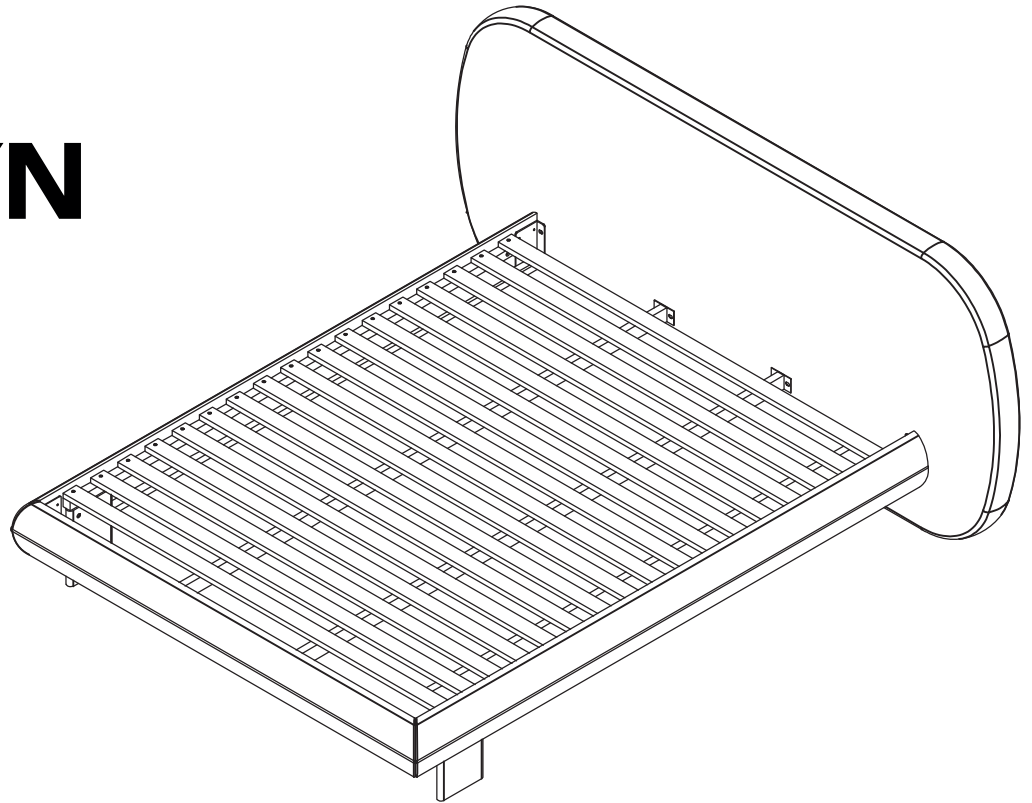


- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at [customercare@b2cfurniture.com.au](mailto:customercare@b2cfurniture.com.au) We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!


# BERLYN King Bed

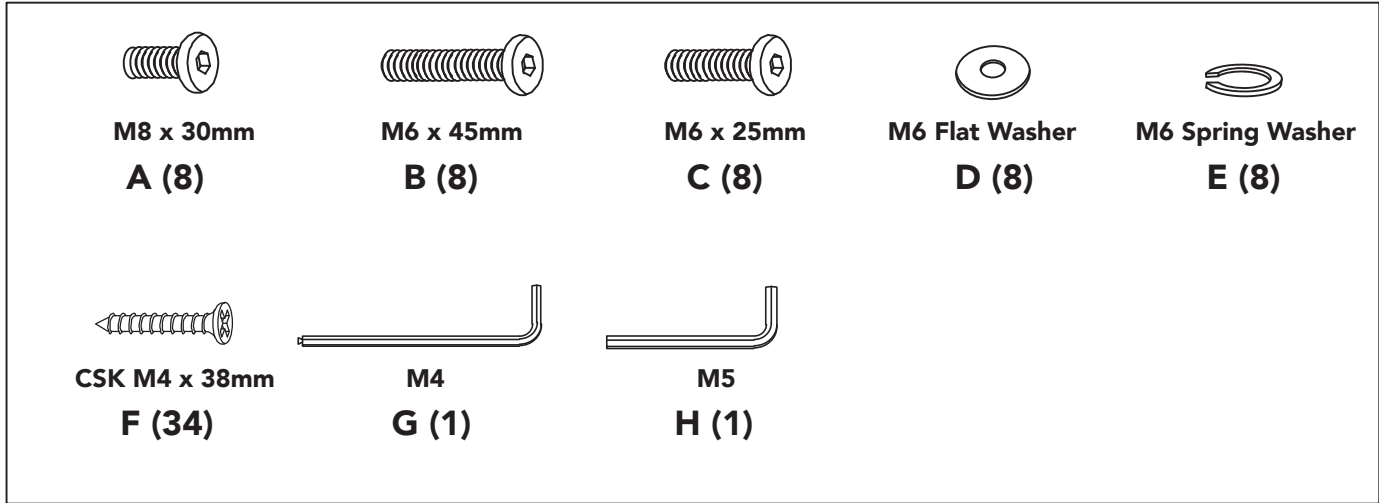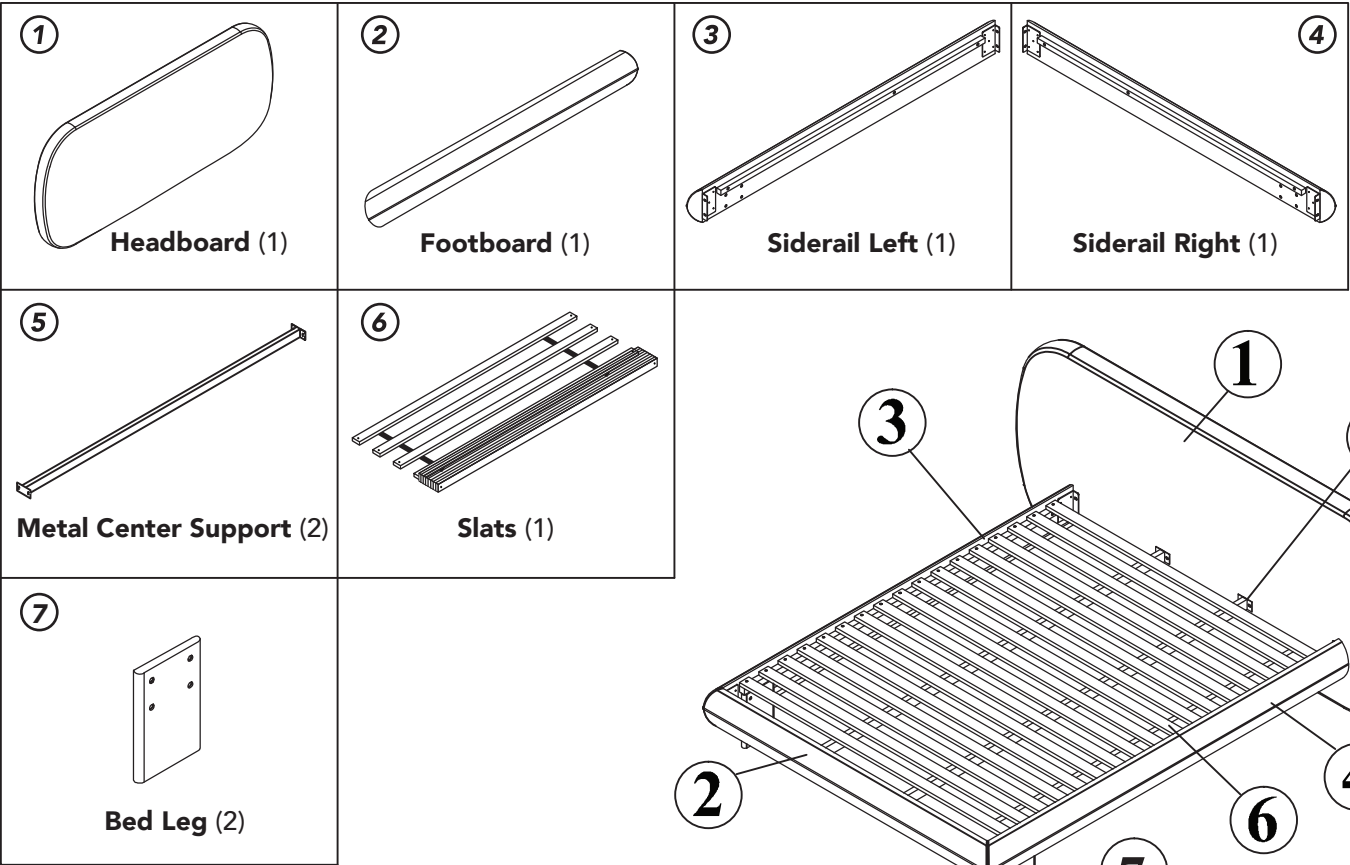

## 1.

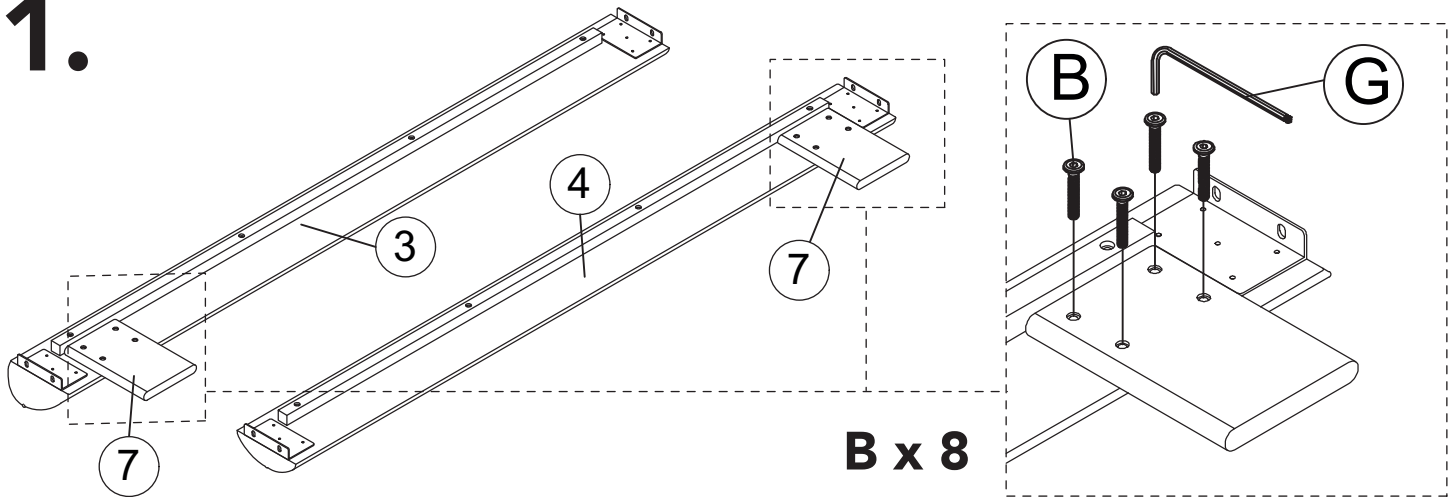


## 2.

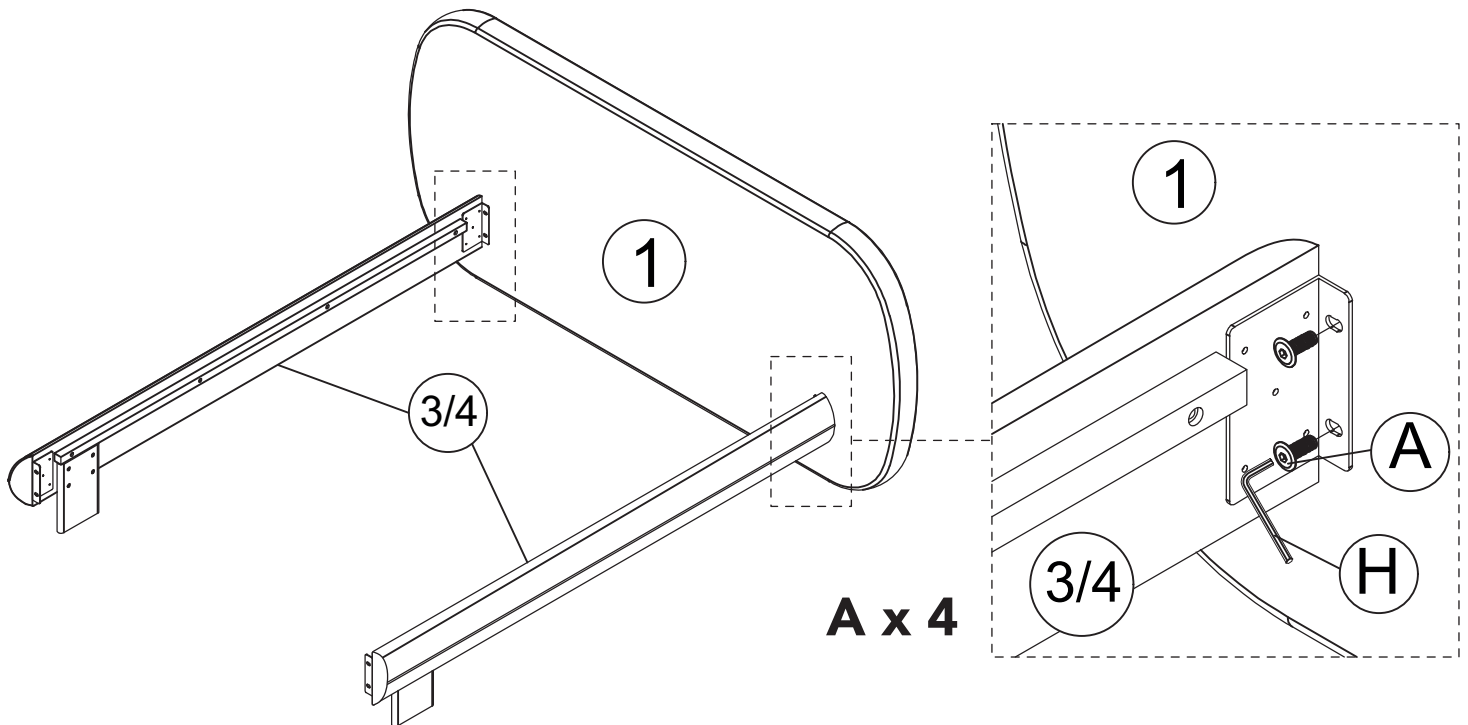


Attach **Bed Legs (7)** to the **Siderail Left & Right (3/4)**, use **JCBC M6 x 45mm (B)**.  
 Secure tightly with the **Allen Key M4 (G)**. Connect the **Siderail Left & Right (3/4)** to the **Headboard (1)**,  
 use **JCBB M8 x 30mm (A)**, screw in with **Allen Key M5 (H)**.  
**Reminder: Do not Fully Tighten all bolts until all parts in place.**


## 3.

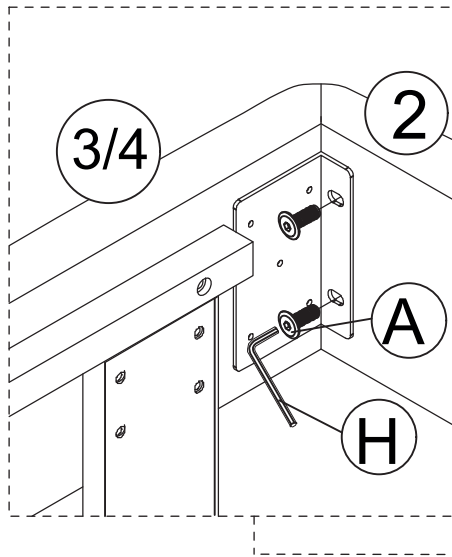


**A x 4**

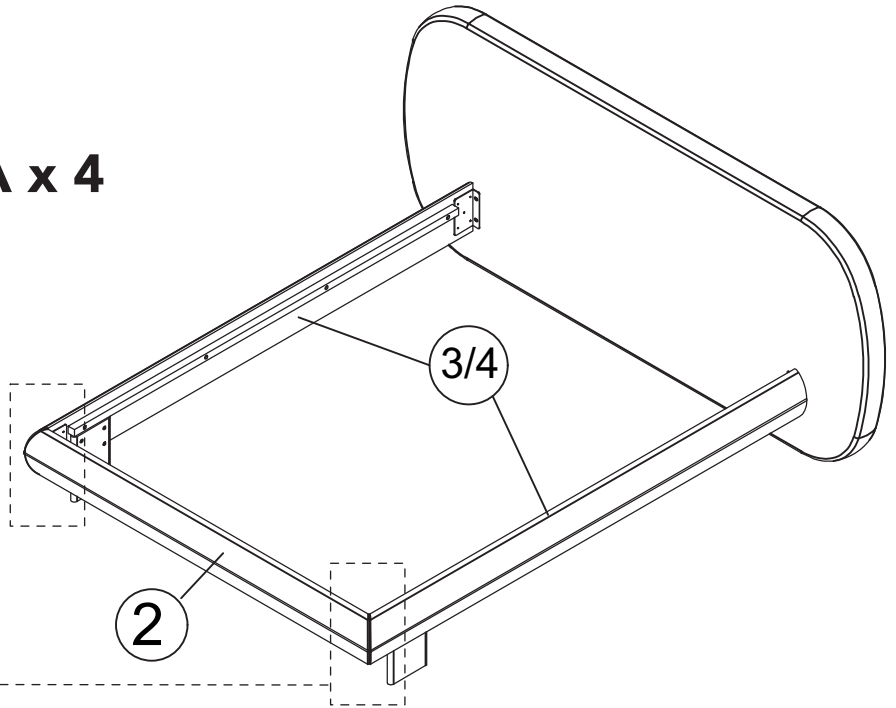

## 4.

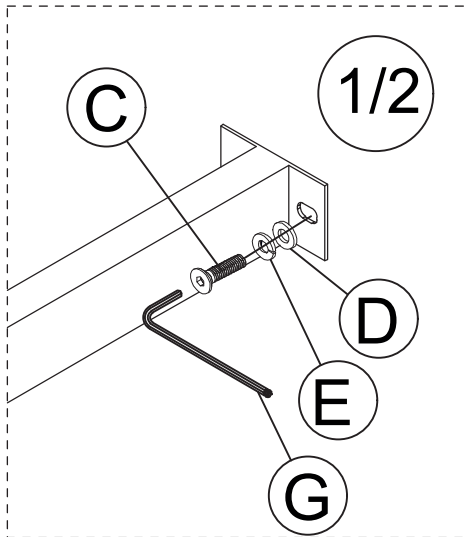

**C x 8**  
**E x 8**  
**D x 8**



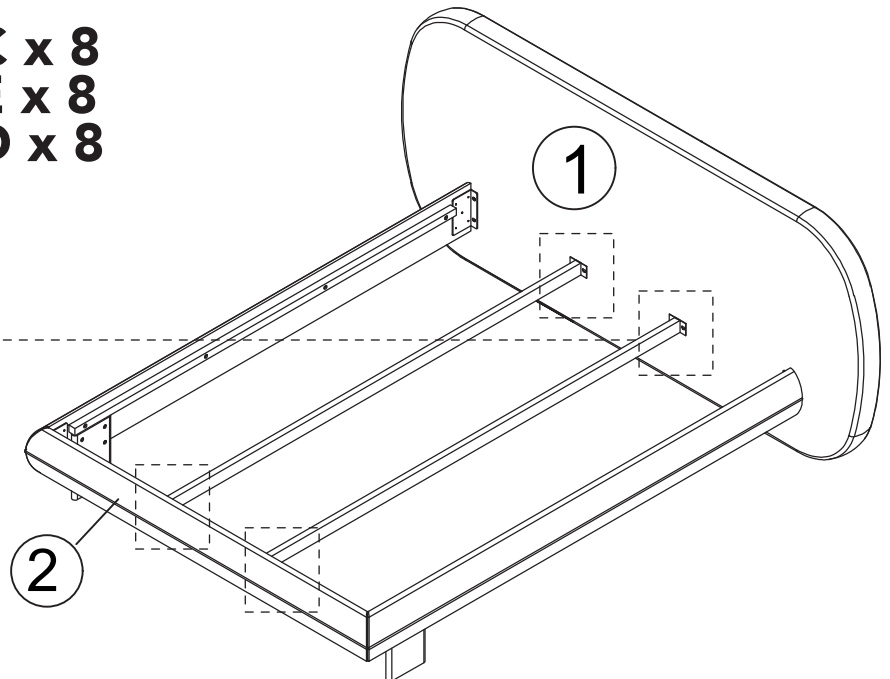


Connect **Footboard (2)** to **Siderail Left & Right (3/4)**, use **JCBB M8 x 30mm (A)**, screw in with **Allen Key M5 (H)**. Install **Metal Center Rails (5)** between the headboard and footboard, use **JCBC M6 x 25mm (C)**, **Spring Washer M6 x 12mm (E)** and **Flat Washer M6 x 19mm (D)**, screw in with **Allen Key M4 (G)**.

**Reminder: Do not Fully Tighten all bolts until all parts in place.**

## 5.

**F x 34**

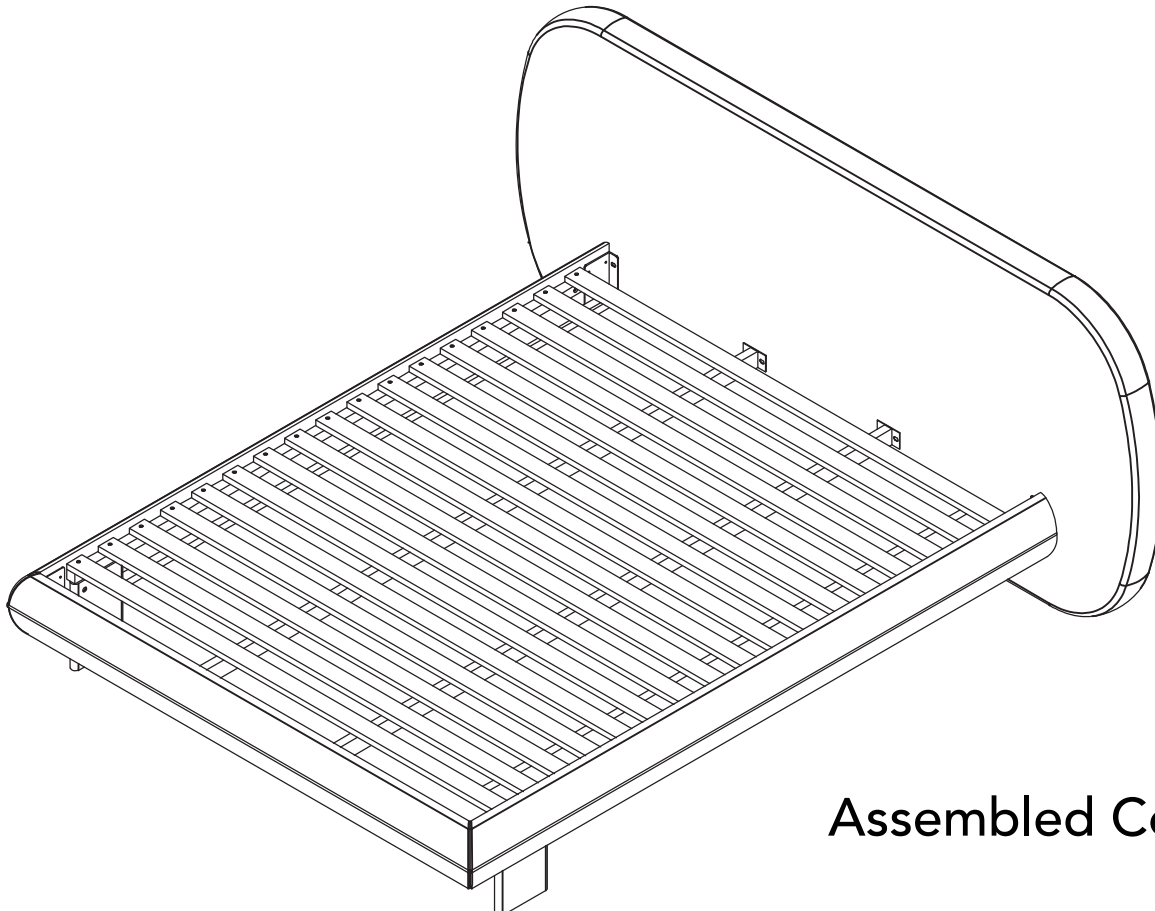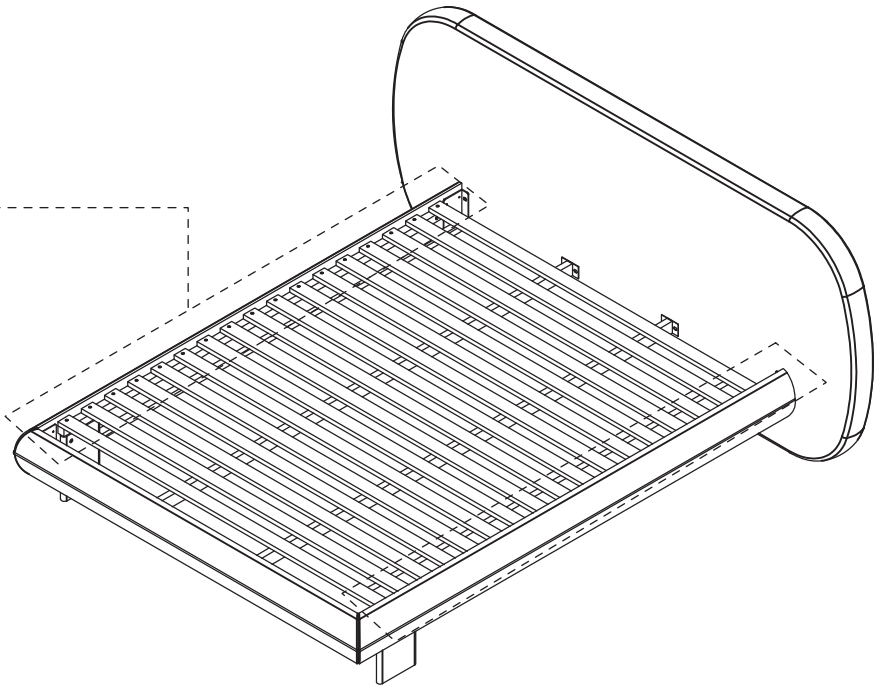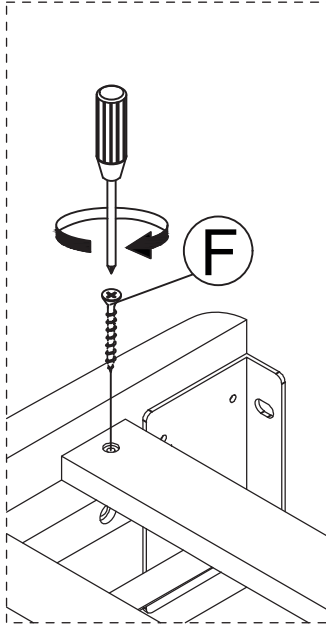

**Assembled Completed**

Place the **Slats (4)** on the bed frame. Secure each slat with **CSK M4 x 38mm (F)**.  
**Reminder: Please ensure all bolts and screw are tightened and secure before you use it.**