


COVE


Queen Bed

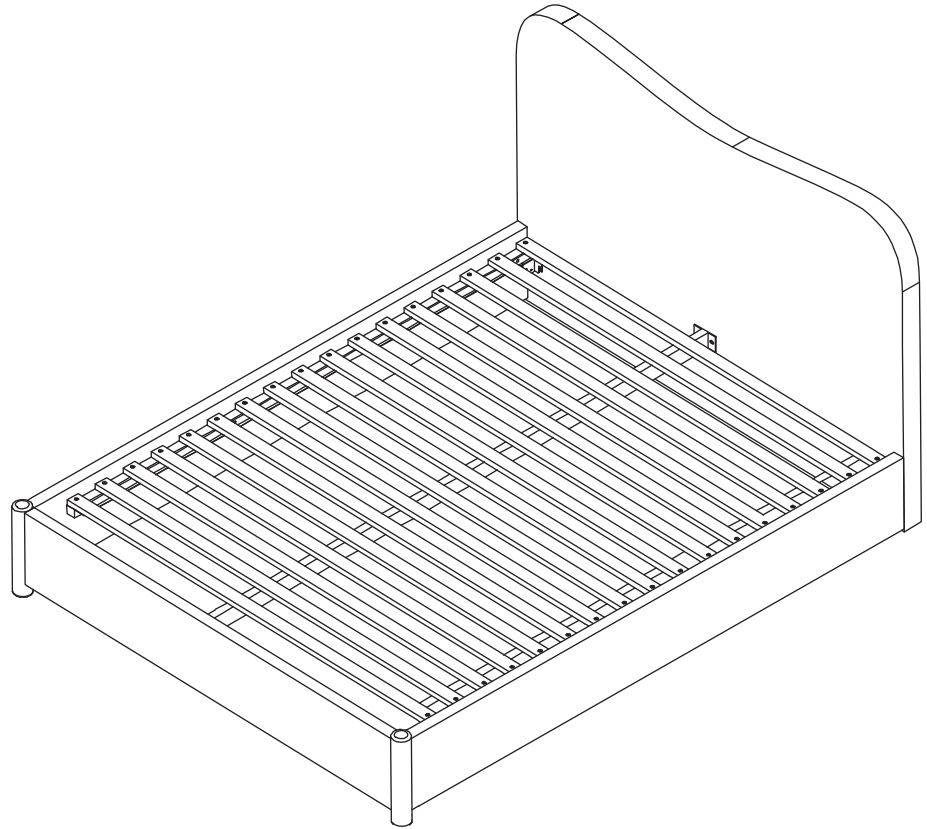

- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at customercare@b2cfurniture.com.au We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!


COVE Queen Bed

1

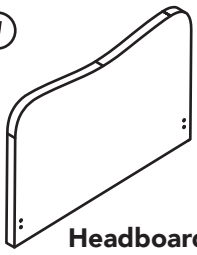

Headboard (1)

2

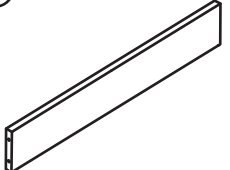


Footboard (1)

3




Siderail Left (1)

4

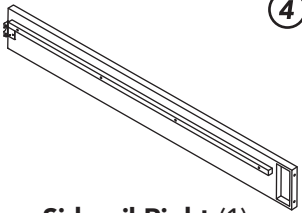


Siderail Right (1)

5

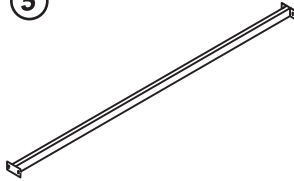

Metal Center Support (1)

6

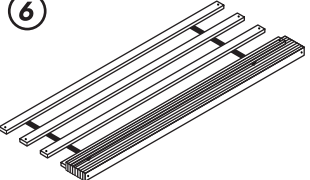

Slats (1)

7



Bed Leg (2)

1

5


3

2

4

6

7

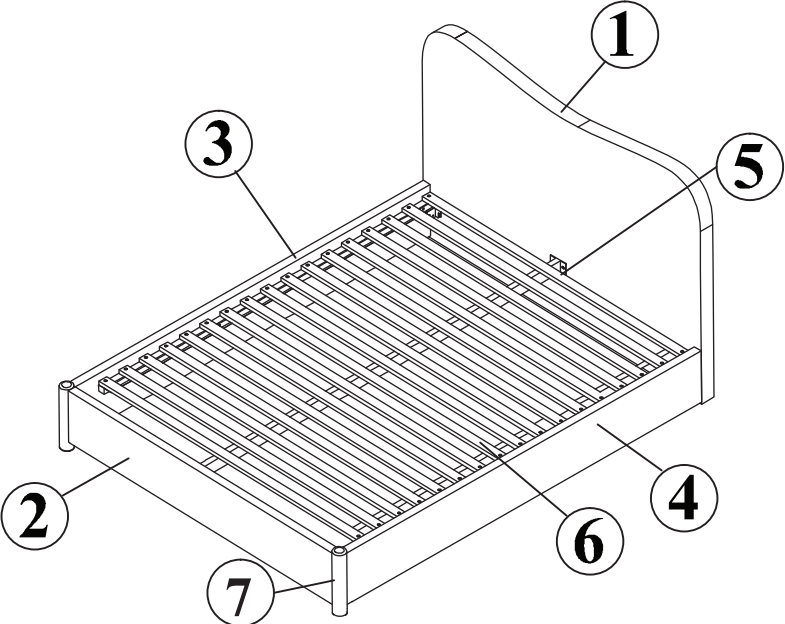



M8 x 30mm
A (4)



M6 x 35mm
B (8)




M6 x 25mm
C (4)



M6 Spring Washer
D (12)



M6 Flat Washer
E (12)



CSK M4 x 38mm
F (34)



M4
G (1)




M5
H (1)

M6

M8


M10




0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
CM

Page 2 of 5


1.

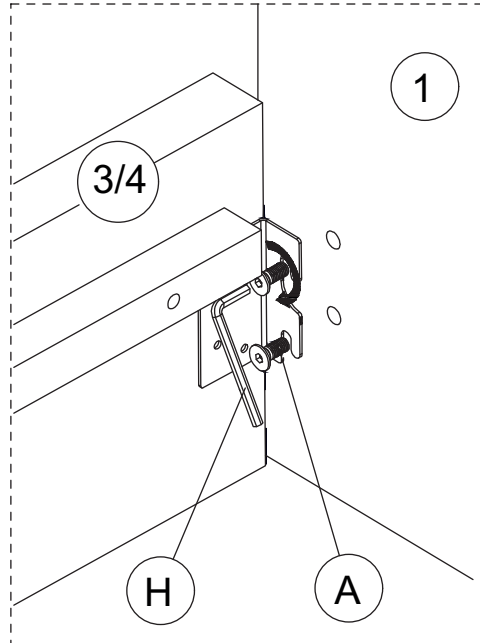


A x 4

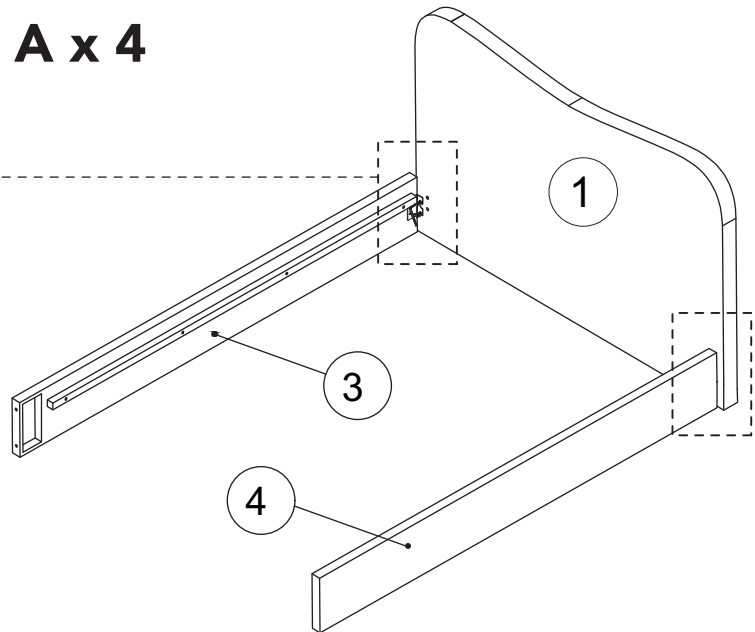

2.

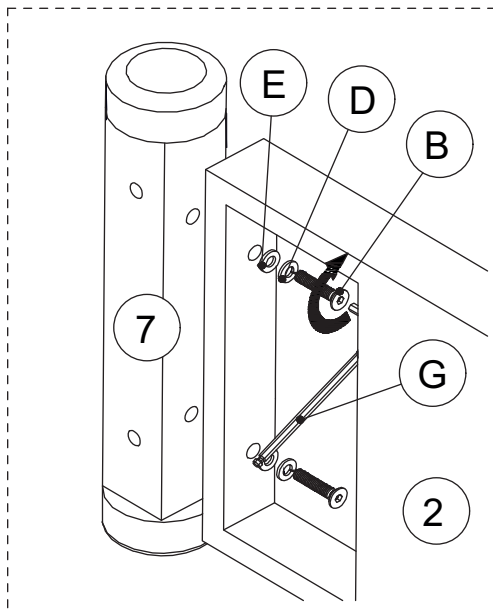


B x 4
D x 4
E x 4

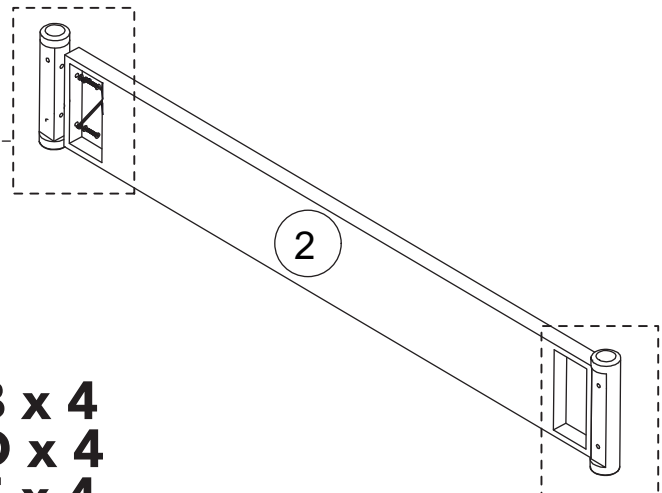


Connect the **Siderail Left & Right (3/4)** to the **Headboard (1)**, use **JCBB M8 x 30mm (A)**, screw in with **Allen Key M5 (H)**. Attach **Bed Legs (7)** to the **Footboard (2)**, use **JCBC M6 x 35mm (B)**, **M6 Spring Washer (D)** and **M6 Flat Washer (E)**, screw with the **Allen Key M4 (G)**.

Reminder: Do Not Fully Tighten all bolts until all parts in place.


3.

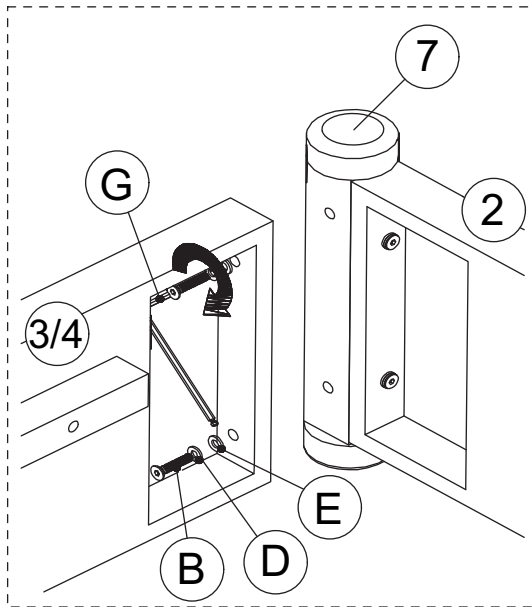


B x 4
D x 4
E x 4

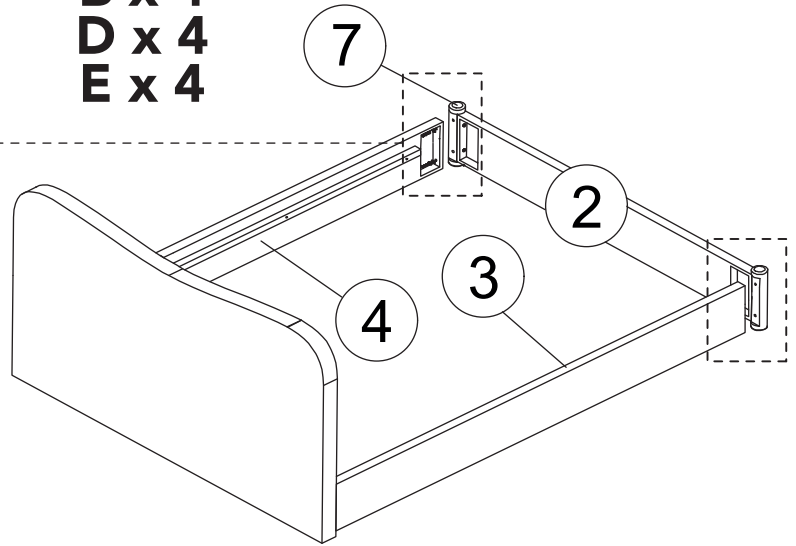

4.

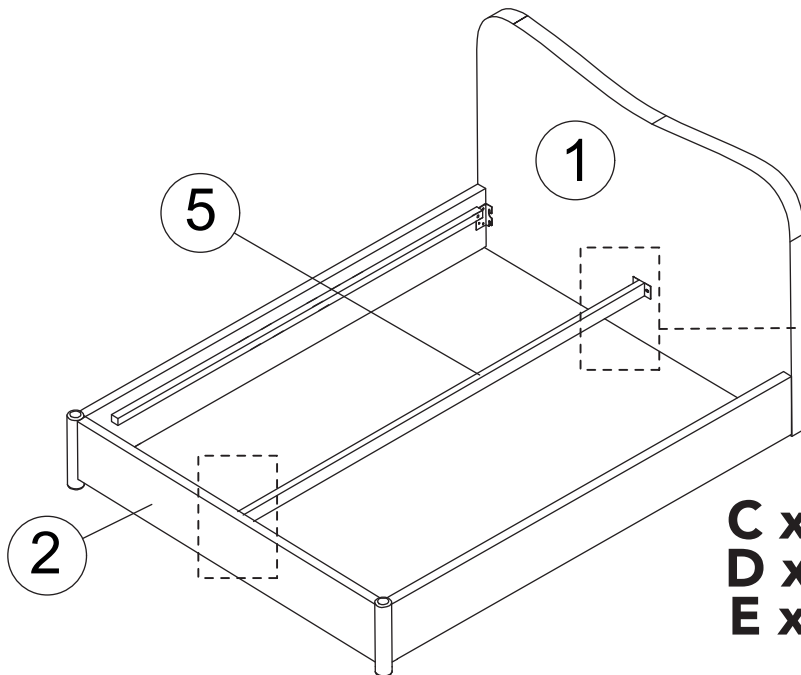

C x 4
D x 4
E x 4



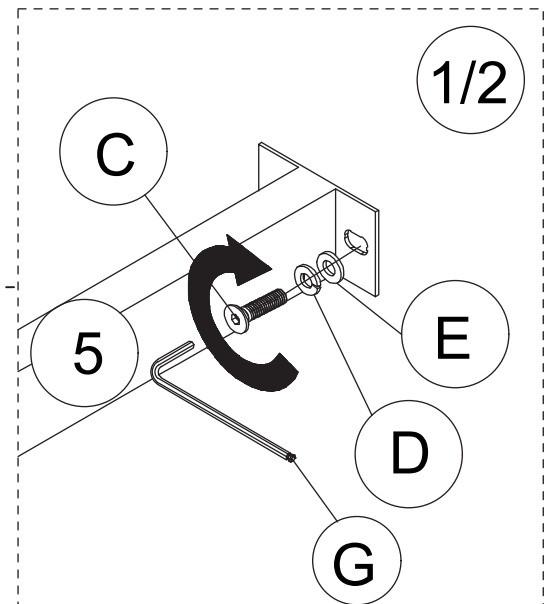


Connect **Footboard (2)** to **Siderail Left & Right (3/4)**, use **JCBB M6 x 35mm (B)**, **M6 Spring Washer (D)** and **M6 Flat Washer (E)**, screw in with **Allen Key M4 (G)**. Install **Metal Center Rail (5)** between the **Headboard (1)** and **Footboard (2)**, use **JCBC M6 x 25mm (C)**, **M6 Spring Washer (D)** and **M6 Flat Washer (E)**, screw in with **Allen Key M4 (G)**.

Reminder: Do Not Fully Tighten all bolts until all parts in place.

5.

A x 34

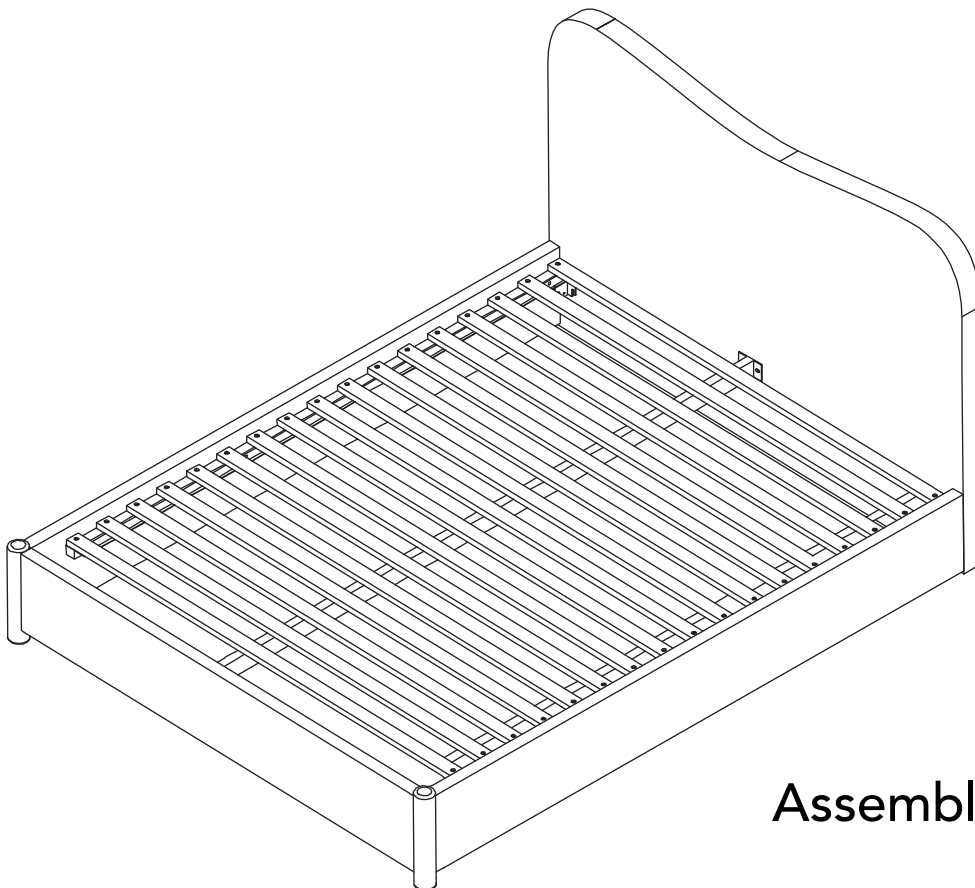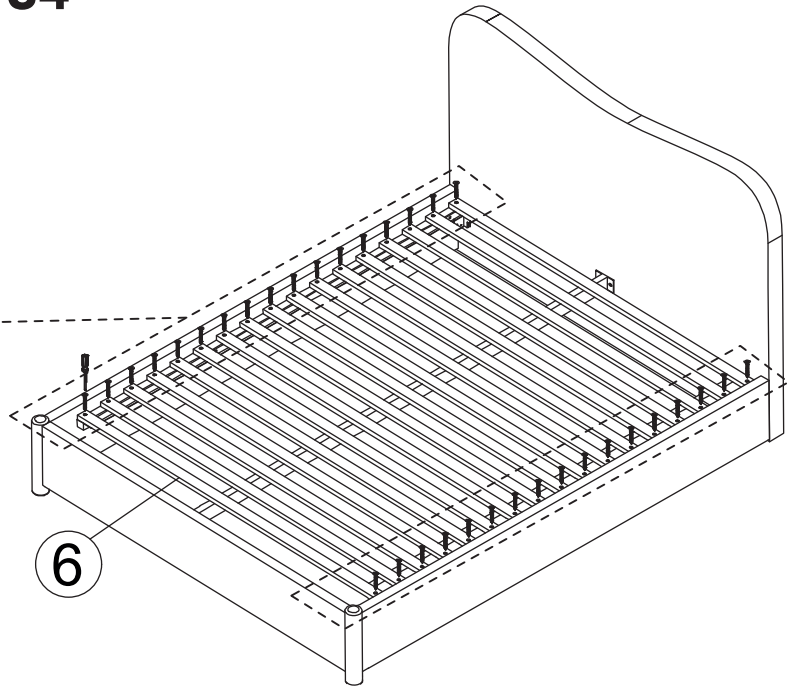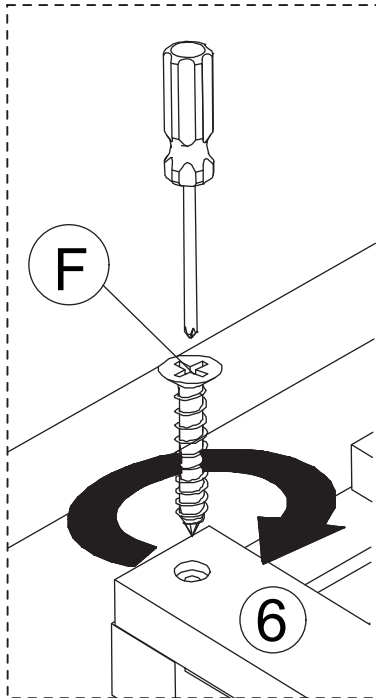

Assembled Completed

Place the **Slats (4)** on the bed frame. Secure each slat with **CSK M4 x 38mm (F)**.

Reminder: Please ensure all bolts and screw are tightened and secure before you use it.