


- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at customercare@b2cfurniture.com.au We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!




## SYDNEY Queen Bed

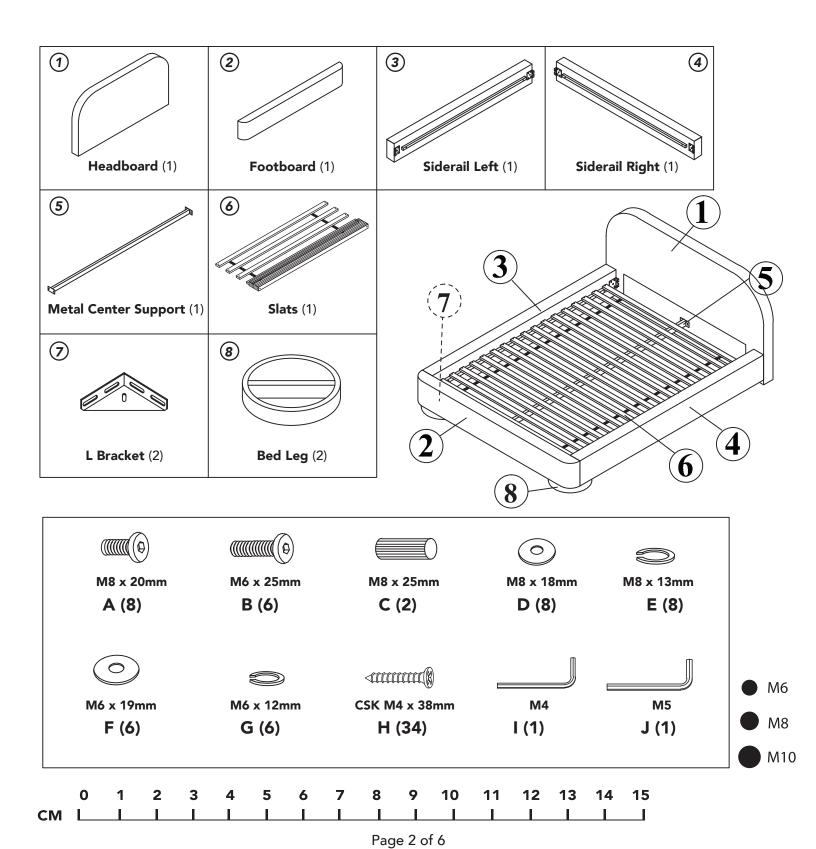




1.

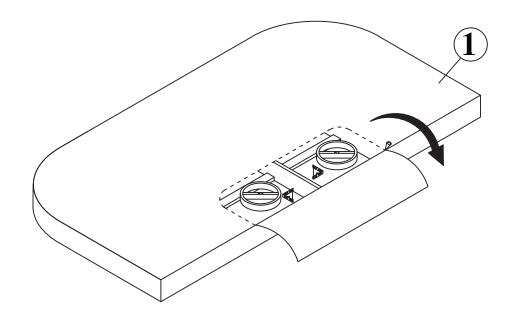

**2**.

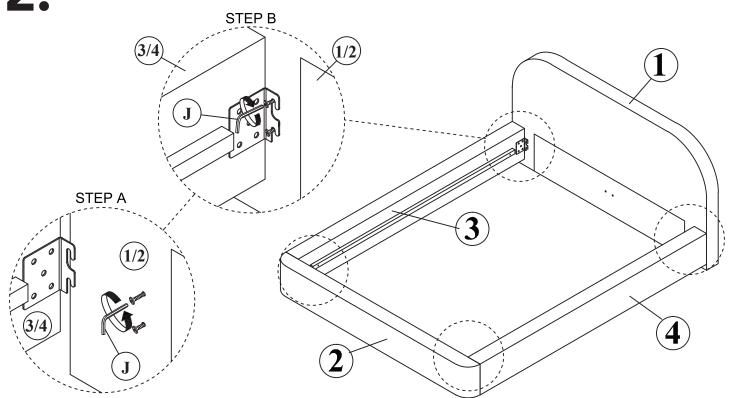


Upzip the black non woven fabric on the back of headboard and take out all the parts.


Attention: Zip the black non woven fabric after take out the parts.


Use the Allen Key M5 (J) to turn loose all the JCBB Bolt prefix at Headboard (1) & Footboard (2) and don't pull out. Hang the Siderail Left & Right (3 & 4) to Headboard (1) & Footboard (2). Tigthen then after assembly the Siderails.



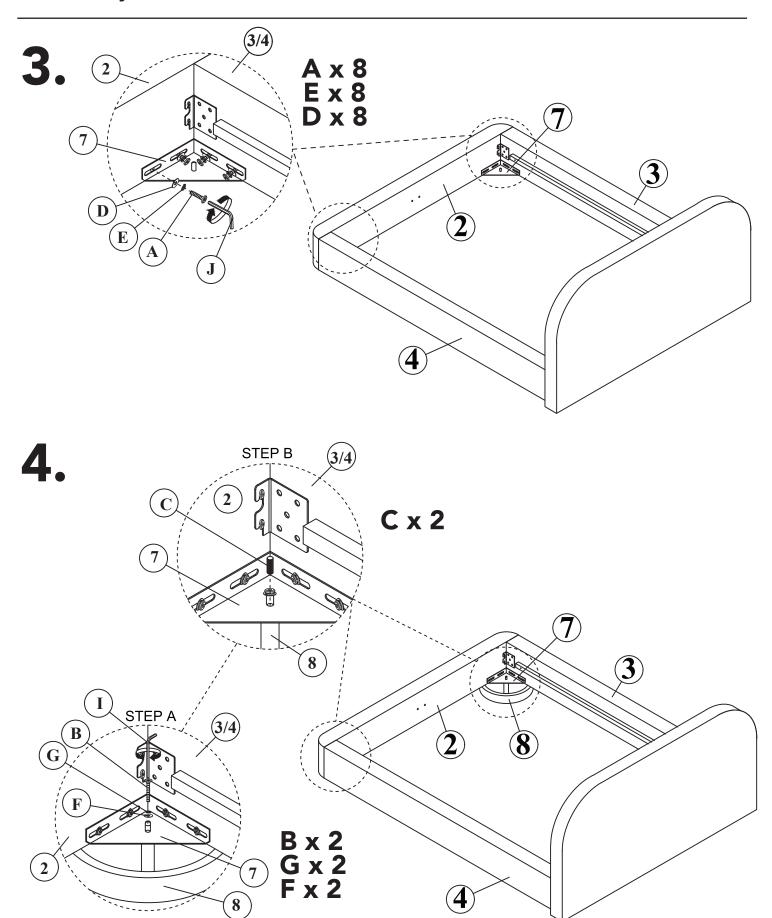



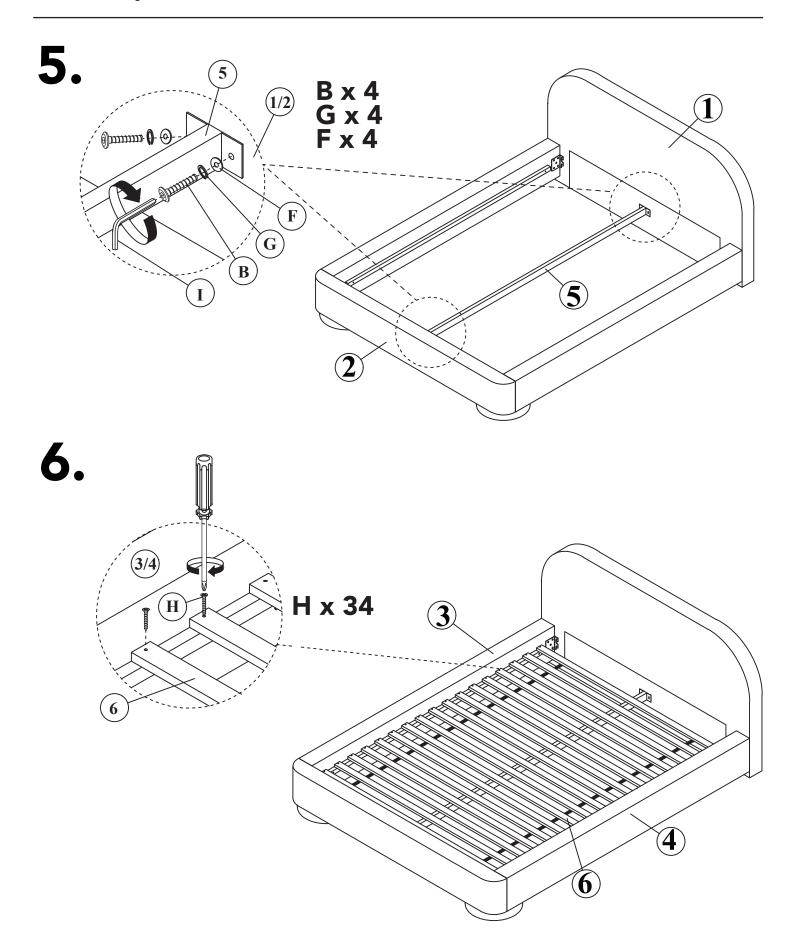

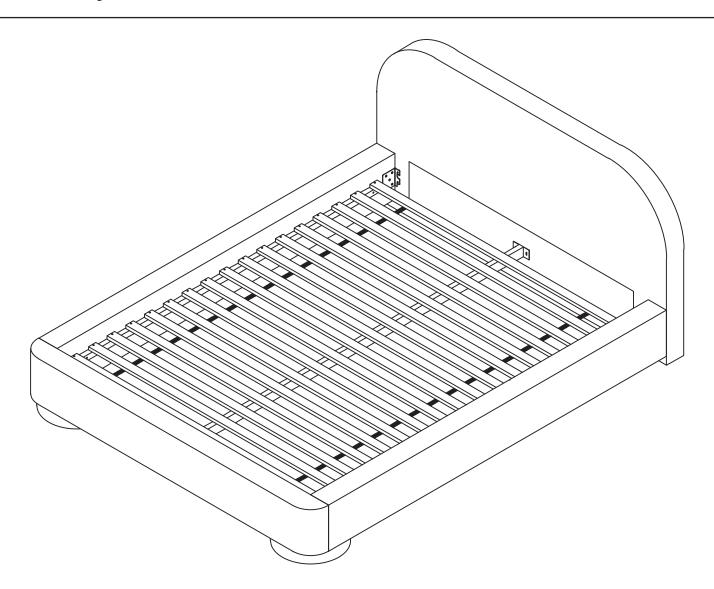

**Assembled Completed**