



MYER

King Single Bed /
Single Bed

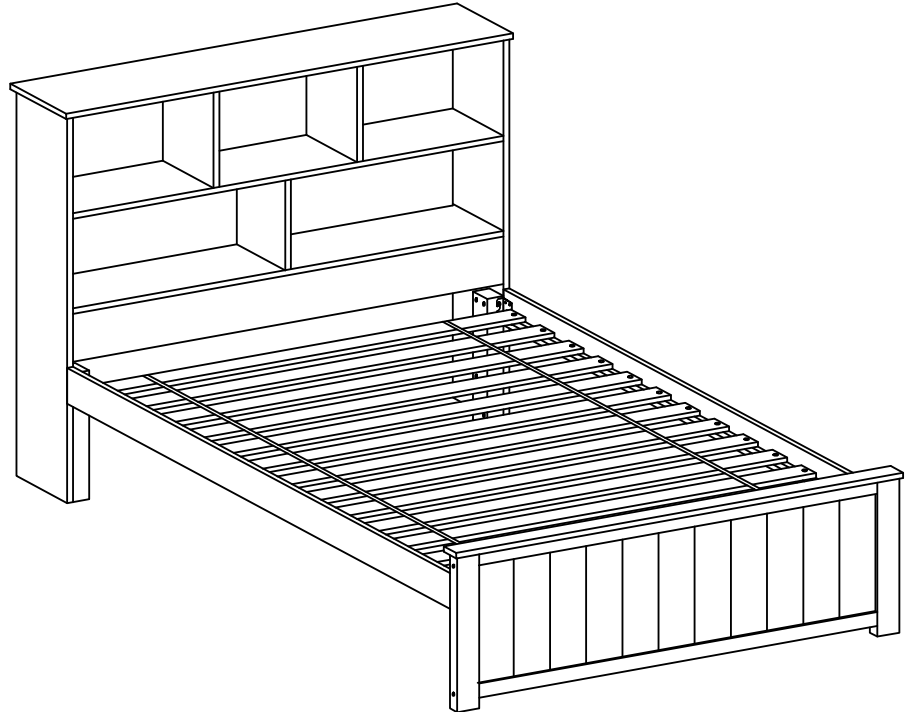










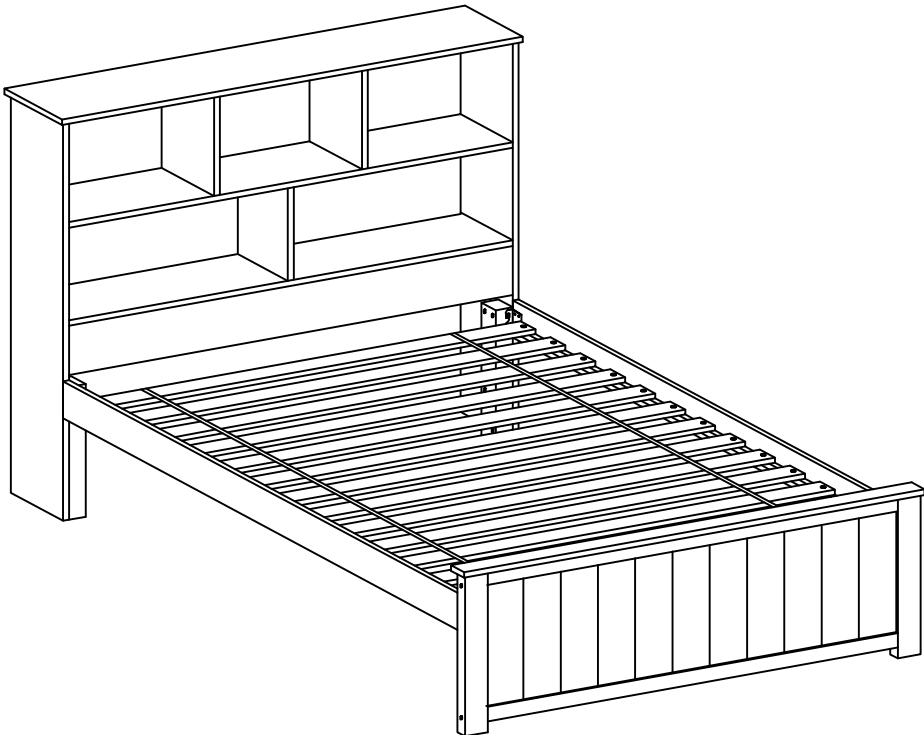

- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at customercare@b2cfurniture.com.au We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!

MYER King Single Bed / Single Bed









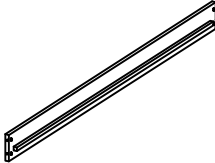



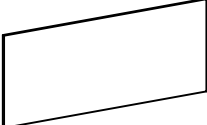







- M6
- M8
- M10

				
Minifix Bolt	Minifix Cam	M10 x 30mm	M3.5 x 16mm	M4 x 32mm
1(22)	2(22)	3(15)	4(12)	5(47)
				
M5 Allen Key	M4 Allen Key	M6 x 100mm	M6 x 13mm	M8 x 40mm
6(1)	7(1)	8(4)	9(4)	10(4)




MYER King Single Bed / Single Bed

<div>1</div> <div></div> <div>A(1)</div>	<div>2</div> <div></div> <div>B(1)</div>	<div>3</div> <div></div> <div>C(1)</div>	<div>4</div> <div></div> <div>D(1)</div>	<div>5</div> <div></div> <div>E(1)</div>
<div>6</div> <div></div> <div>F(1)</div>	<div>7</div> <div></div> <div>G(3)</div>	<div>8</div> <div></div> <div>H(1)</div>	<div>9</div> <div></div> <div>I(2)</div>	<div>10</div> <div></div> <div>J(1)</div>
<div>11</div> <div></div> <div>K(1)</div>	<div>12</div> <div></div> <div>L(1)</div>	<div>13</div> <div></div> <div>M(1)</div>	<div>14</div> <div></div> <div>N(1)</div>	<div>15</div> <div></div> <div>O(1)</div>
<div>16</div> <div></div> <div>P(1)</div>	<div>17</div> <div></div> <div>Q(1)</div>			




1.

Please make sure the minifix bolt in straight position and screw until flat with wood panel.

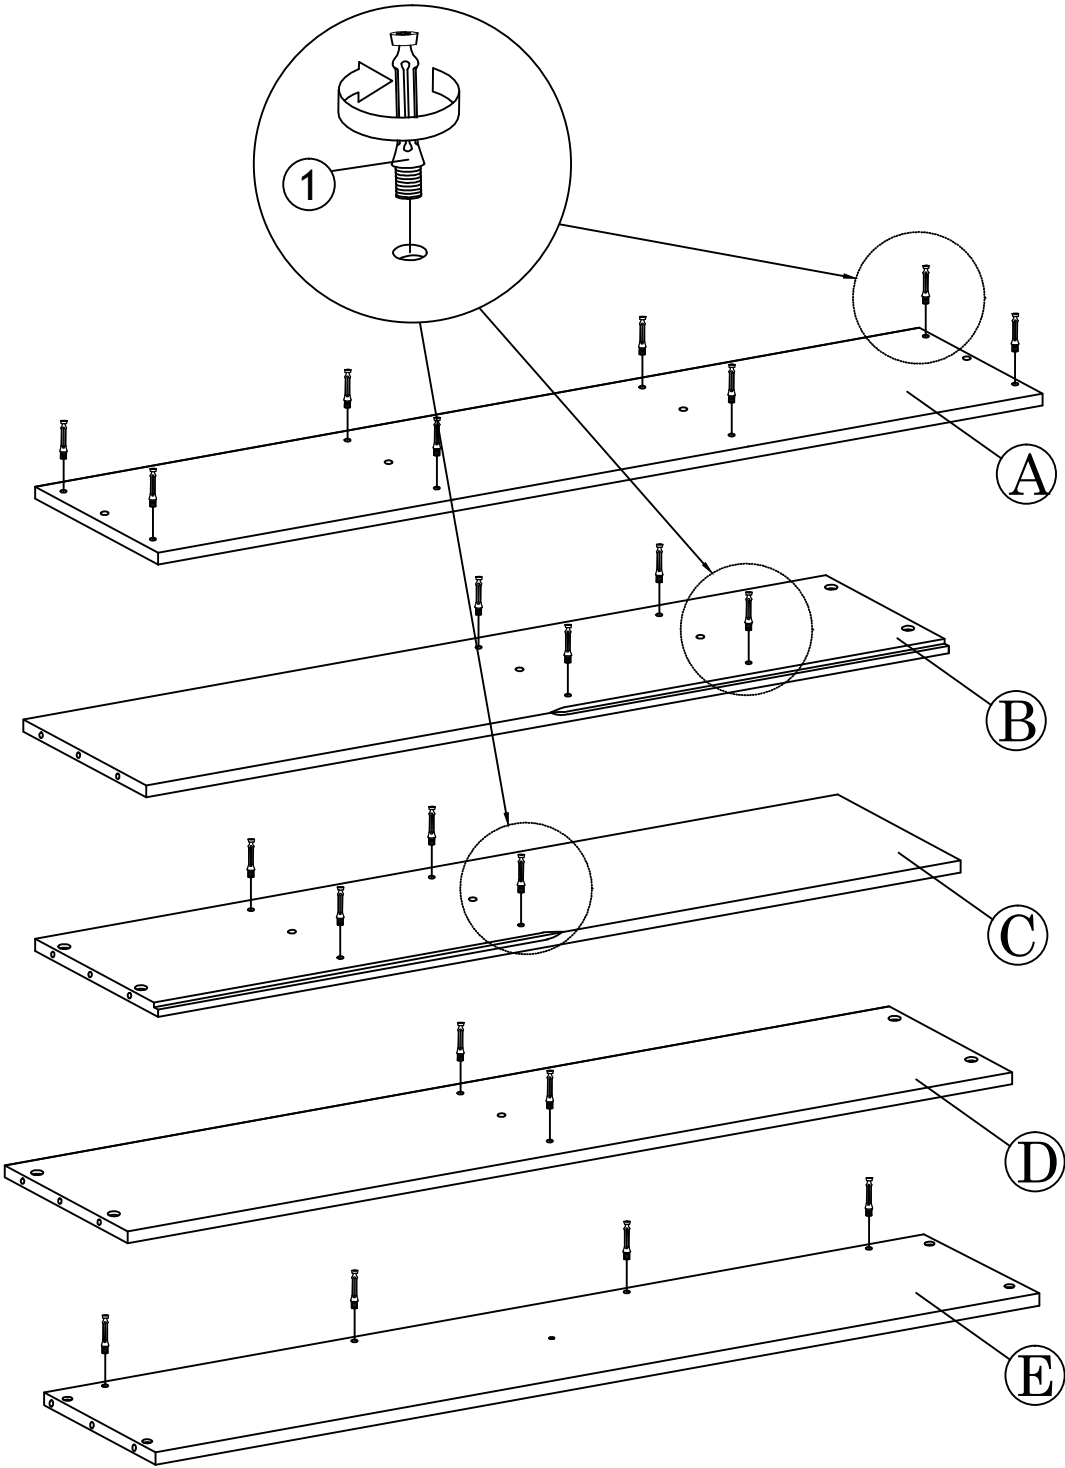


2.


ALL OF THE DOWEL MUST BE INSIDE 18-20MM

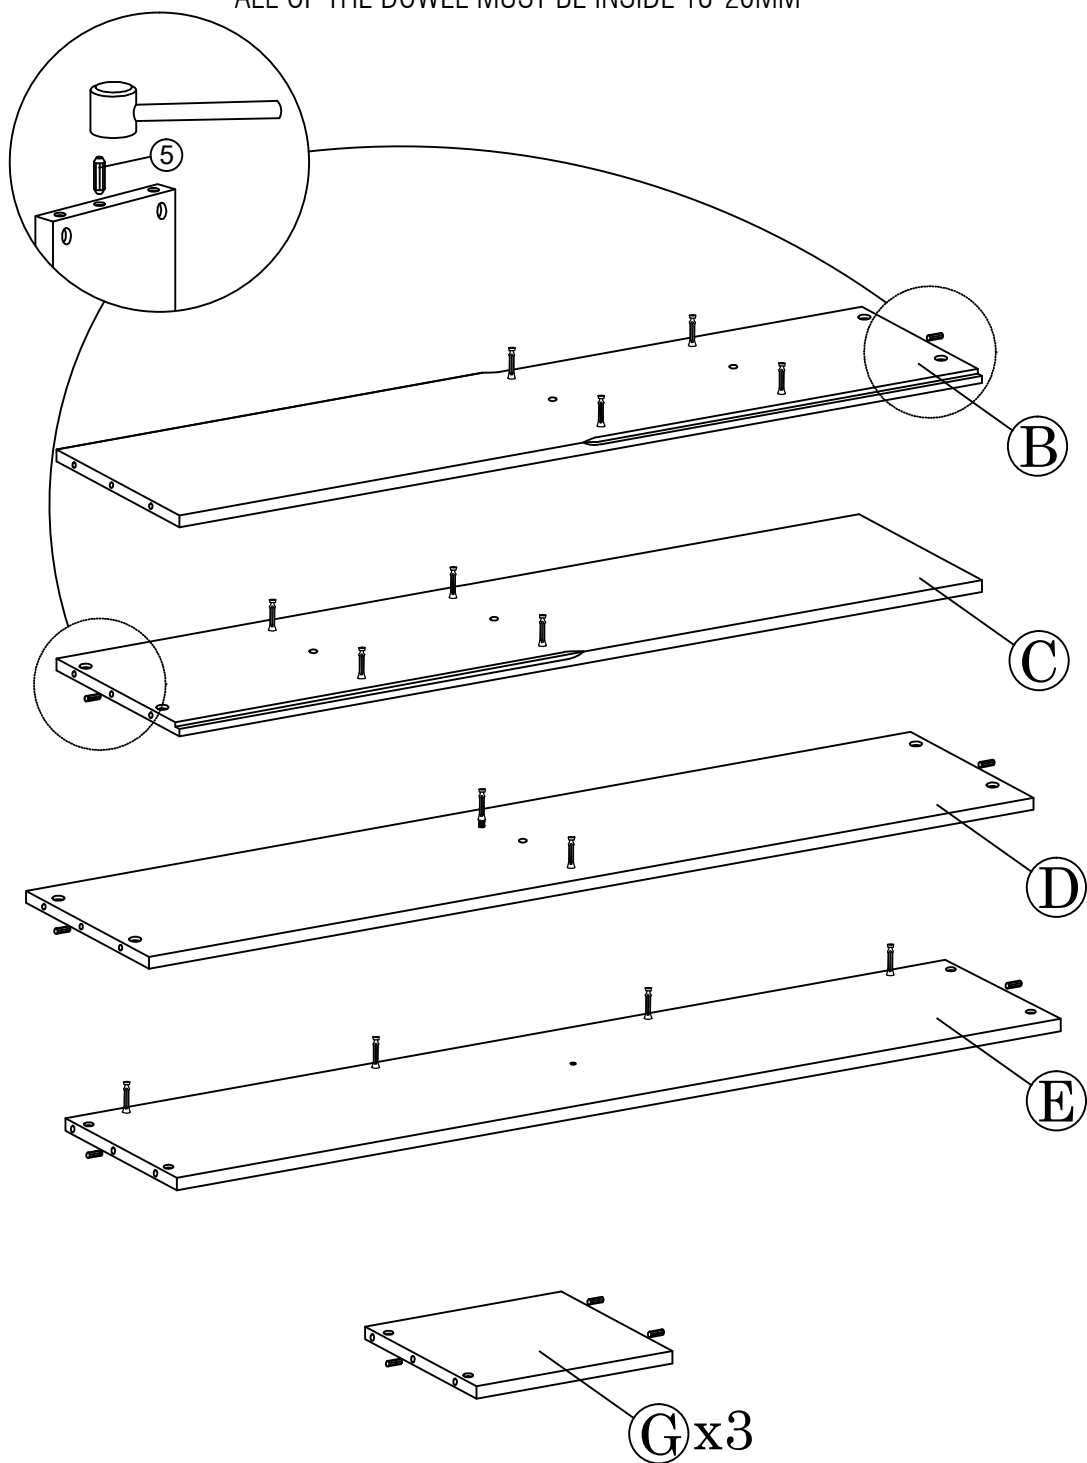


3.

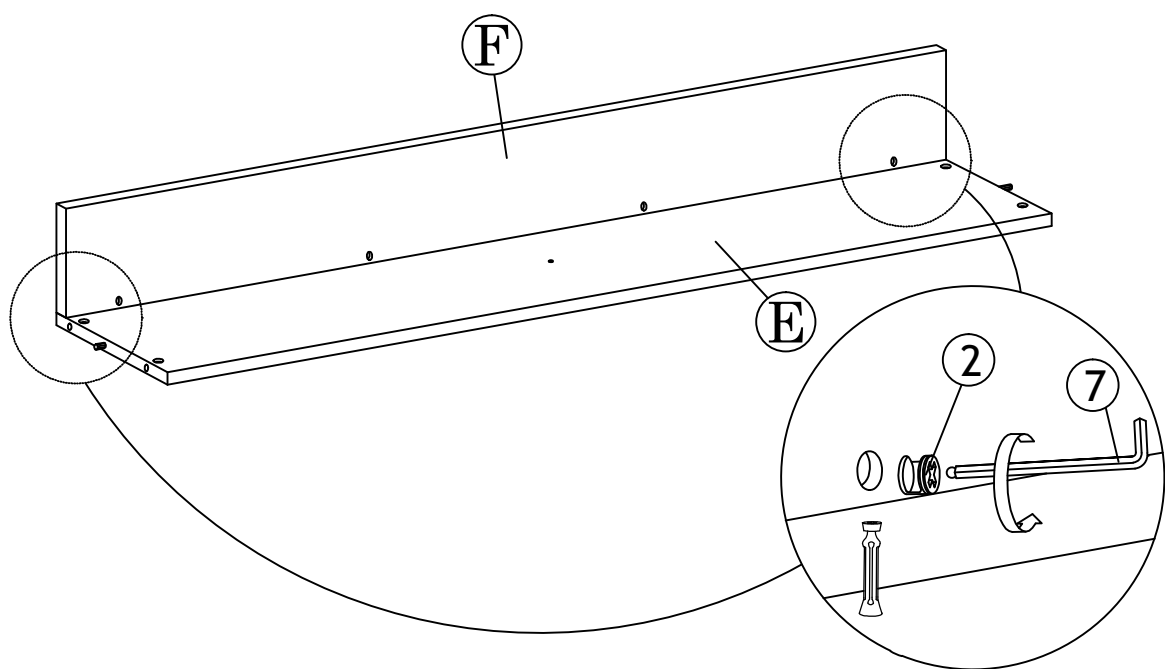


4.

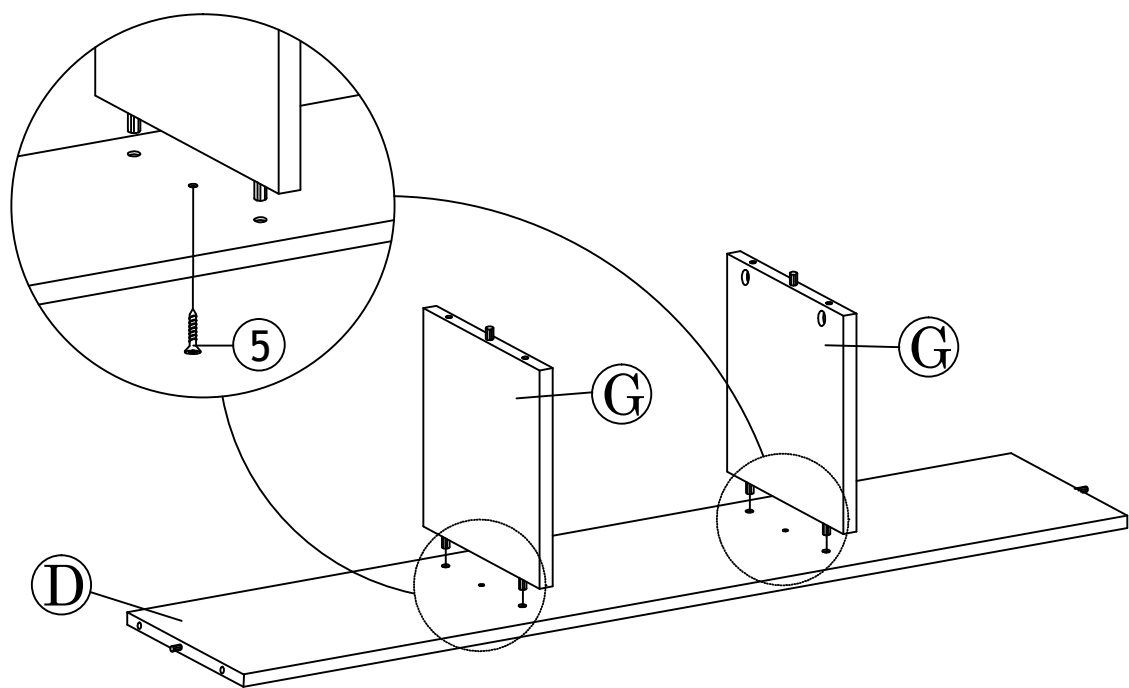

5.

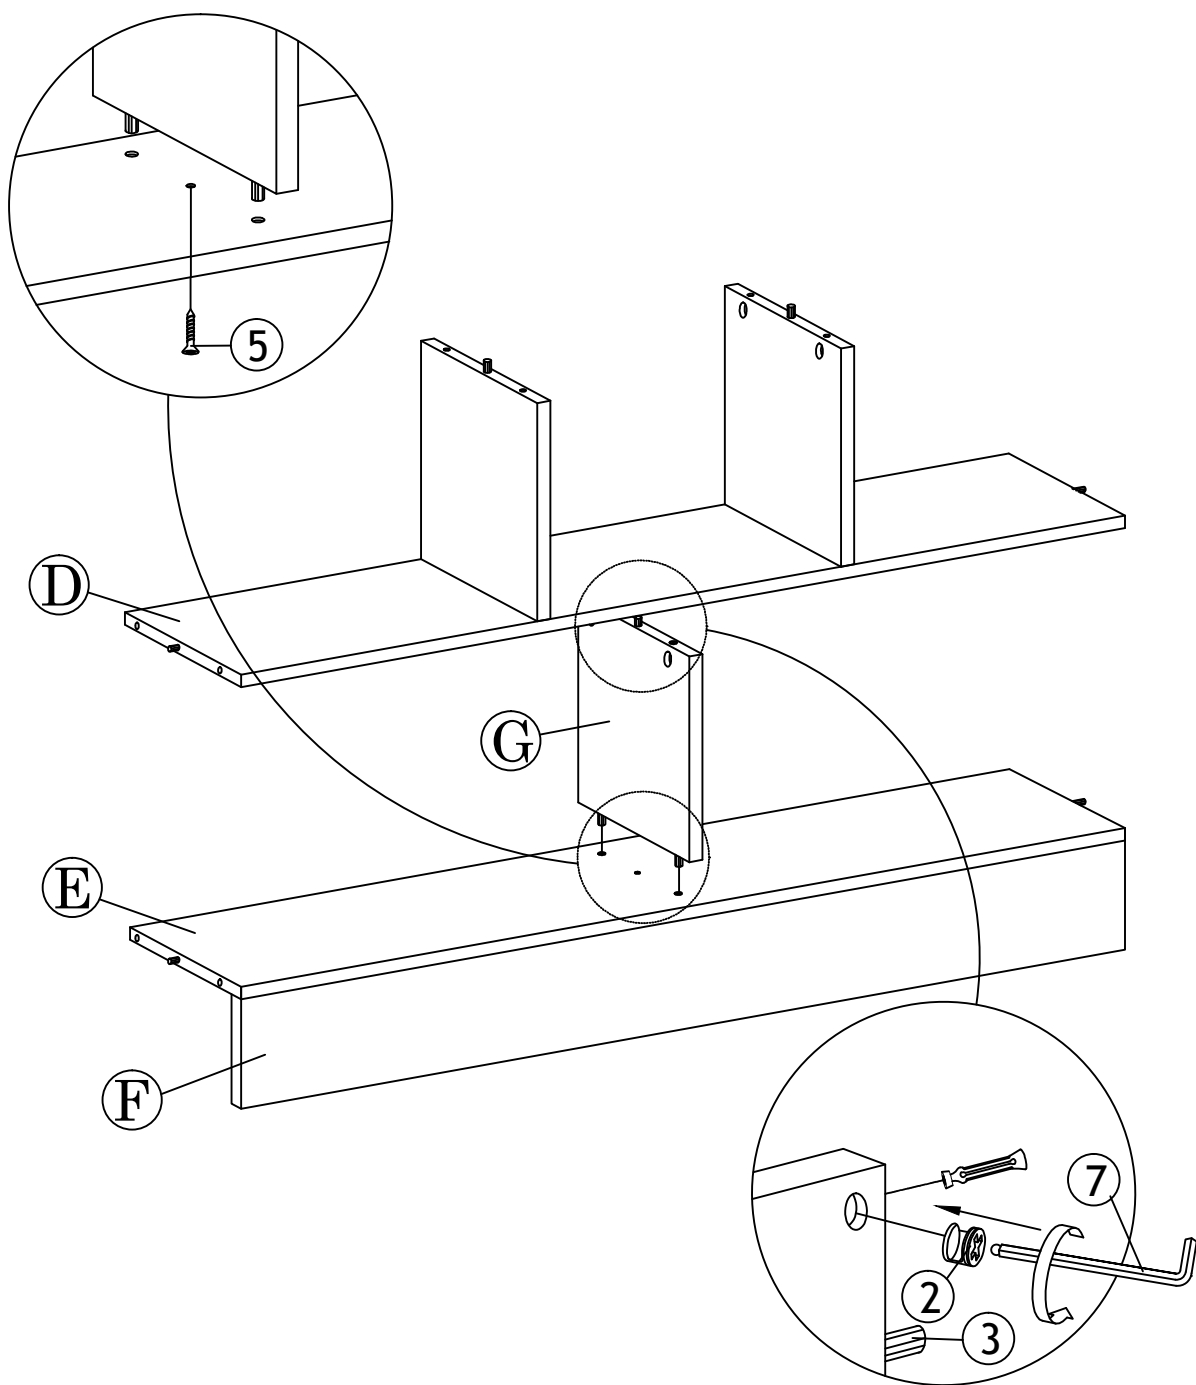


6.

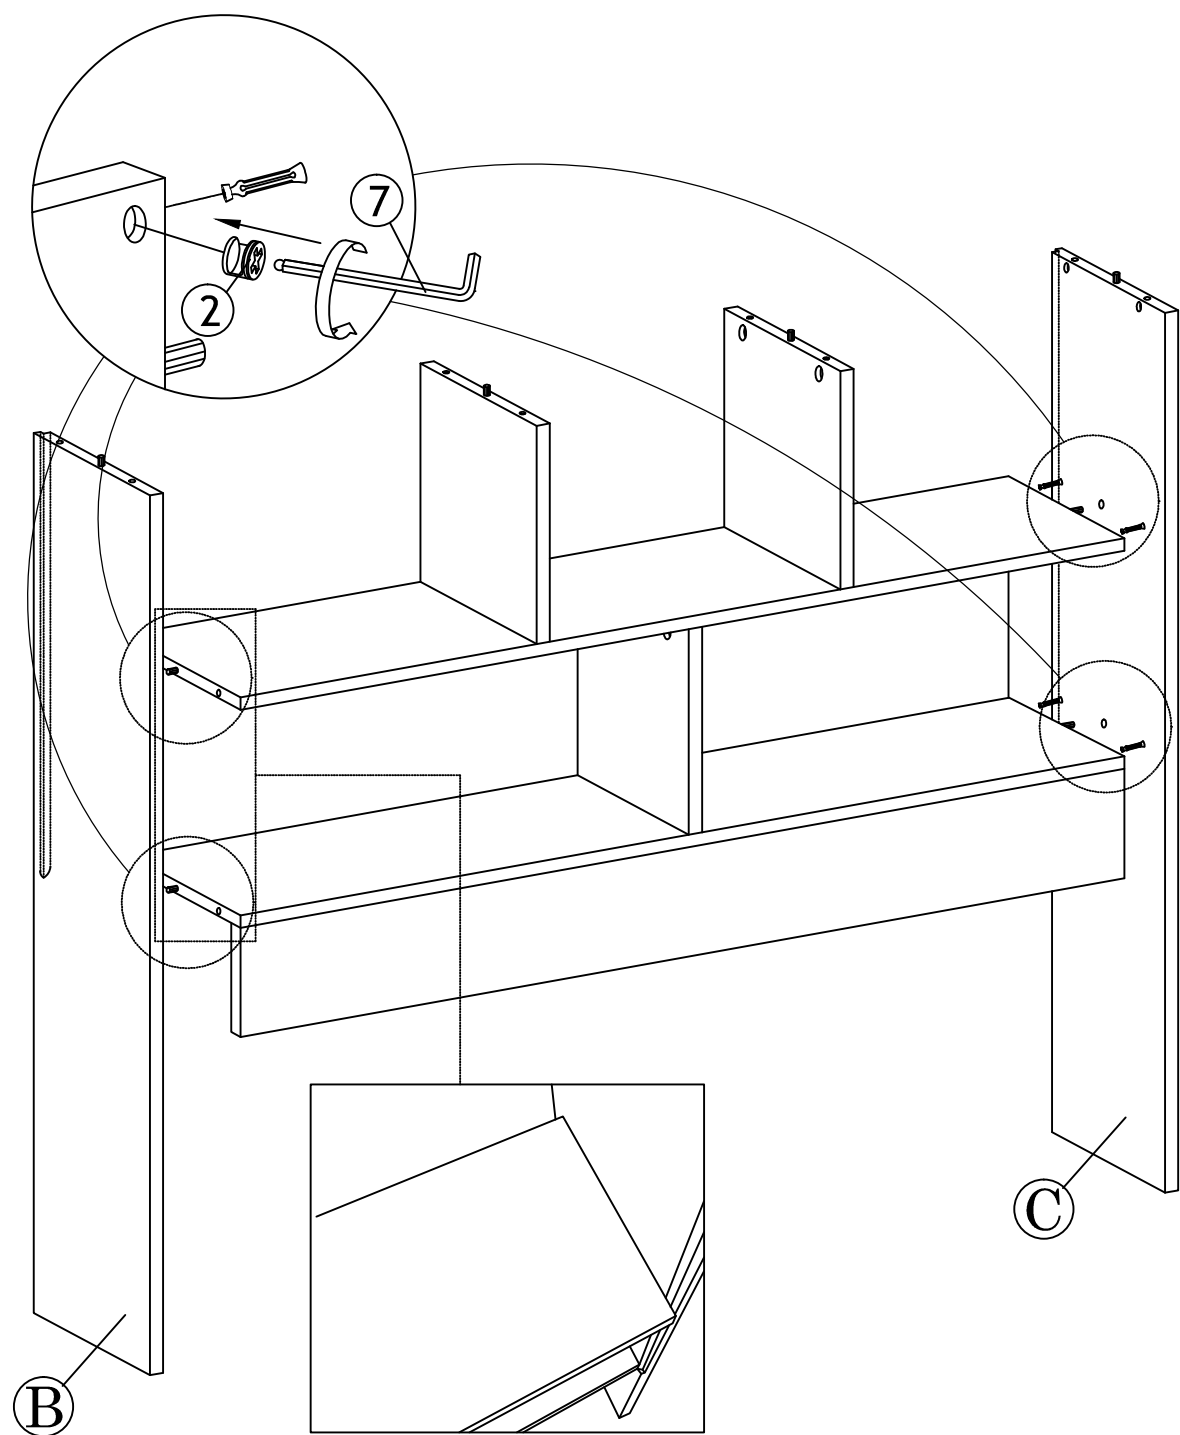


*If it is installed incorrectly, the board will come out.


7.

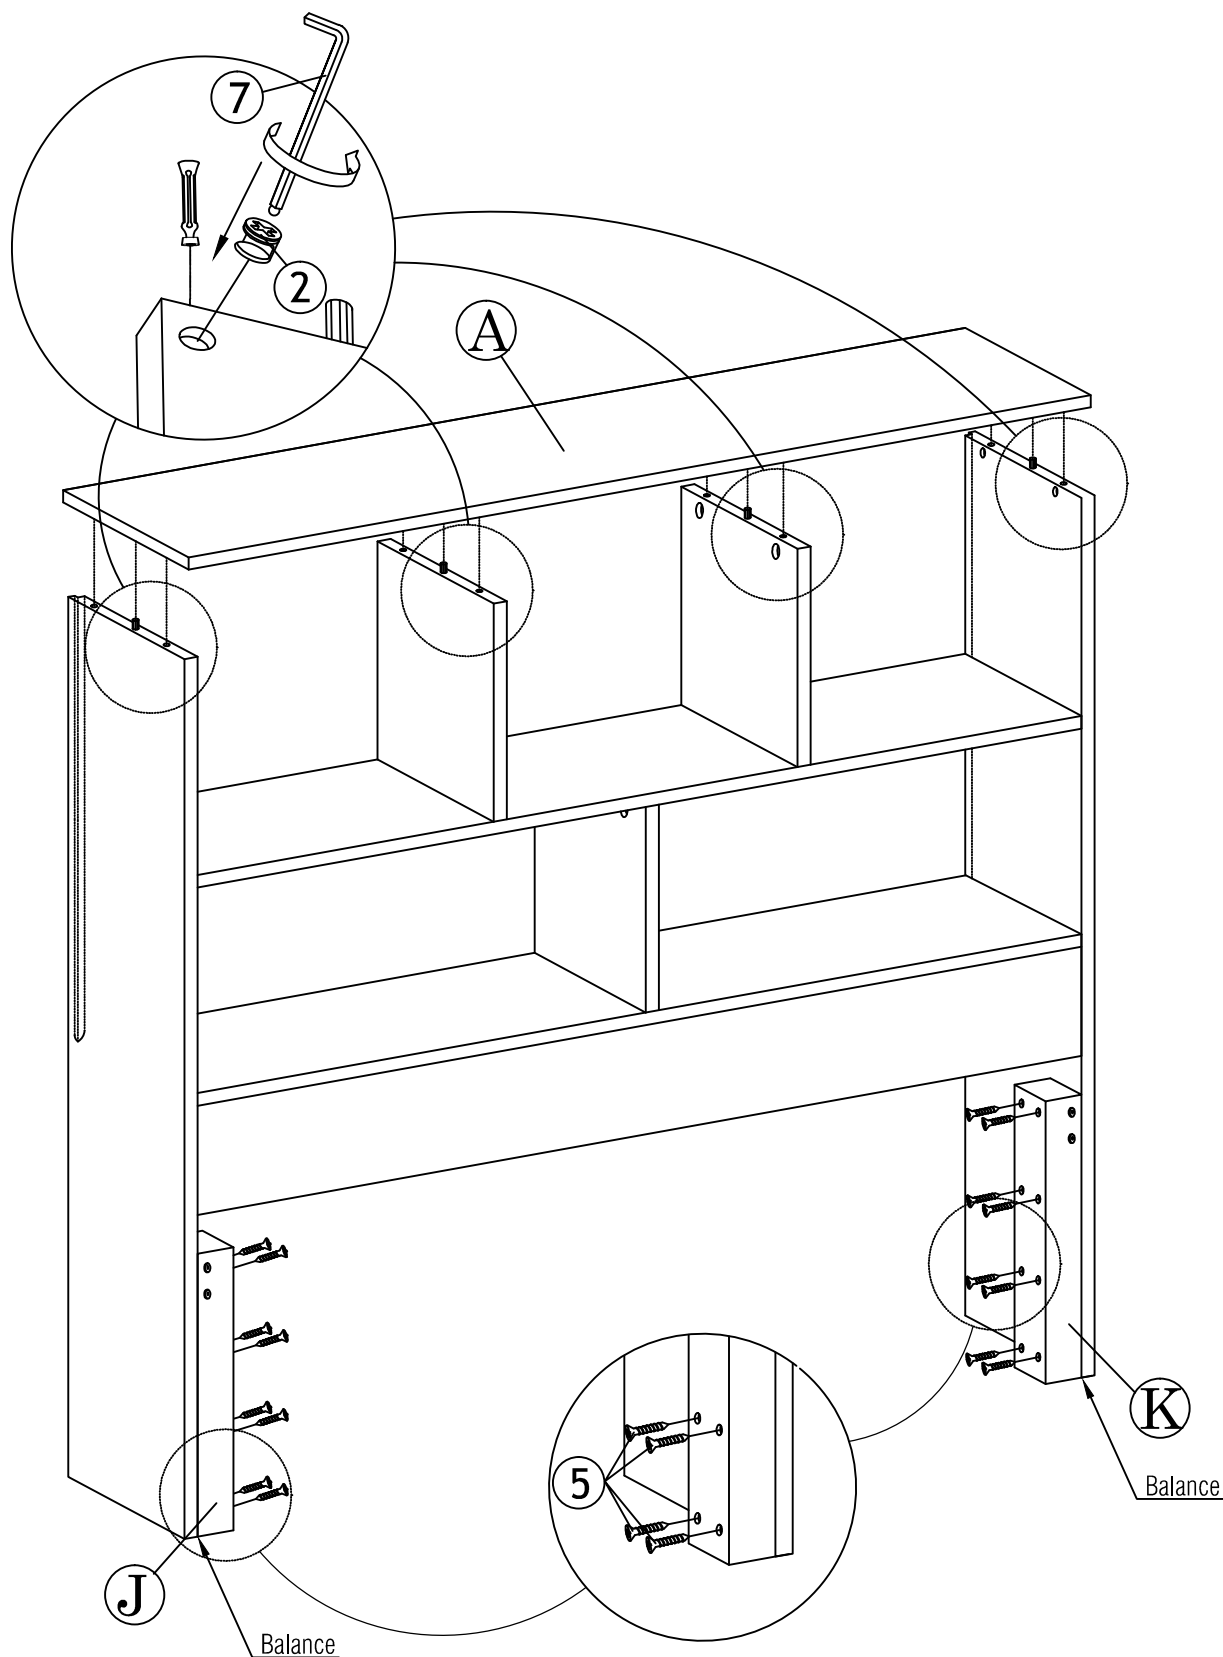


8.

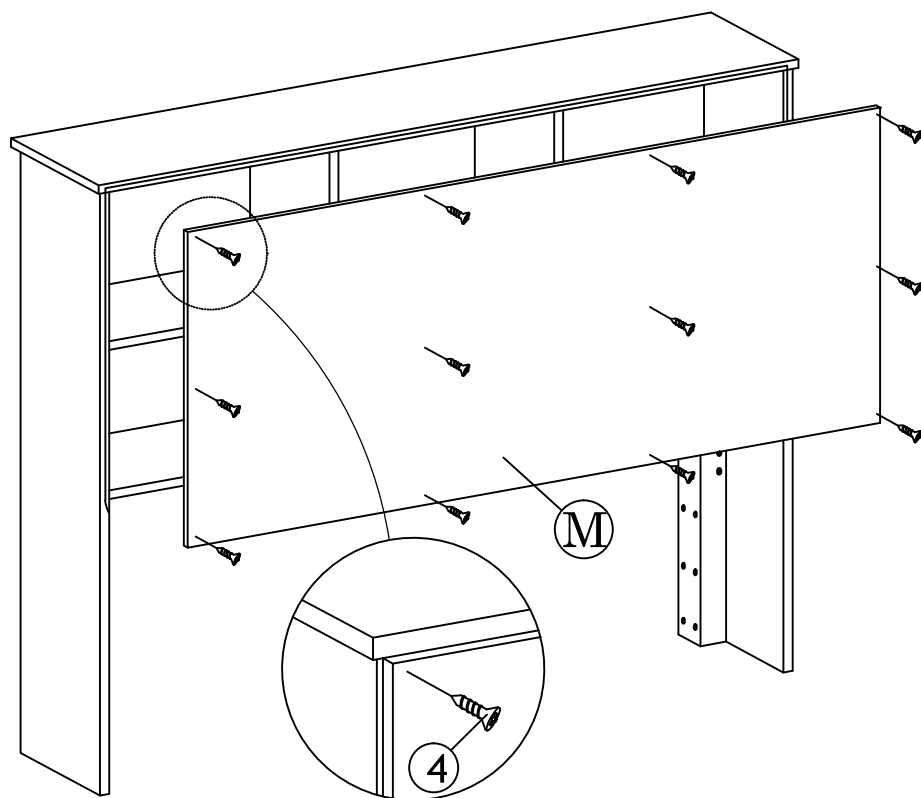


9.

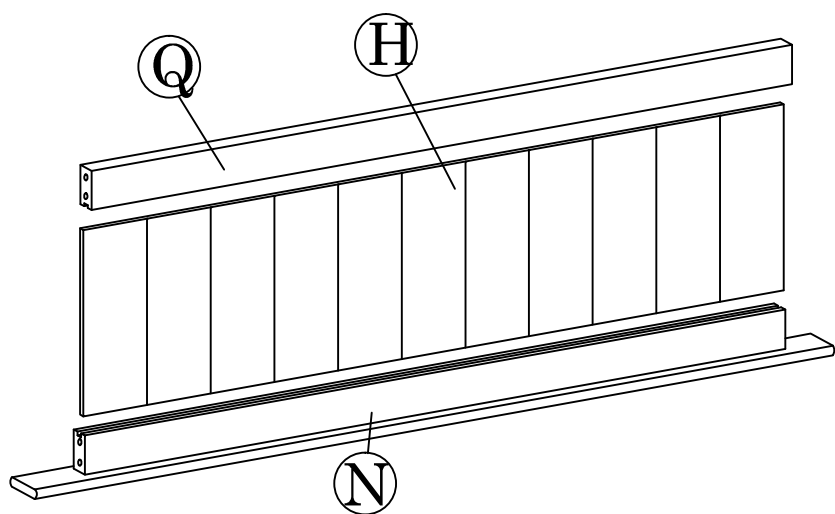


10.

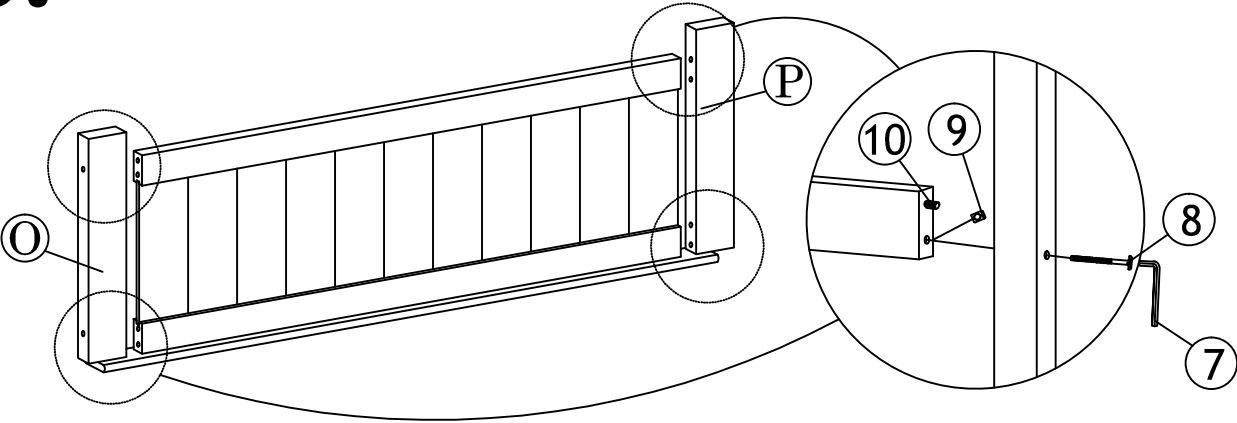


11.

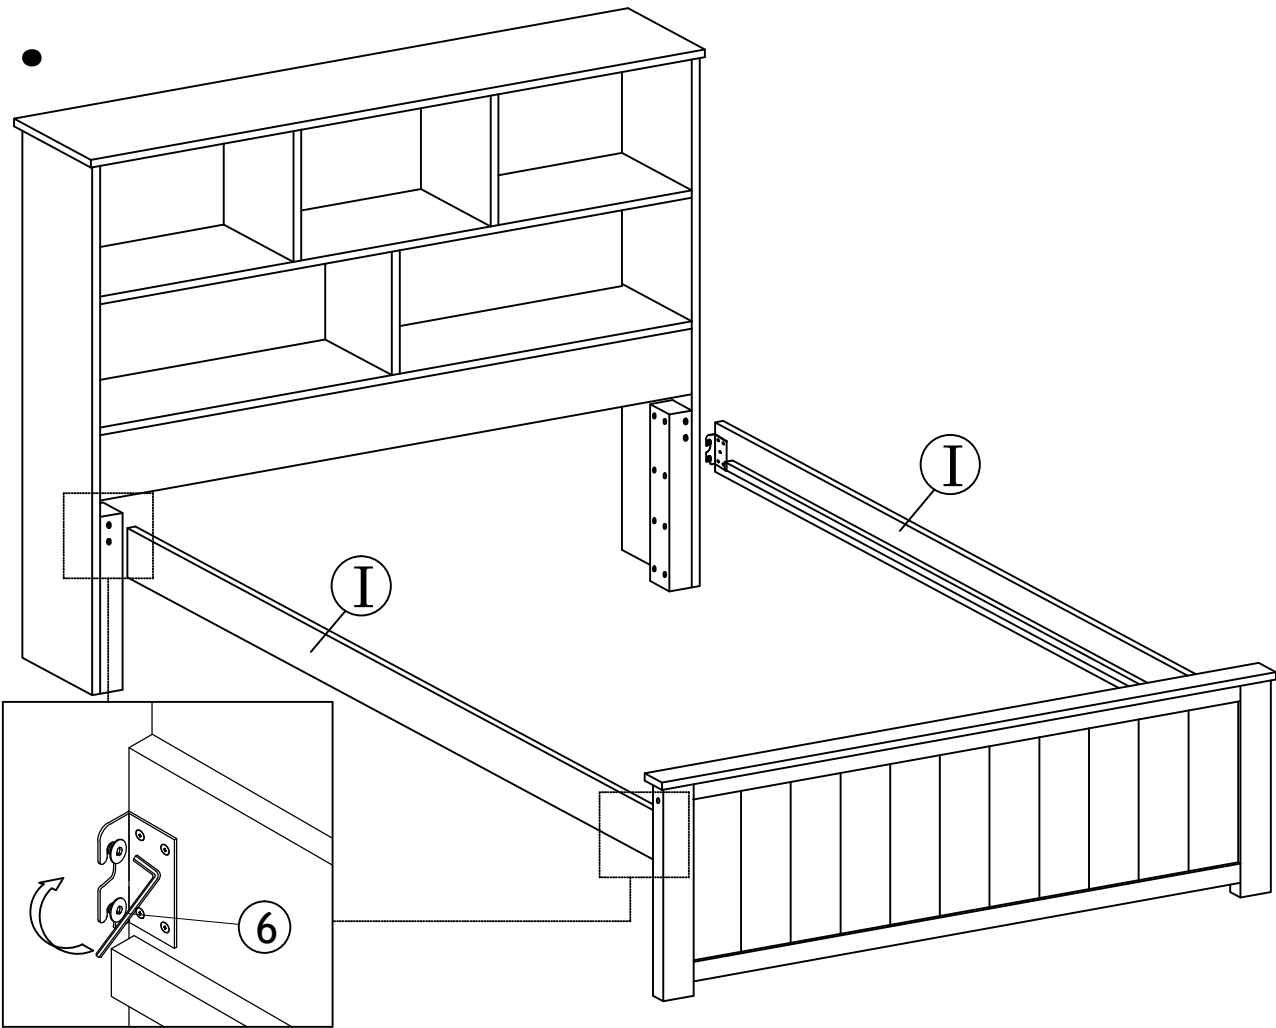

12.

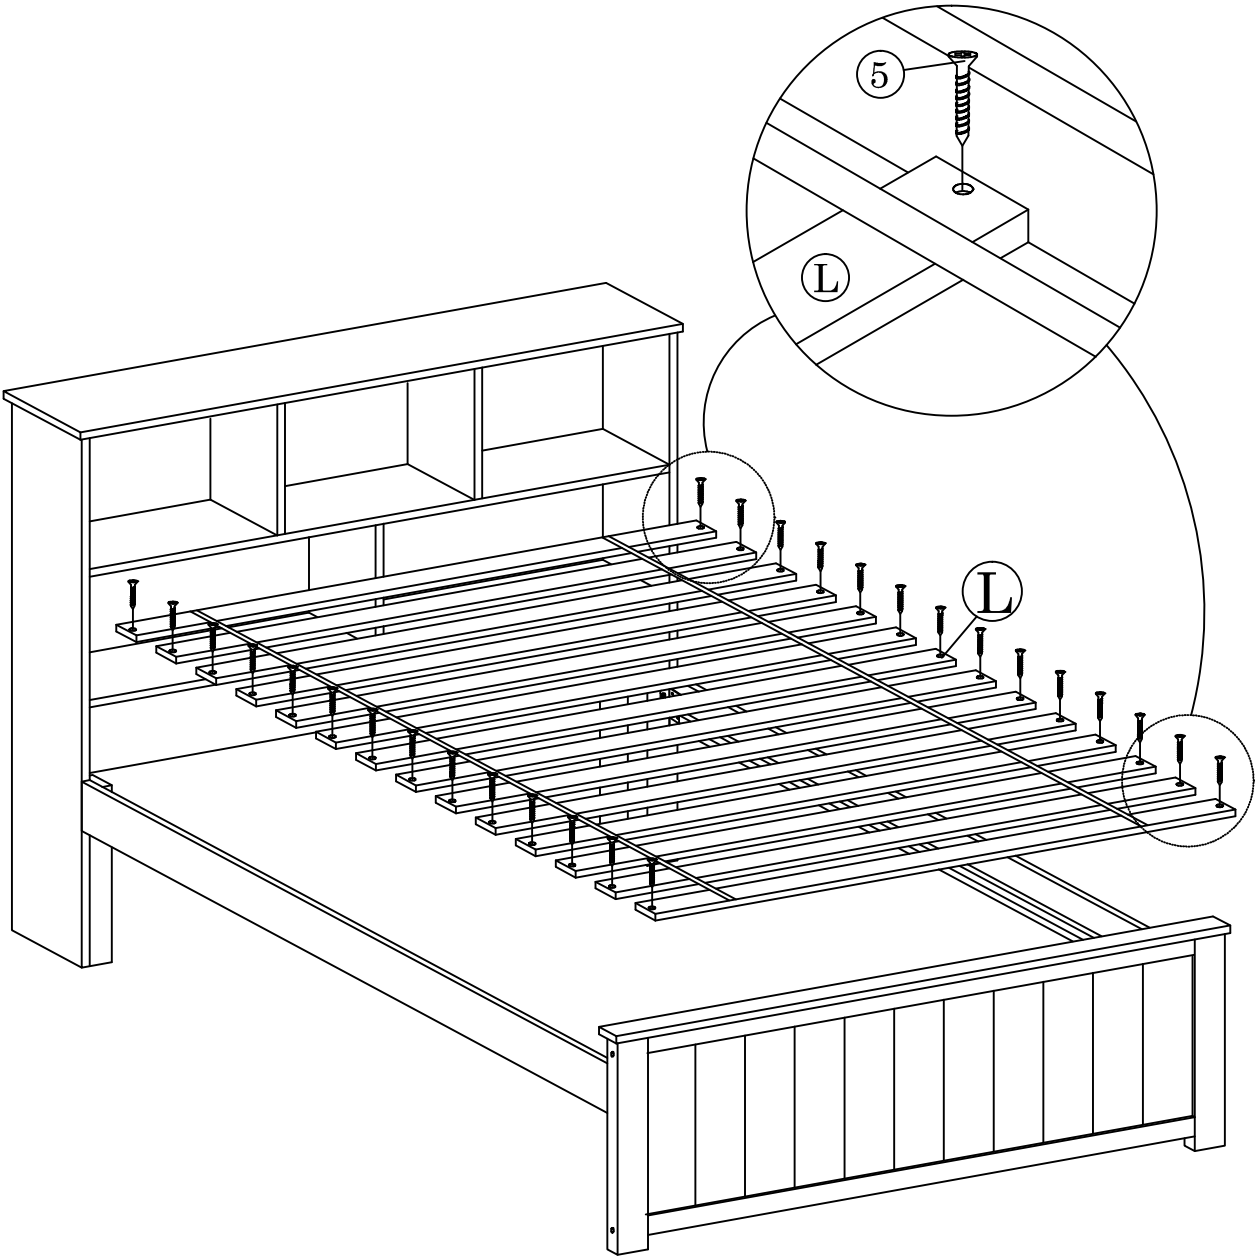

13.

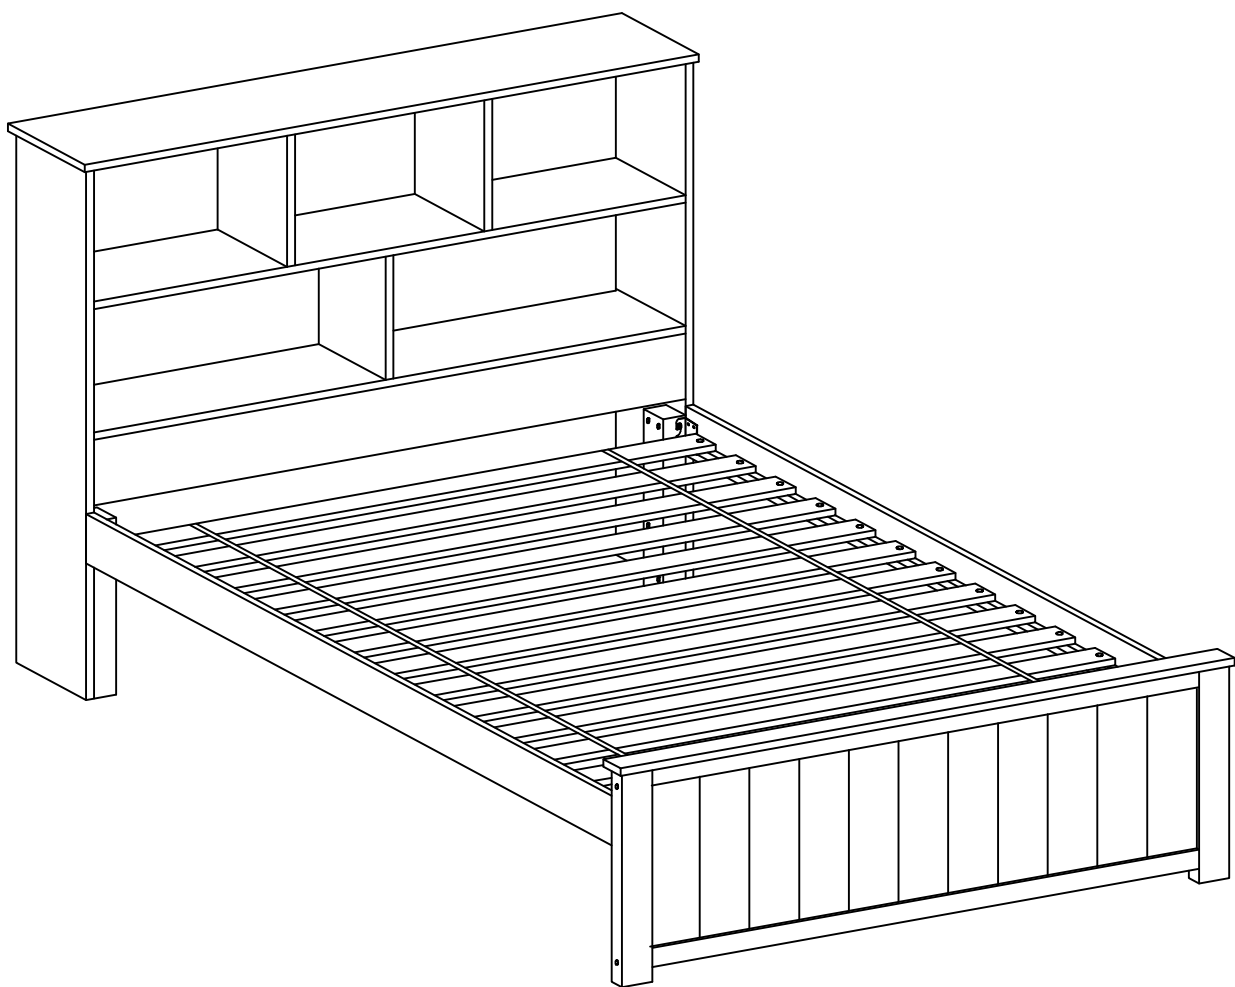

Completed bunk set up