


ELM



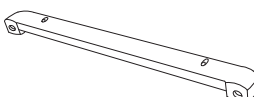
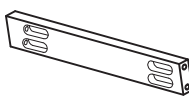
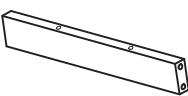
Hardwood Dining Chair

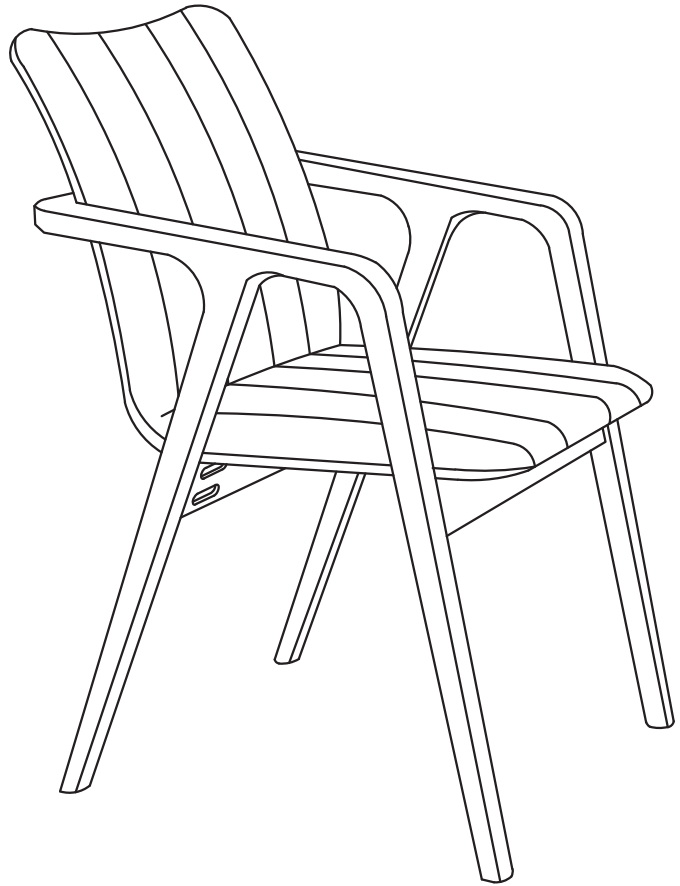








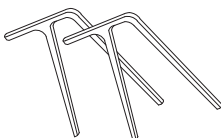


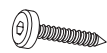
- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at customercare@b2cfurniture.com.au We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!

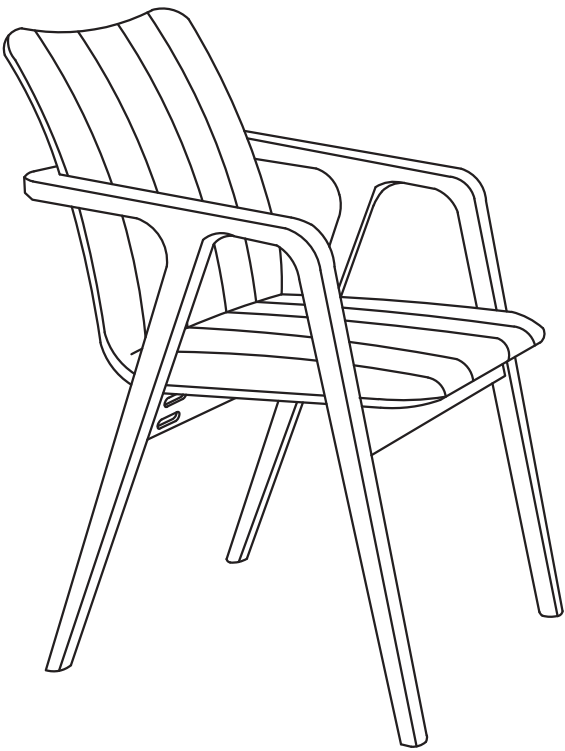ELM

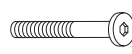
Hardwood Dining Chair
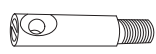
<div>1</div>  <div>Leg Right & Left (2)</div>	<div>2</div>  <div>Cushion Seat (1)</div>
<div>3</div>  <div>Back Support (1)</div>	<div>4</div>  <div>Back Apron (1)</div>
<div>5</div>  <div>Front Apron (1)</div>	




 <div>A. JCBC BOLT M6 X 45 mm (8)</div>	 <div>B. Spring Washer M6 X 13 (8)</div>	 <div>C. Barrel Nut Short (2)</div>	 <div>D. Barrel Nut* Long (2)</div>	 <div>E. Barrel NutLock (2)</div>
 <div>F. Pan Head M4 x 32 mm (4)</div>	 <div>G. Allen Key M4 Long (1)</div>	 <div>H. Allen Key M5 (1)</div>	 <div>I. Wood Dowel M8 x 20 (2)</div>	 <div>J. JCBC W M7 X 32 mm (2)</div>


M6
 M8
 M10



1.

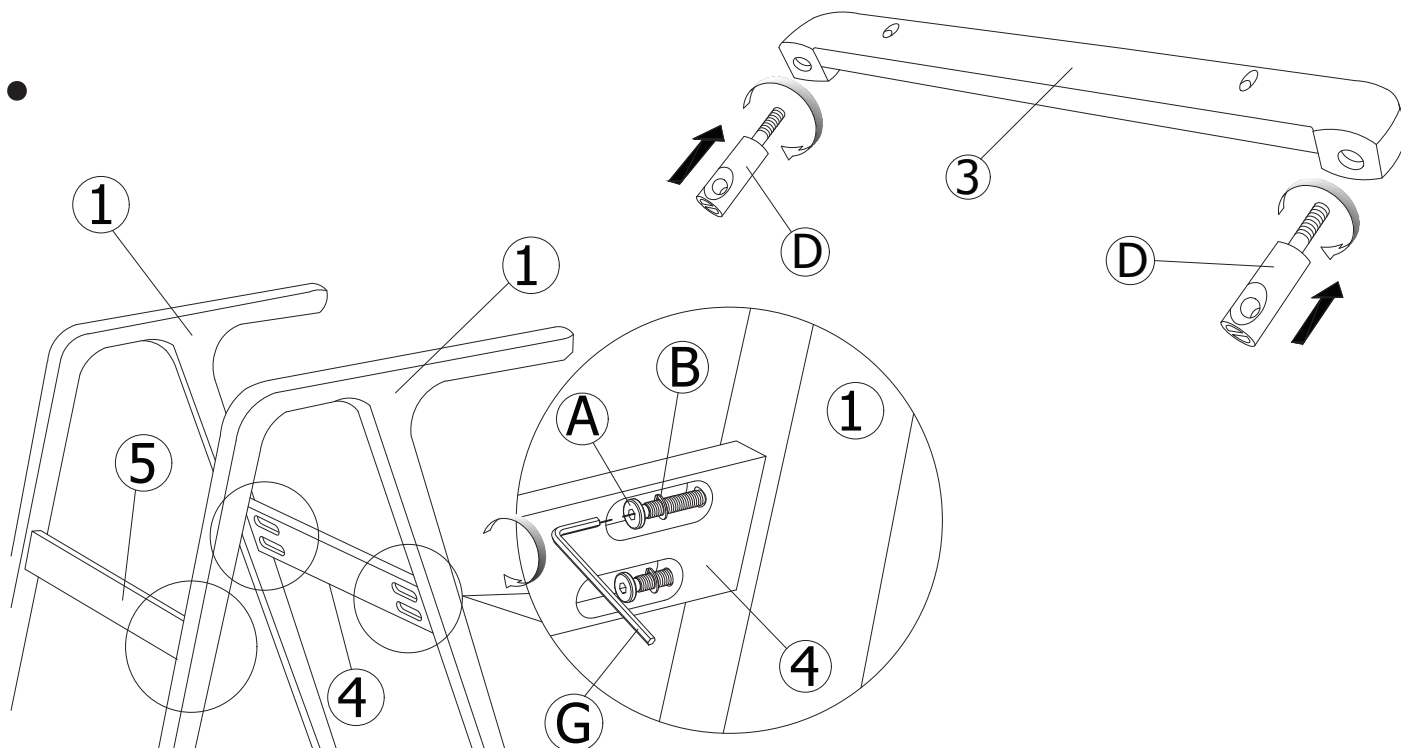


2.

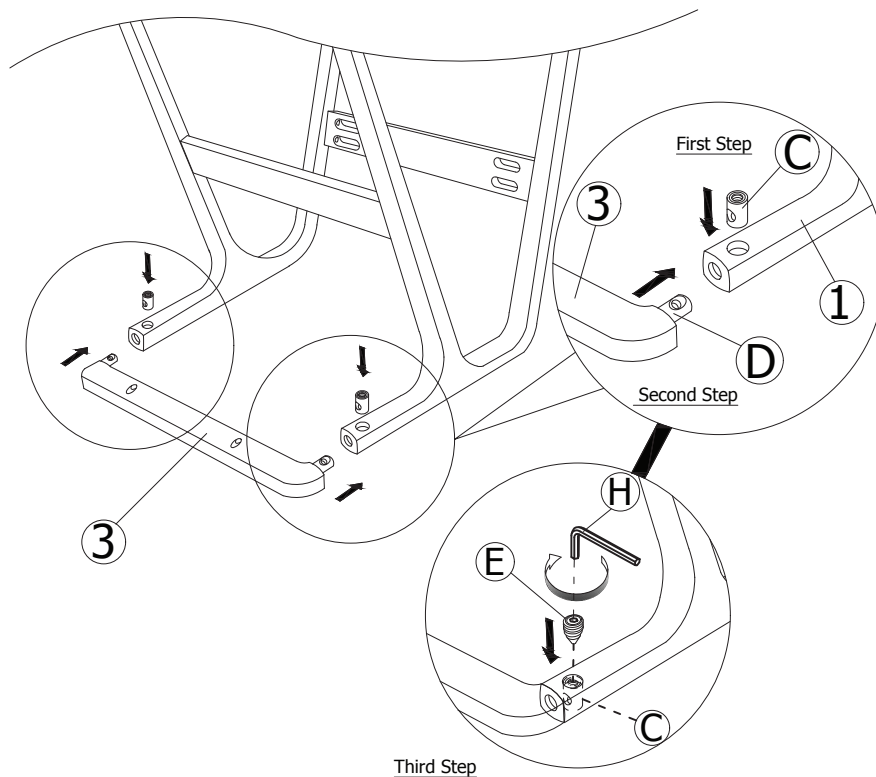

*All screws should be done by hand or if a drill is used it needs to be on a low torque setting
 *BARREL NUT (Long)" has a notch/hole that needs to line up in order to fit correctly
 with its counter part to complete the assembly.

3.

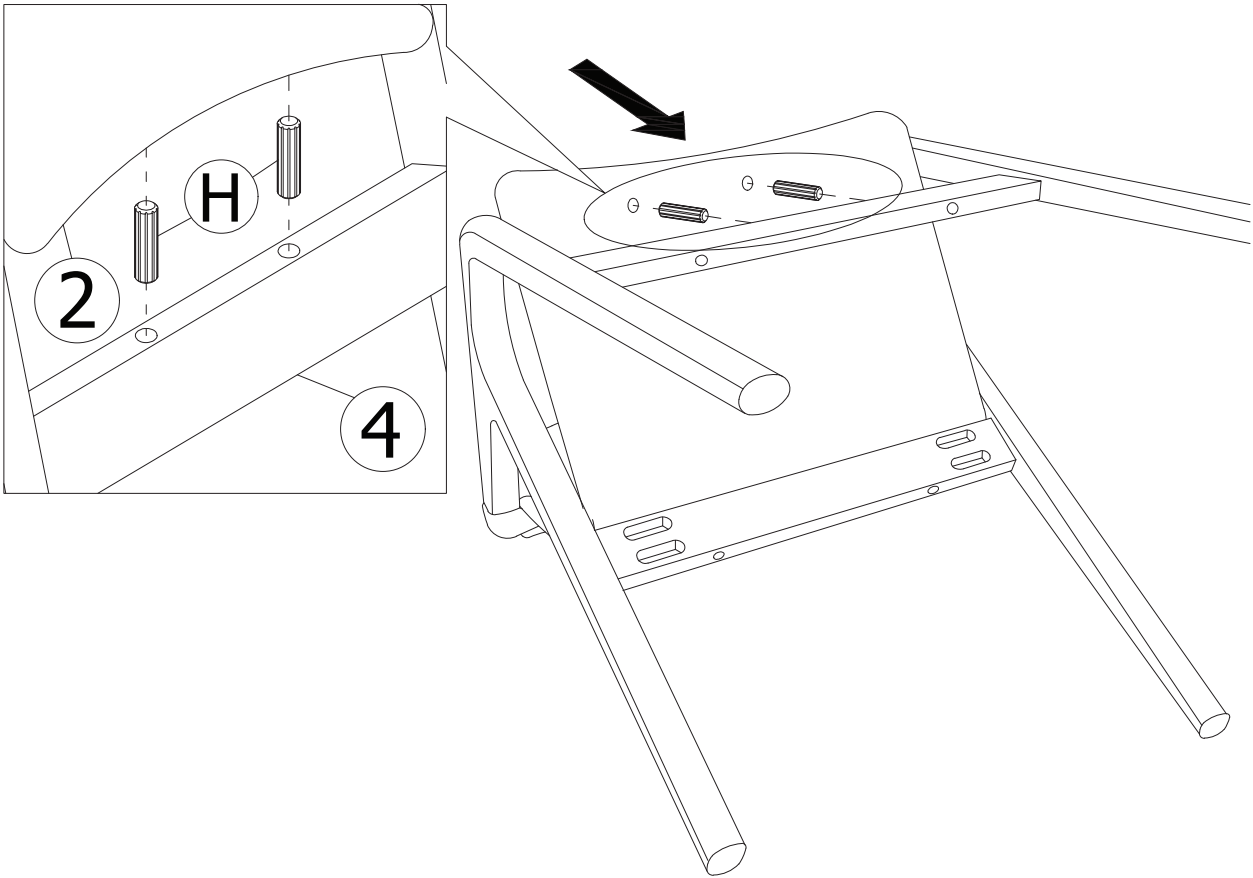

4.

