



ANGORA










Bed



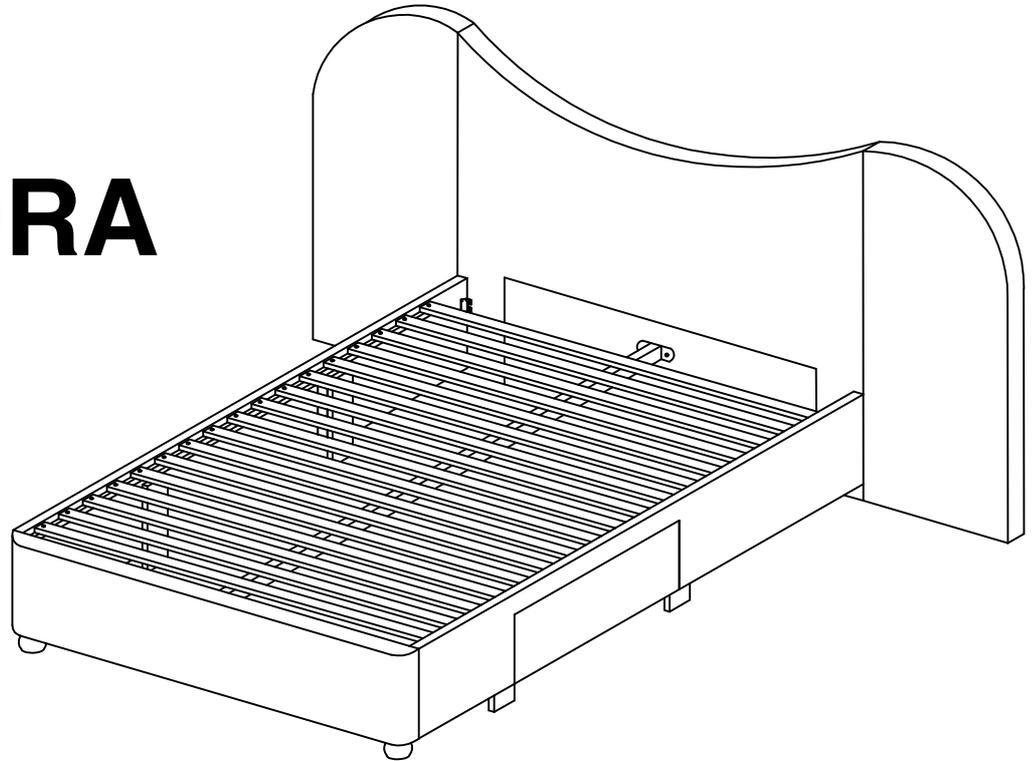




- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly.
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. Depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children.
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at customercare@b2cfurniture.com.au. We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!

ANGORA Bed

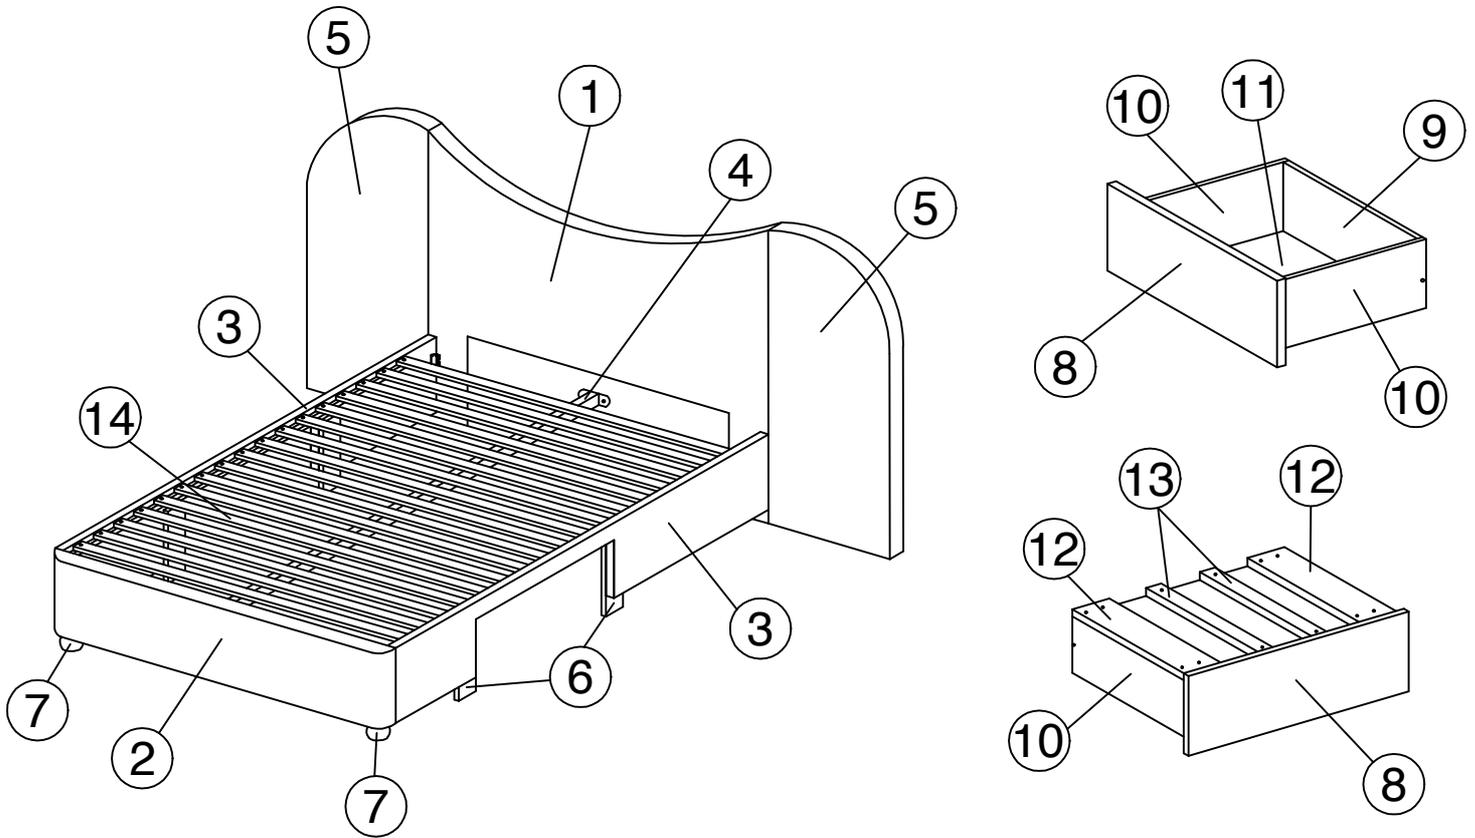

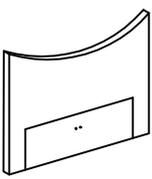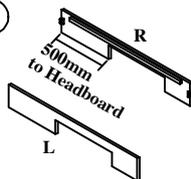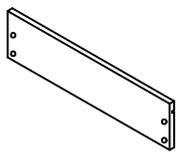
<p>①</p>  <p>Headboard (1)</p>	<p>②</p>  <p>Footboard (1)</p>	<p>③</p>  <p>Side Rail L/R (2)</p>	<p>④</p>  <p>Center Rail (1)</p>	<p>⑤</p>  <p>Side Wing (2)</p>
<p>⑥</p>  <p>Side Rail Support (4)</p>	<p>⑦</p>  <p>Legs (2)</p>	<p>⑧</p>  <p>Side Rail Front Panel (2)</p>	<p>⑨</p>  <p>Side Rail Back Panel (2)</p>	<p>⑩</p>  <p>Side Rail Side Panel (4)</p>
<p>⑪</p>  <p>Side Rail Bottom Panel (2)</p>	<p>⑫</p>  <p>Bottom Panel Big Support (4)</p>	<p>⑬</p>  <p>Bottom Panel Small Support (4)</p>	<p>⑭</p>  <p>Slat (17)</p>	

 M6 x 30mm A (4)	 M6 x 50mm B (4)	 M8 x 20mm C (8)
 M4 D (1)	 M5 E (1)	 CSK M3.5 x 16mm F (32)
 CSK M4 x 28mm G (8)	 CSK M4 x 32mm H (58)	 CSK M4 x 50mm I (16)
 Roller J (8)	 Wood Dowel 20mm K (8)	 Spring Washer L (8)
 Flat Washer M (8)	 Metal Stopper N (4)	




1.

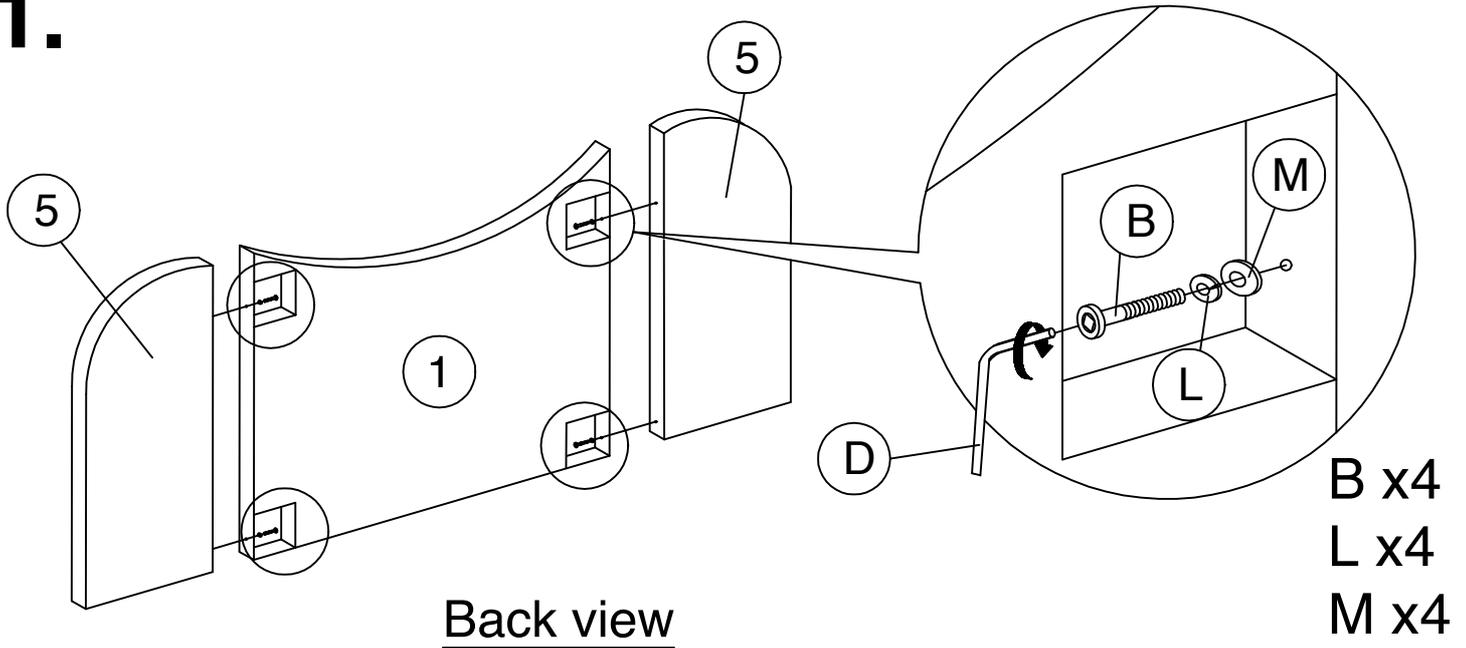


Tighten the side wing (5) to headboard (1) as shown.

2.

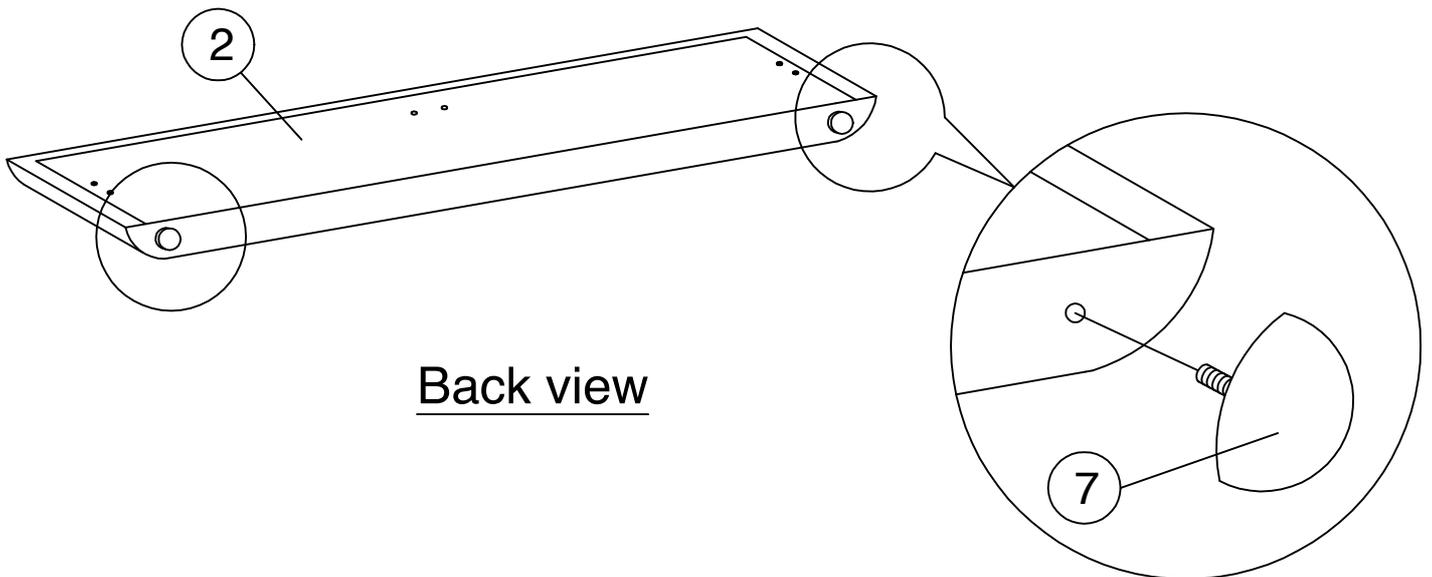


Tighten the legs (7) to footboard (2) as shown.

3.

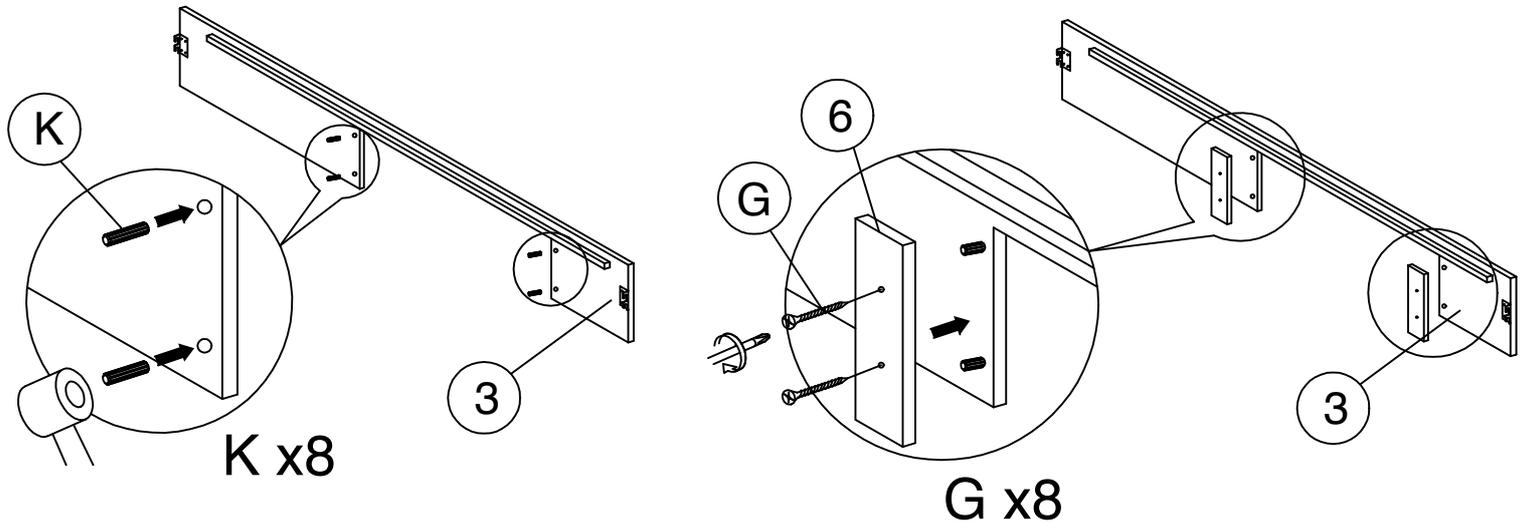


Attach wood dowel (K) to side rail (3). Tighten the side rail support (6) to the side rail (3) with screws (G) using screw driver (not included).


4.

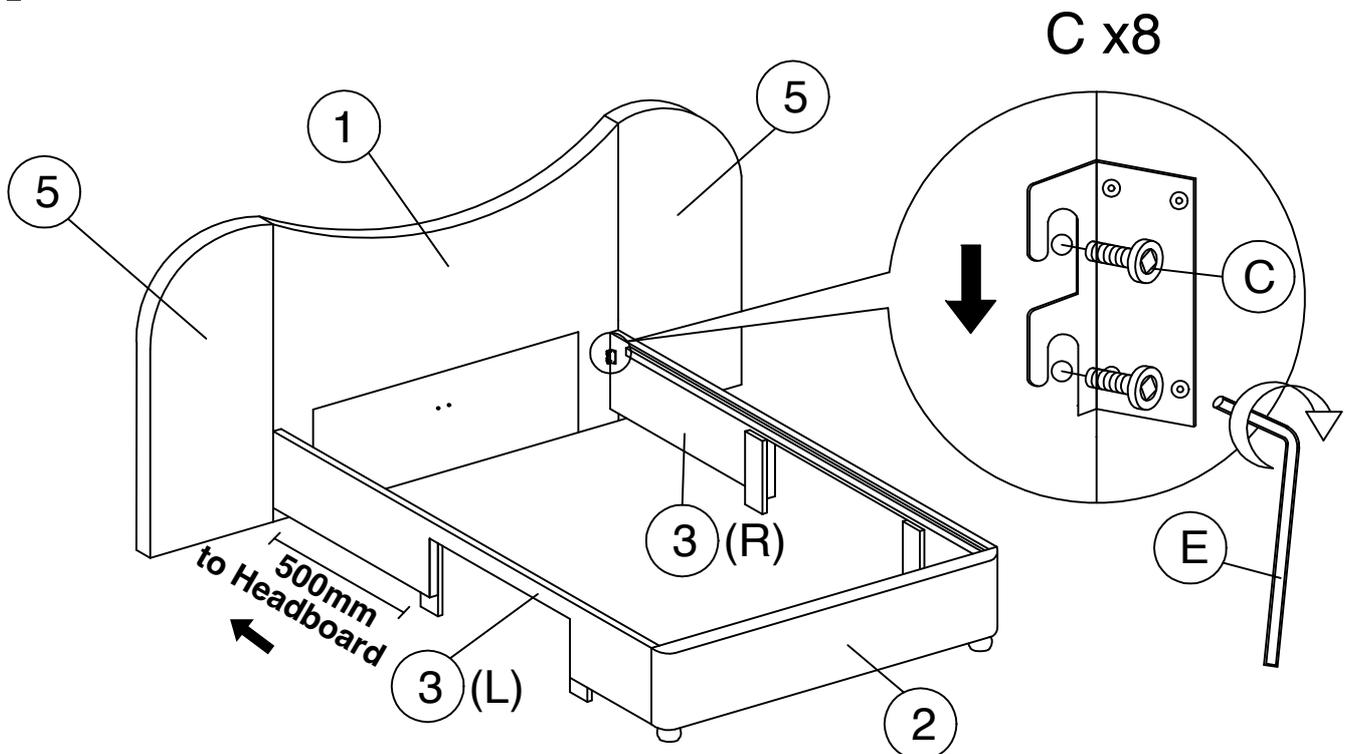

Attach side rail (3) to headboard (1) and footboard (2) by pushing the bracket down to fit it.

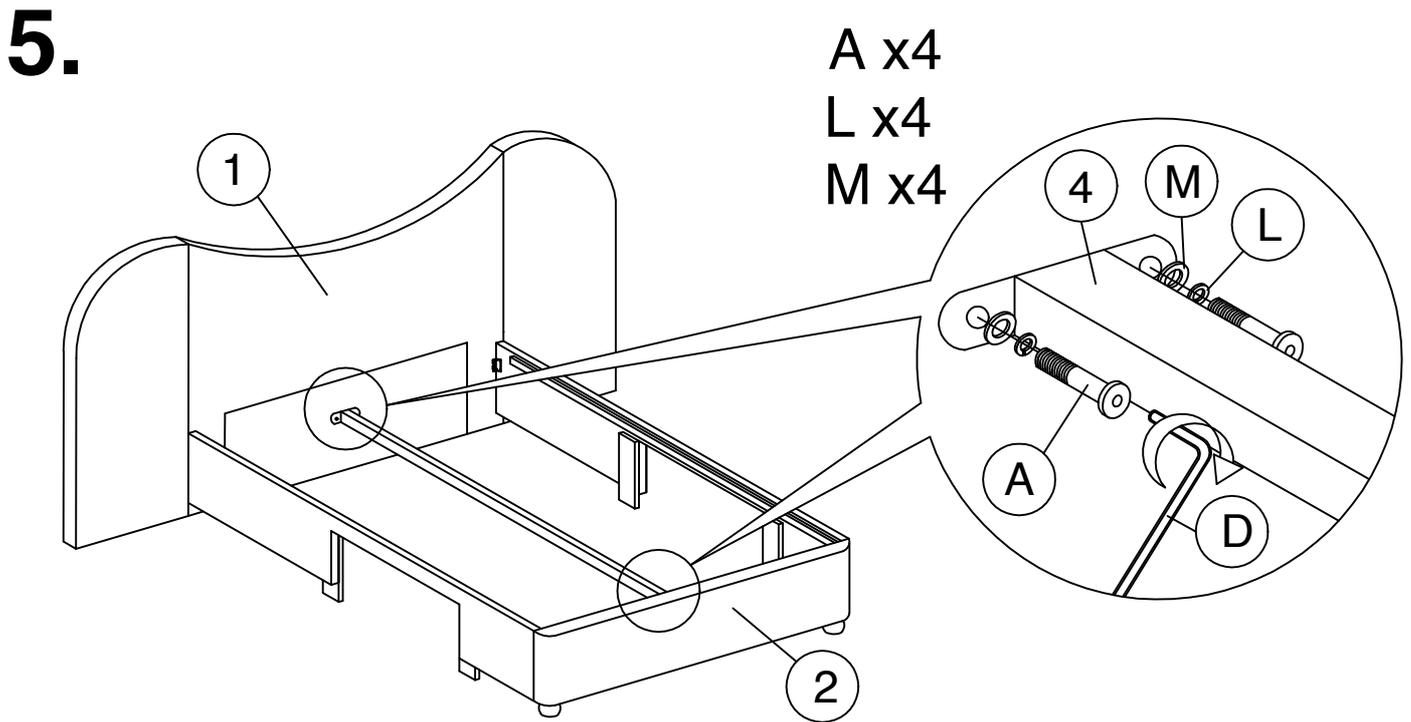


Slide the center rail (4) to the headboard (1) and footboard (2). Tighten screws (A) with spring washer (L) and flat washer (M) to the headboard (1) and footboard (2).

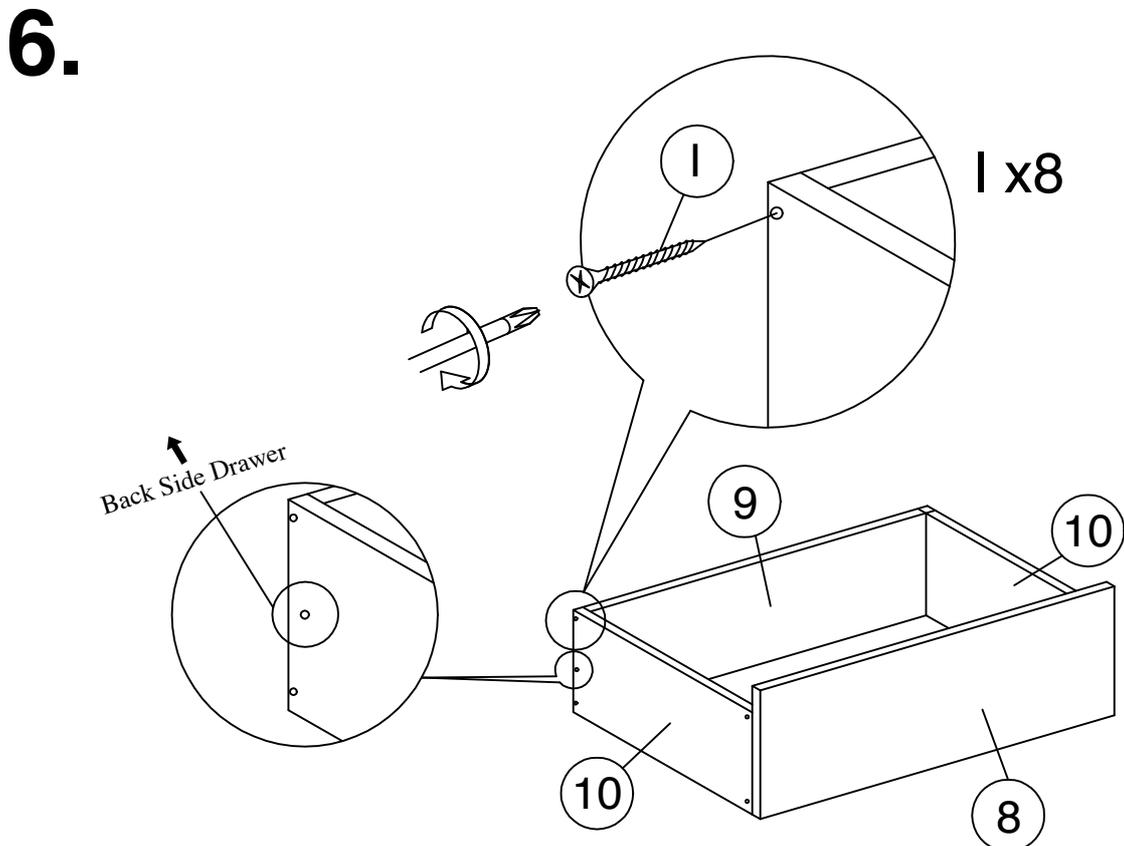

Tighten the side rail side panel (10) to the side rail front panel (8) and side rail back panel (9) with screws (I) using screwdriver (not included).


7.

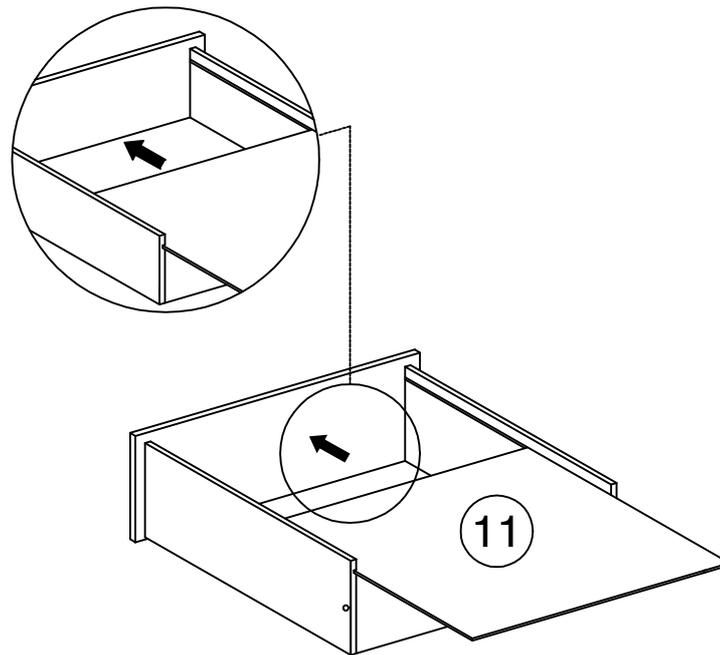

Back view

Slide the side rail bottom panel (11) to the set up drawer.


8.

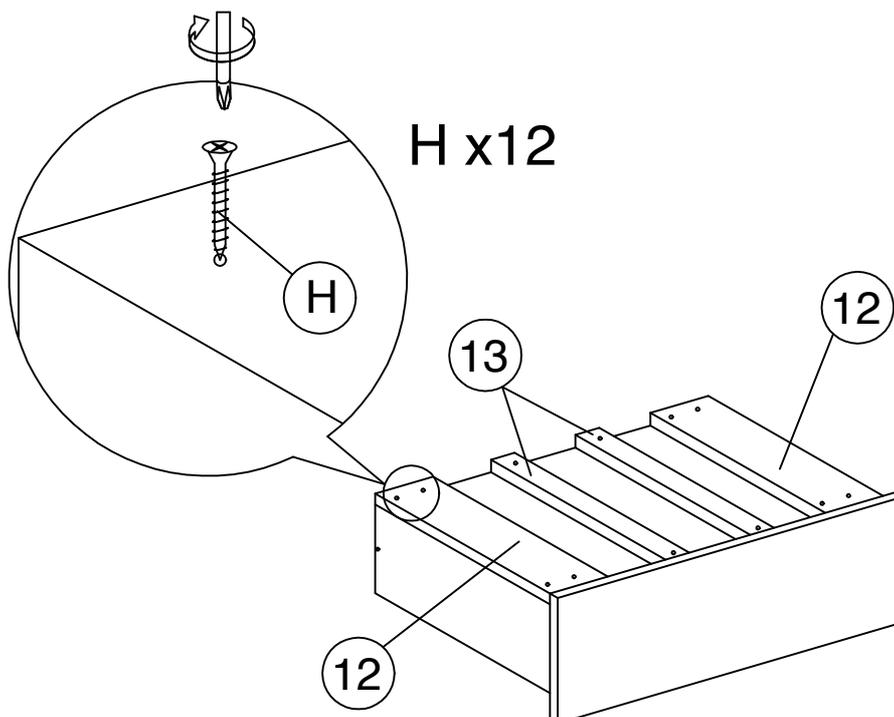

Back view


Tighten the bottom panel support (12 & 13) with screws (H) using screw driver (not included).

9.

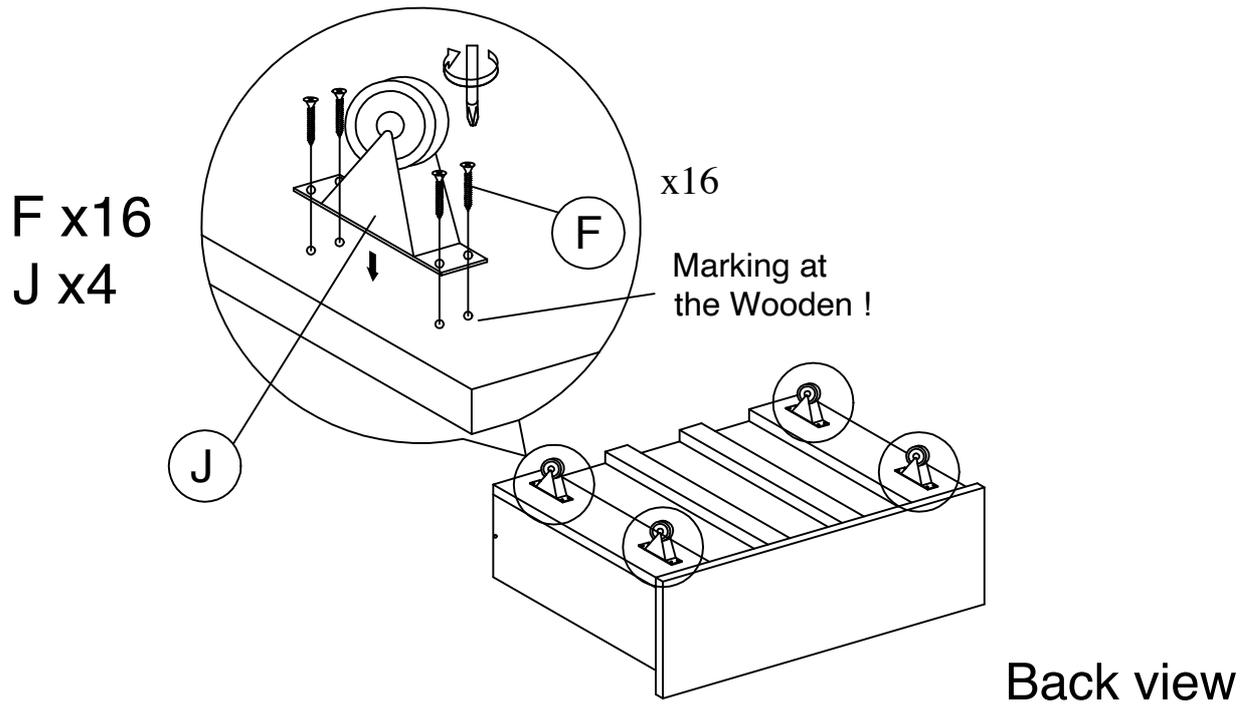

Tighten the roller (J) with screws (F) using screw driver (not included).

10.

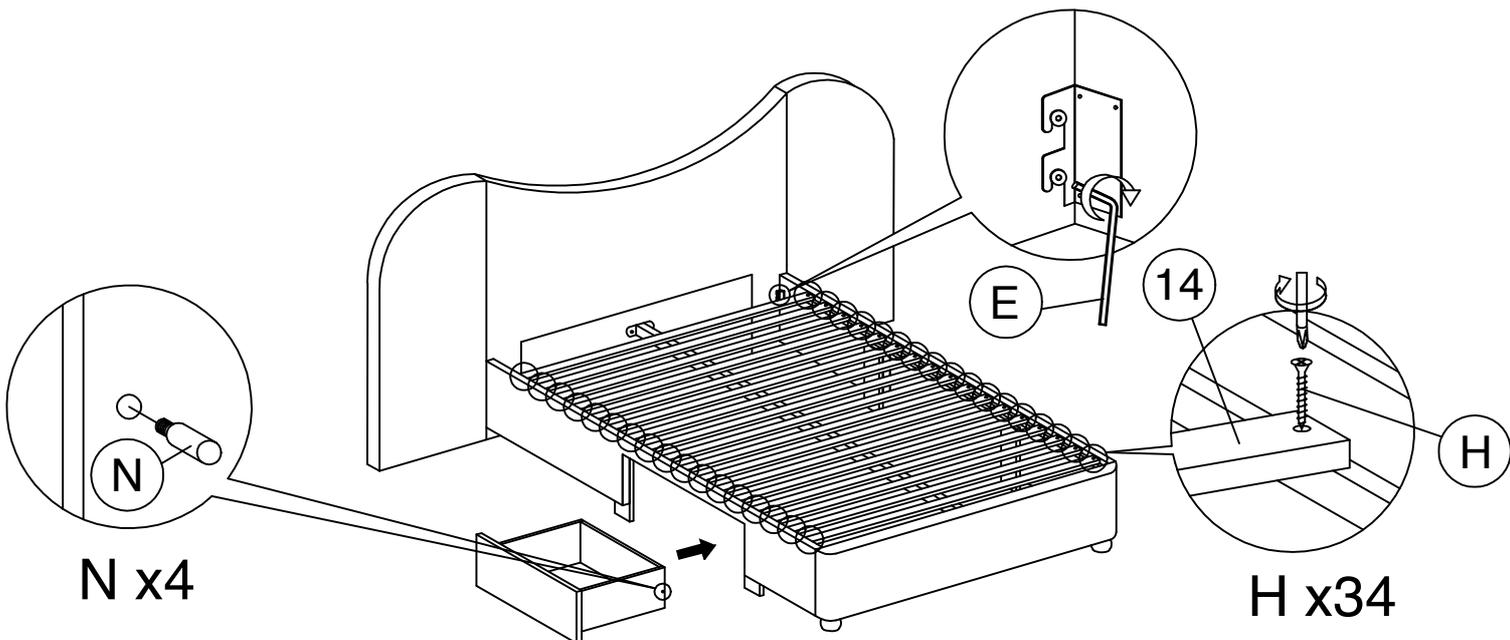

Affix the Slat (14) to the side rail support wood. Tighten all the 4 corner.