



ARC






Bed


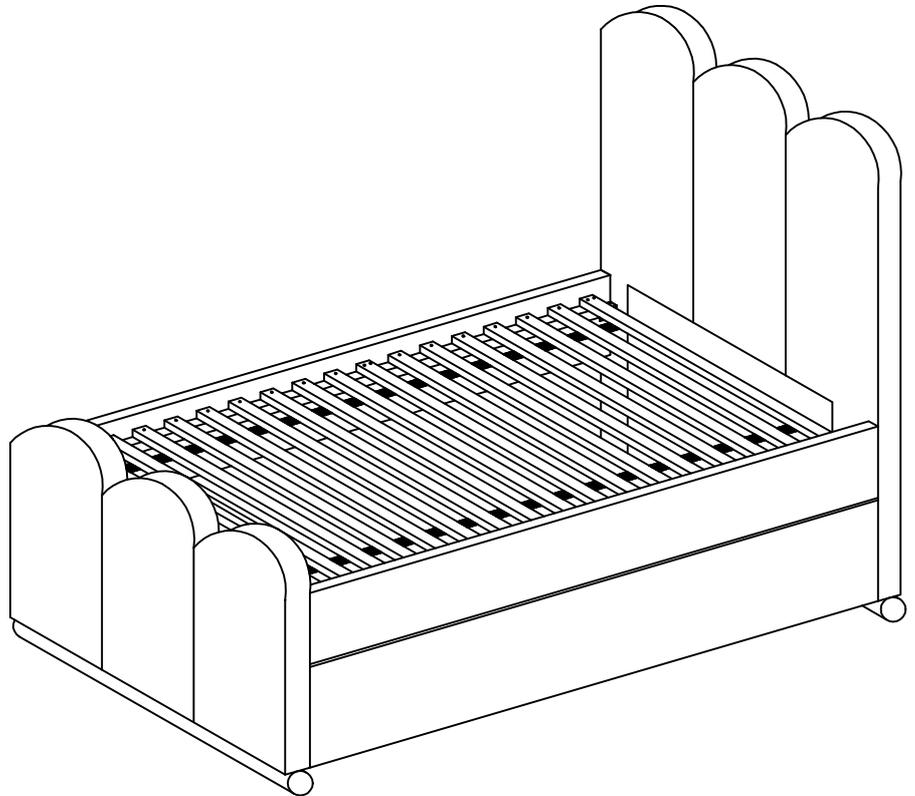




- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly.
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. Depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children.
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at customercare@b2cfurniture.com.au. We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!

ARC Bed

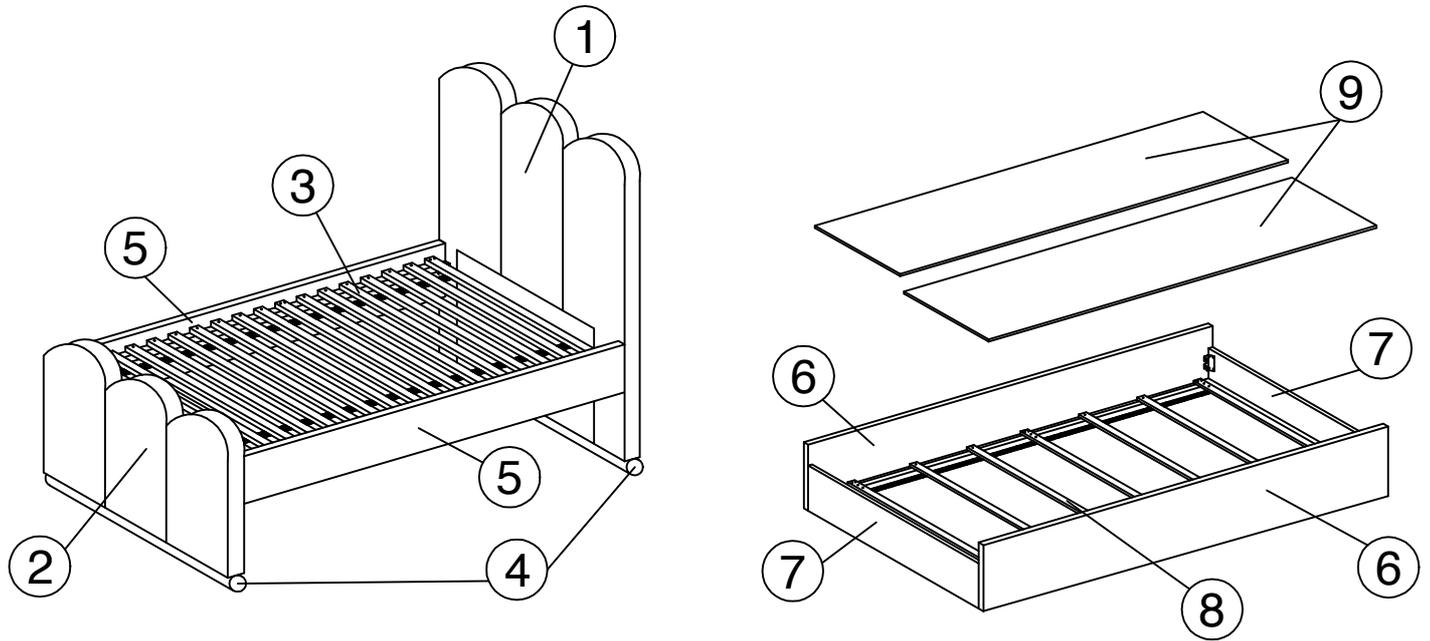


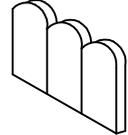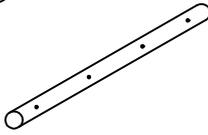 <p>Headboard (1)</p>	 <p>Footboard (1)</p>	 <p>Upper Slat (17)</p>	 <p>Legs (2)</p>	 <p>Side Rail (2)</p>
 <p>Trundle Front Panel (2)</p>	 <p>Trundle Side Panel (2)</p>	 <p>Bottom Slat (7)</p>	 <p>Bottom Panel (2)</p>	

 <p>M4 A (1)</p>	 <p>M5 B (1)</p>	 <p>CSK M4 x 32mm C (66)</p>
 <p>Roller D (6)</p>	 <p>M8 x 20mm E (16)</p>	 <p>M6 x 50mm F (4)</p>




1.

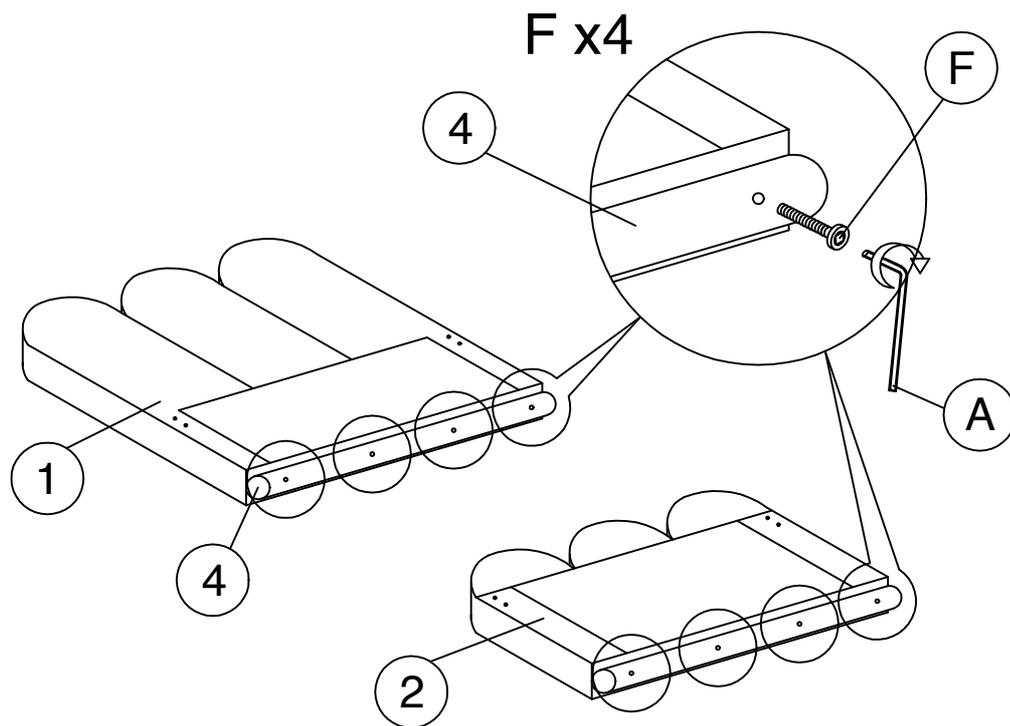


Tighten the legs (4) to both headboard (1) and footboard (2) as shown.

2.

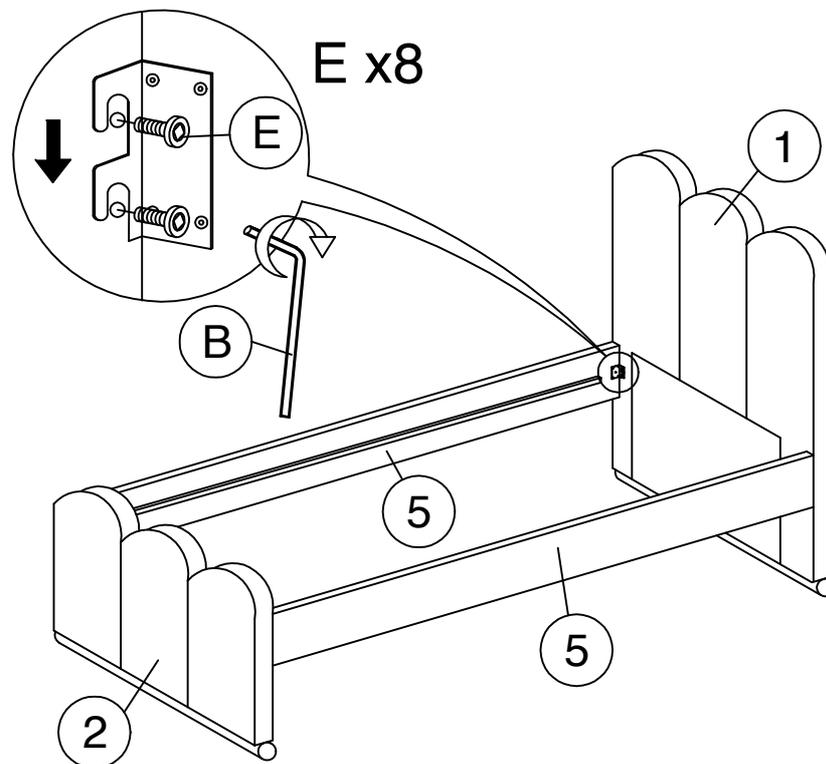


Attach side rail (5) to headboard (1) and footboard (2) by pushing the bracket down to fit it.

3.

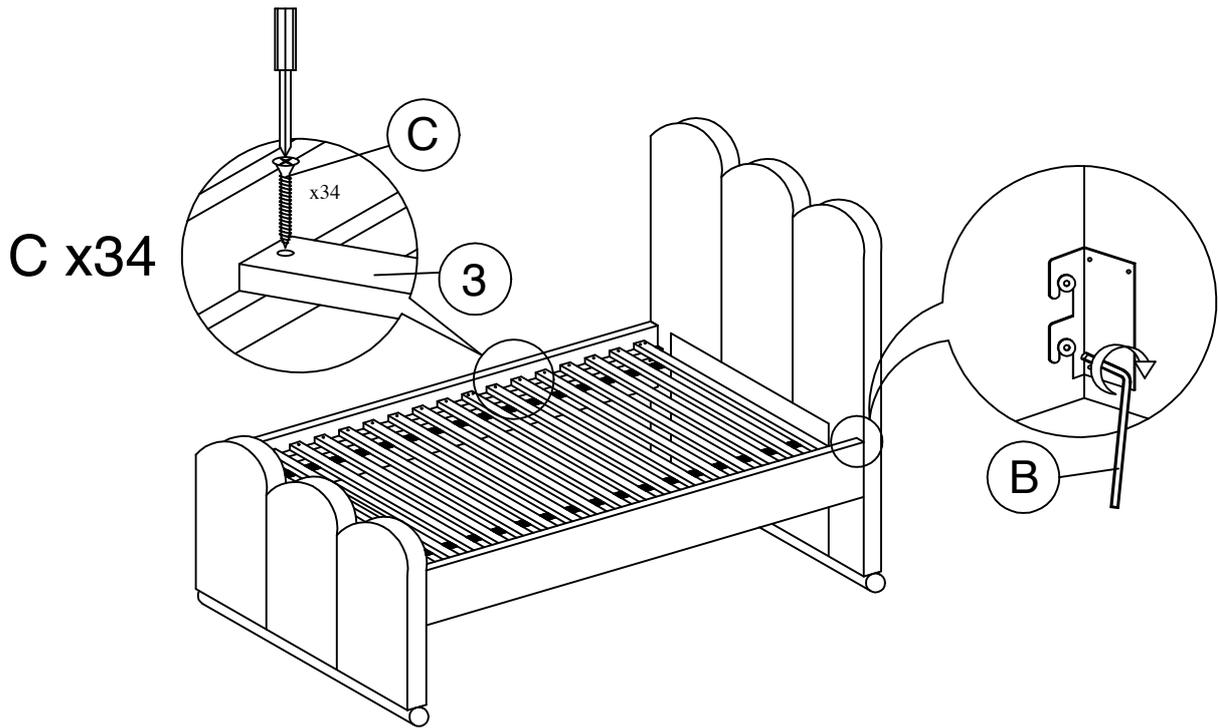


Tighten the 4 Corner's with Allen Key (B). Install the slats (3) to side rail. Tighten the slats with CSK screw (C). The distance of the slats should be sufficient to obtain desirable bed stability.

4.

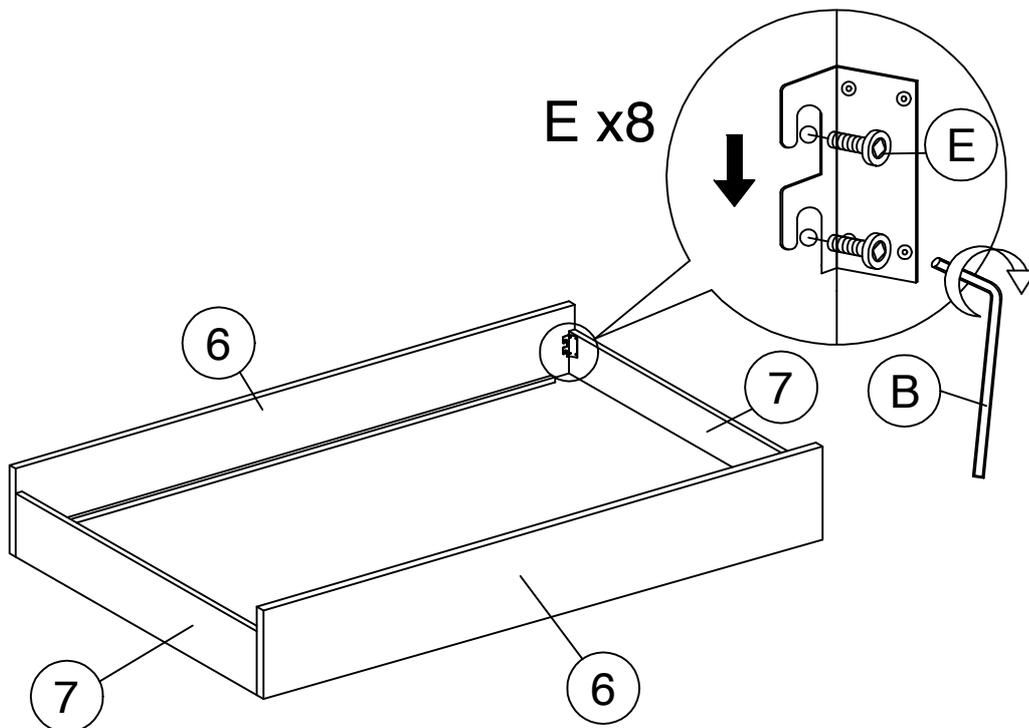


Attach trundle side panel (7) and trundle front panel (6) by pushing the bracket down to fit it.

5.

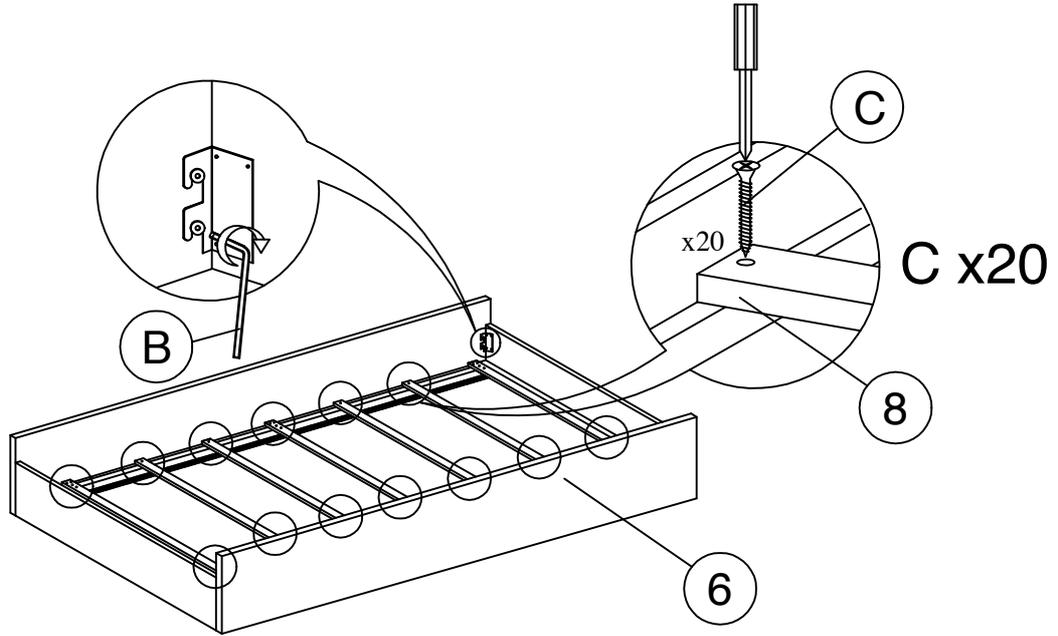


Install the slats (8) to trundle front panel (6). Tighten the slats with CSK screw (C). The slats should be installed evenly spaced apart for optimal bed stability.

6.

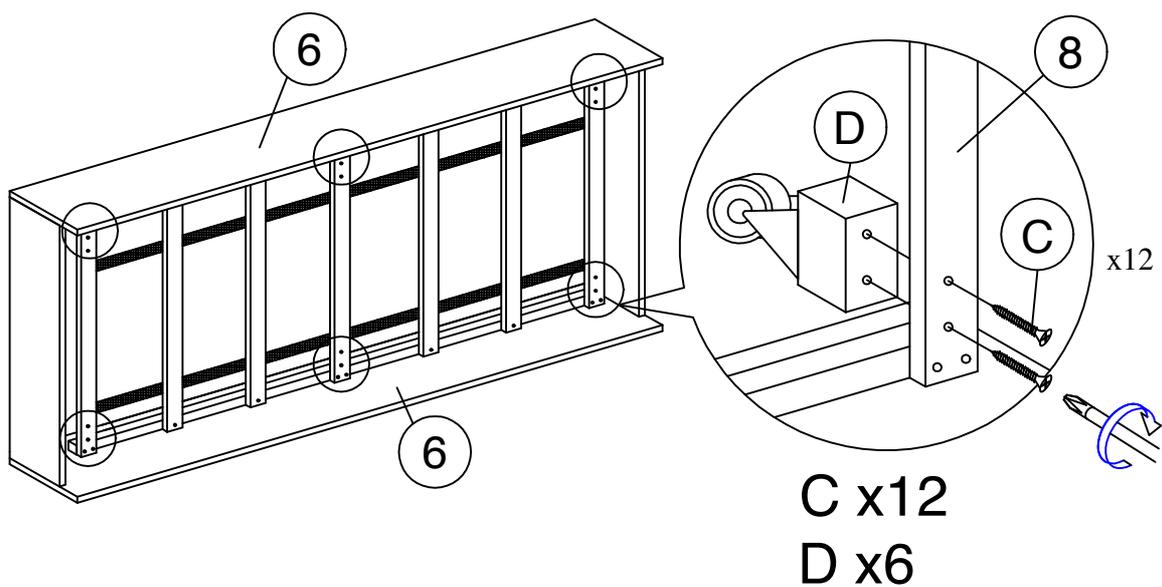


Turn the trundle to another side as below diagram and tighten the roller (D) with CSK screw (C) at the slat (8).

7.

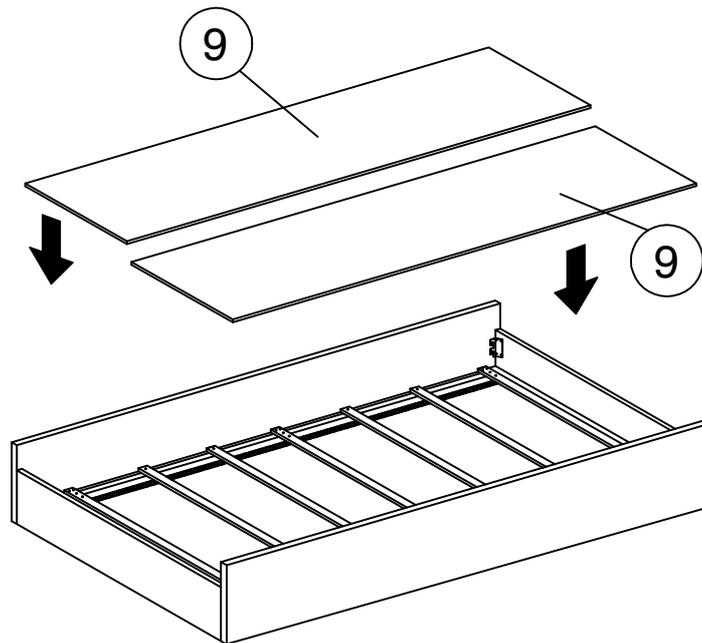

Insert the panel (9) into the trundle.

8.

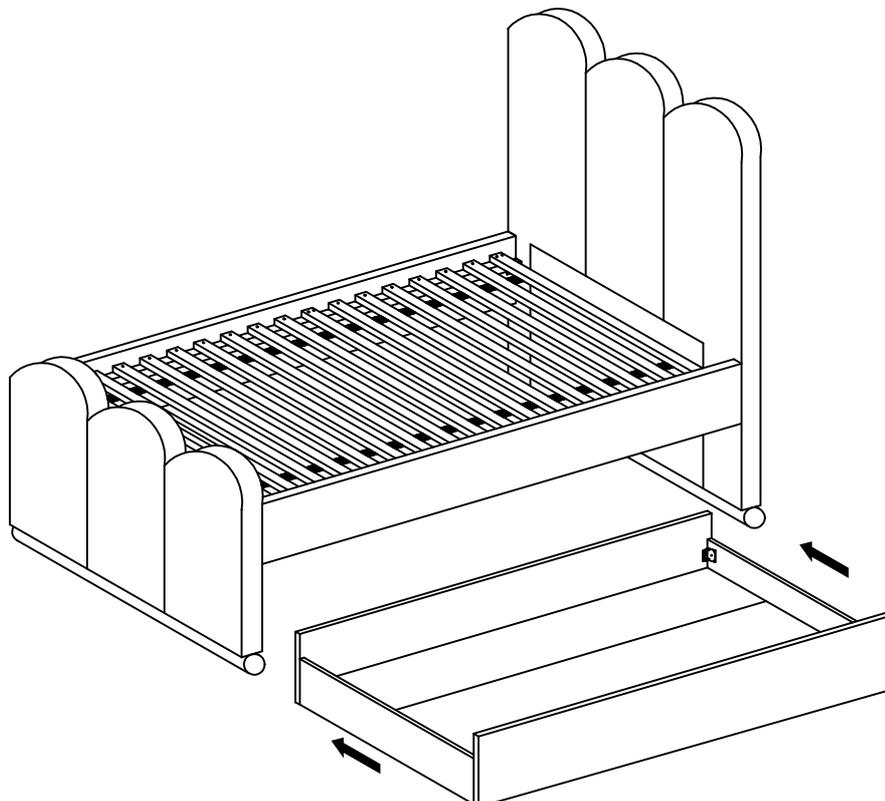

Assembly is complete.