



THE CHICKEN COOP COMPANY

We appreciate your purchase and are confident that you are going to love your new Orpington Lodge Run Extension!

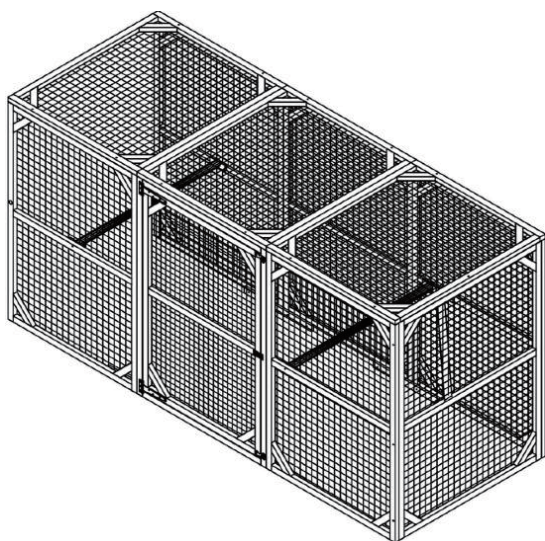
“some assembly required” can make all of us a bit nervous....

BUT don't fear, with these instructions and even referring to the assembly videos on our site it'll be a breeze!

Grab a power screwdriver and if you have someone to help you hold the panels it will make the process a lot more enjoyable and easier =)








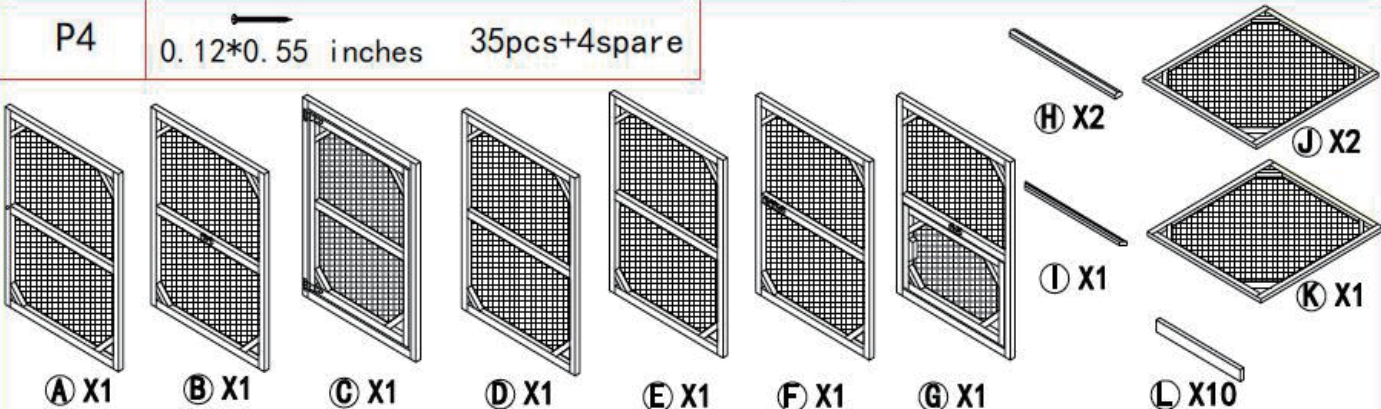
As we are shipping you this from Utah you may have seen that the boxes looked hammered, but it's the contents that matter. By applying another layer of lacquer or stain you give the wood extra strength against the elements and you will eliminate any scratch on the wood or cosmetic concern from shipping.

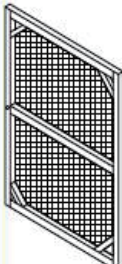
It's wise to put this additional layer on in the beginning too, since the wood will be settling in place!

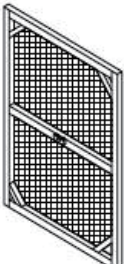


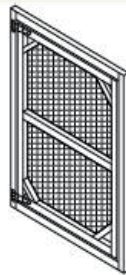
Lets get Started!


- Unpack this box completely
- Identify all pieces (see key below)
- You will be referring to this key throughout the assembly process so keep it handy as well as the assembly video!

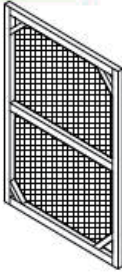
P1	 0.14*2.36 inches 16pcs+4spare	P5	 3pcs
P2	 0.14*1.77 inches 22pcs+4spare	P6	 2pcs
P3	 0.14*1.18 inches 40pcs+4spare	P7	 3pcs
P4	 0.12*0.55 inches 35pcs+4spare		

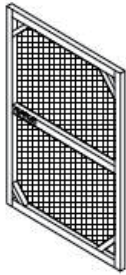
**A** X1

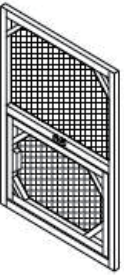
**B** X1


**C** X1


**D** X1

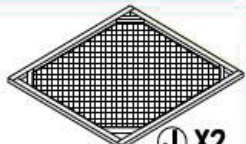
**E** X1

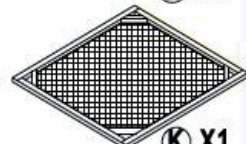
**F** X1


**G** X1

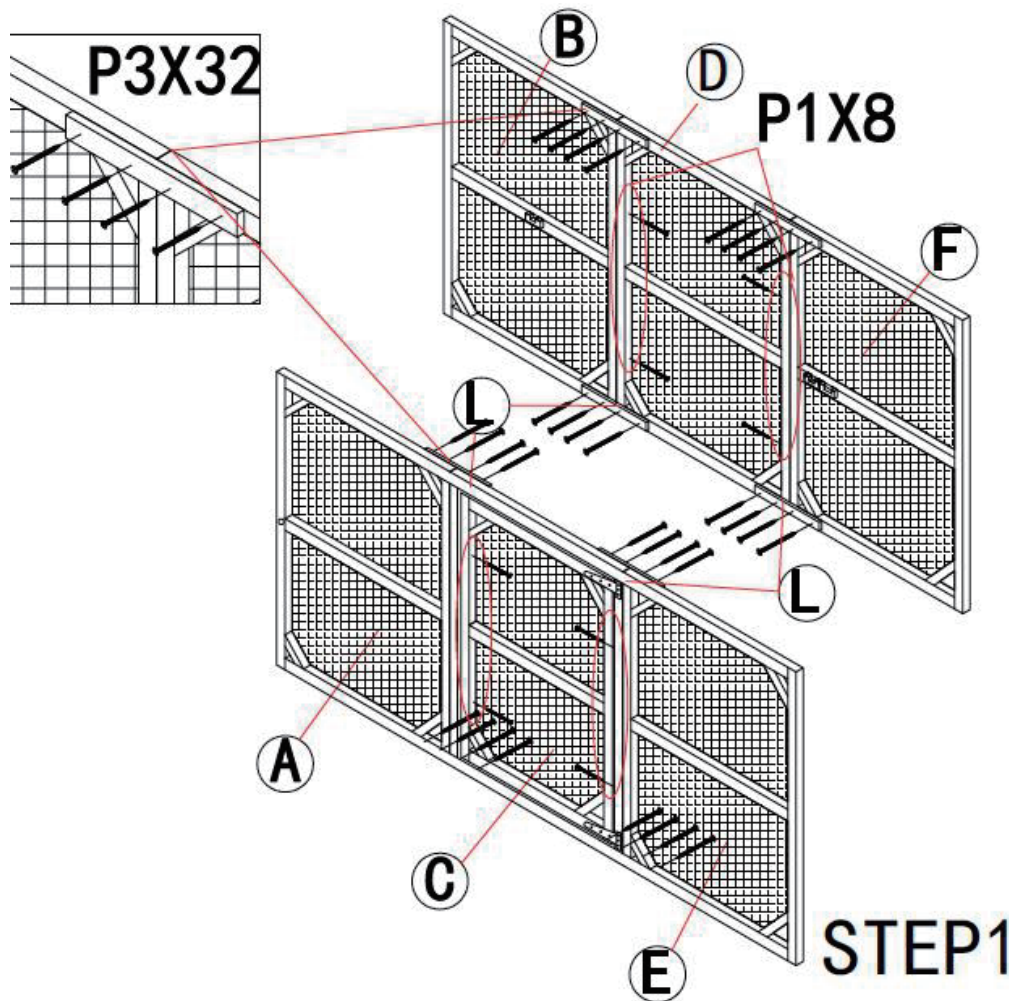
**H** X2

**I** X1

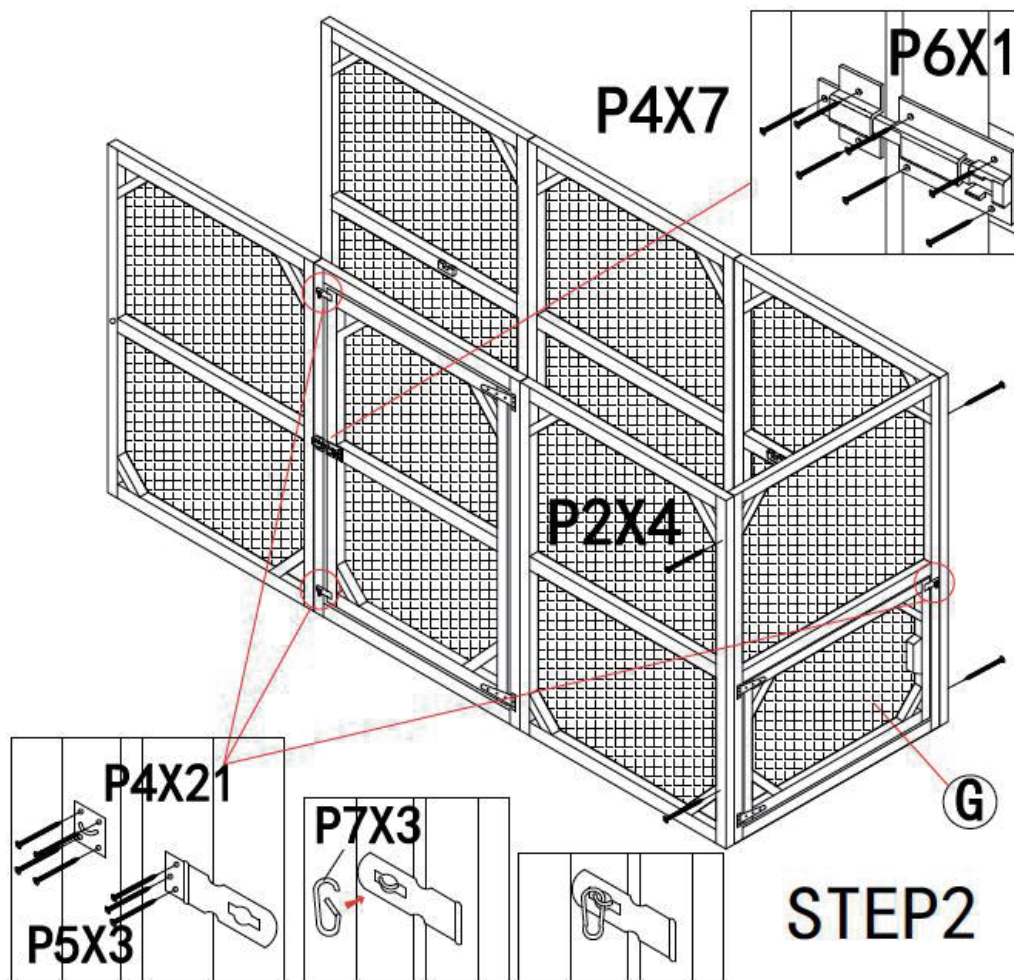
**J** X2

**K** X1

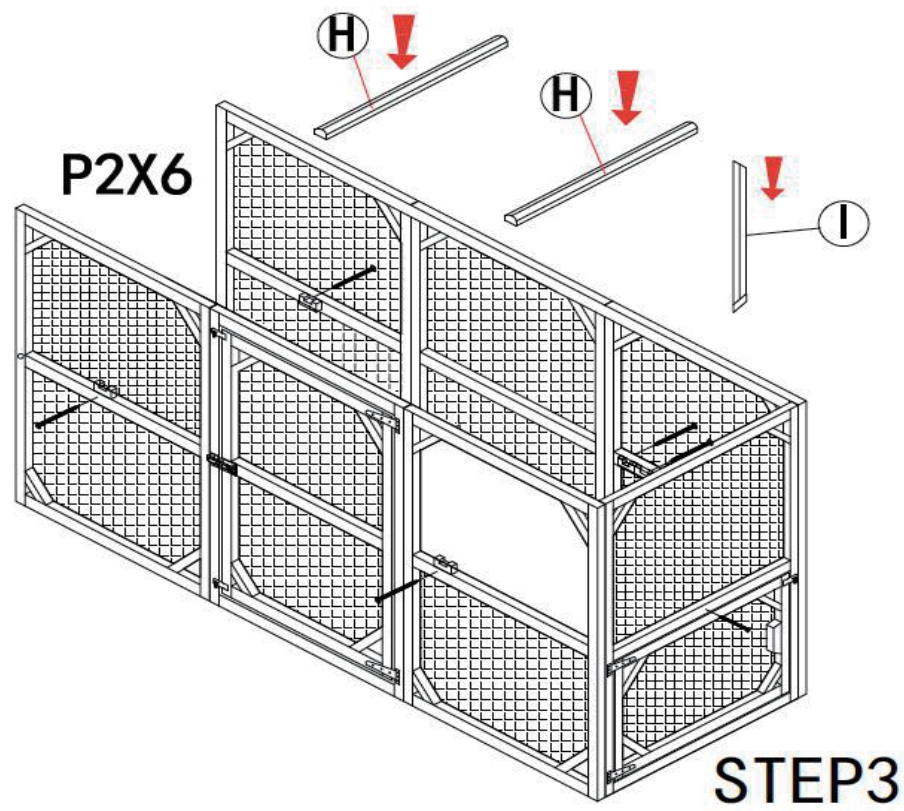
**L** X10



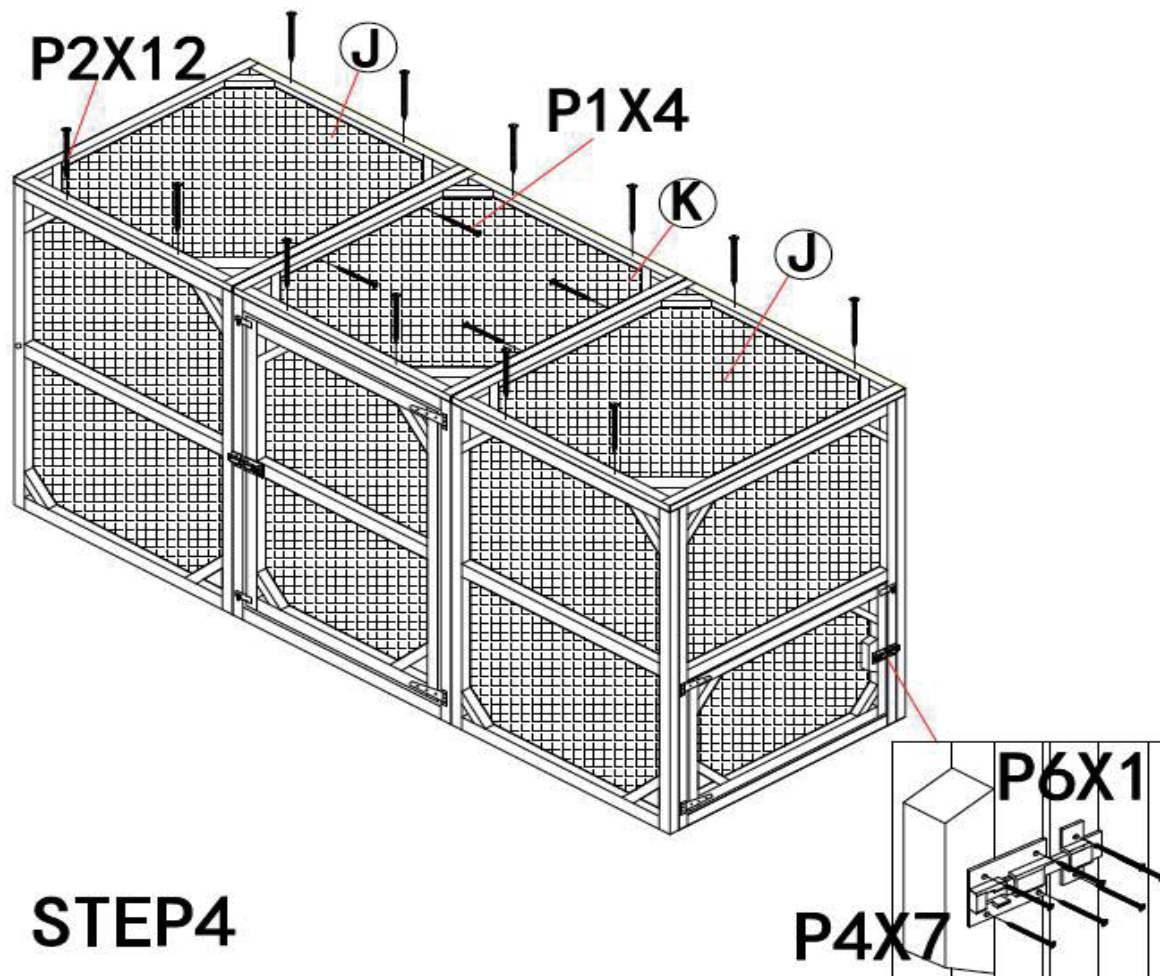
- A, B, C, D, E and F are the panels needed for your first step
- Each panel is marked. In addition you will need 8 L pieces
- It's best to assemble one side at a time. A, C, E and then B, D, F
- Connect the panels using 8 screws from the bag labeled P1
- It is important to use the pre-drilled holes and line up the panels before screwing
- Use 32 screws from the bag labeled P3 to attach the L pieces. (These pieces connect the two panels and provide additional stability and support.)



- You will need the G panel, the P6 bolt lock, the P7s and the P5s
- Connect the two sides to G using screws from the bag labeled P2
- Don't forget to use the pre-drilled holes and to line up the panels
- Use screws from the bag labeled P4 to attach the latches (P6 and P5s). The latches are intended to be installed towards the top and toward the bottom of the door.

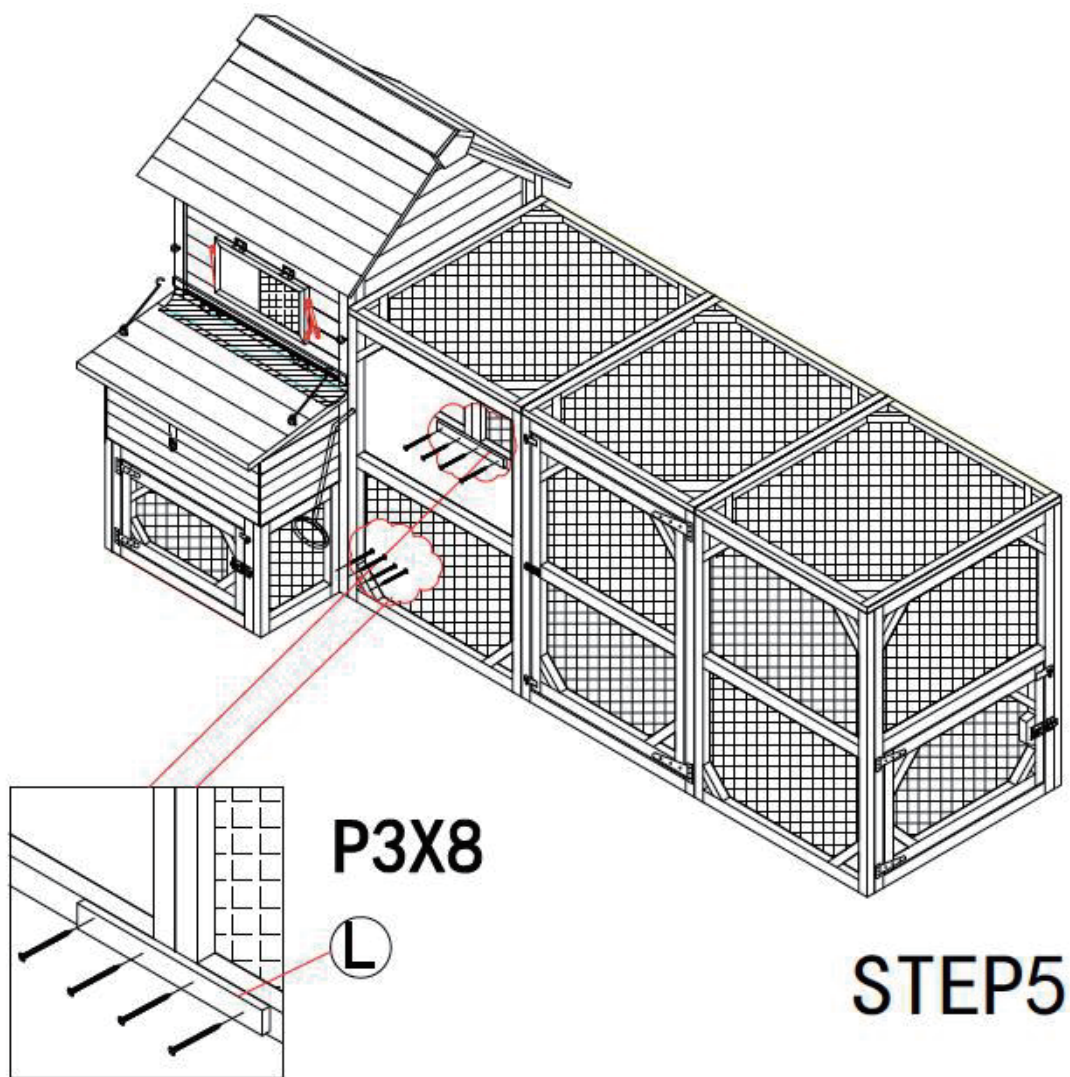


- H, I and screws from the bag labeled P2 will be needed
- See diagram above and be sure to use the predrilled holes

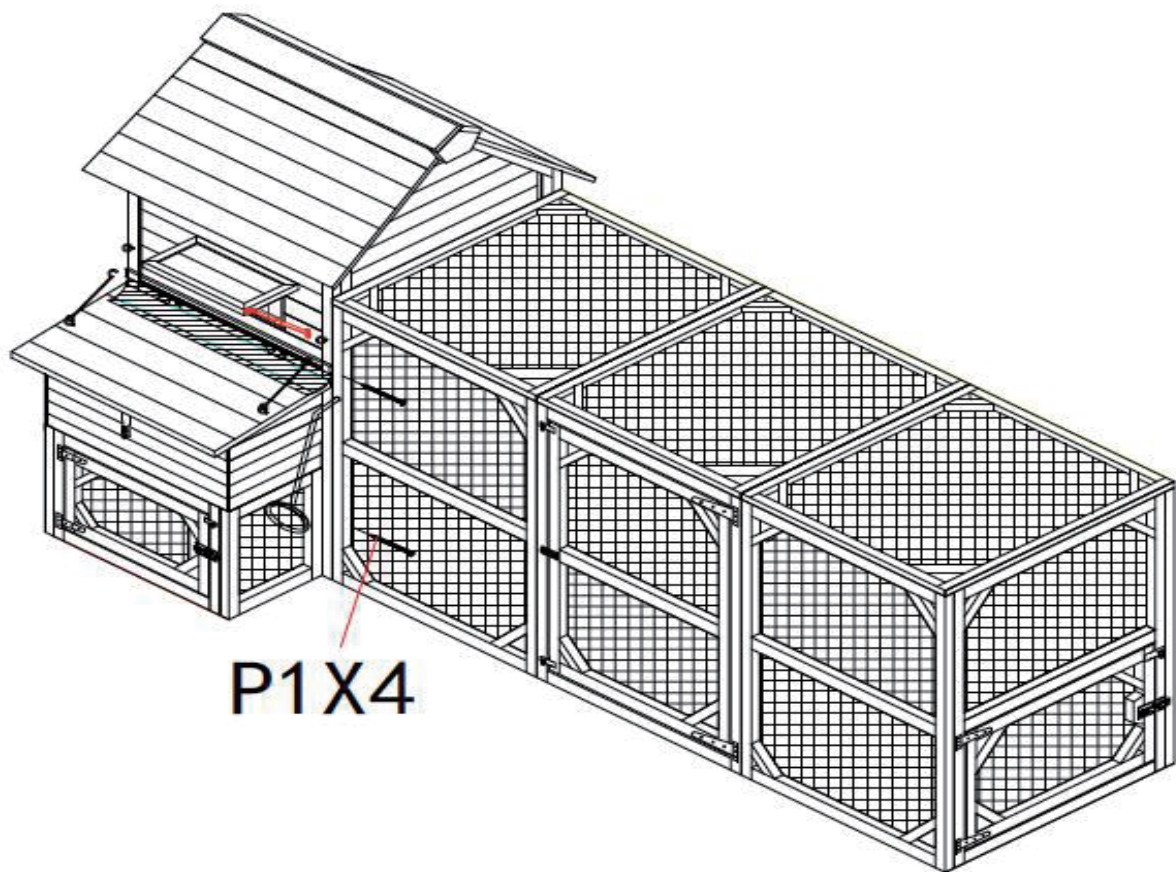


STEP4

- J and K are the panels needed for this step
- 4 screws from the bag labeled P1 will be used to connect the panels together and will be screwed in horizontally
- 12 screws from the bag P2 will be used to screw the top panels into the bottom panels.
- Be sure to line up the panels before screwing



- Nice work! Use two L pieces so that you can attach this run to your hen house (see diagrams above).
- Use 8 of the P3 screws to connect the run to the hen house.



P1X4

YOU'RE FINISHED

Lastly, connect the run to the hen house with 4 screws from the P1 bag.

It's official, you are all set and your girls have a new Run!!

We would love to be tagged in any pictures you post on Instagram or Facebook! If you like your coop please take a moment to post a positive review for us =)

Thanks for supporting our small family business,

The Chicken Coop Company Family



P.S. Please maintain your coop/run.

We recommend staining your coop/run at least twice a year. In addition we recommend tightening screws and using wood glue to secure your coop/run when you feel it needs it.