




THE CHICKEN COOP COMPANY

Hi! We appreciate your purchase and are confident that you are going to love your new Rhode Island Homestead XL Run Extension! “Some assembly required” can make all of us a bit nervous...




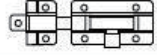


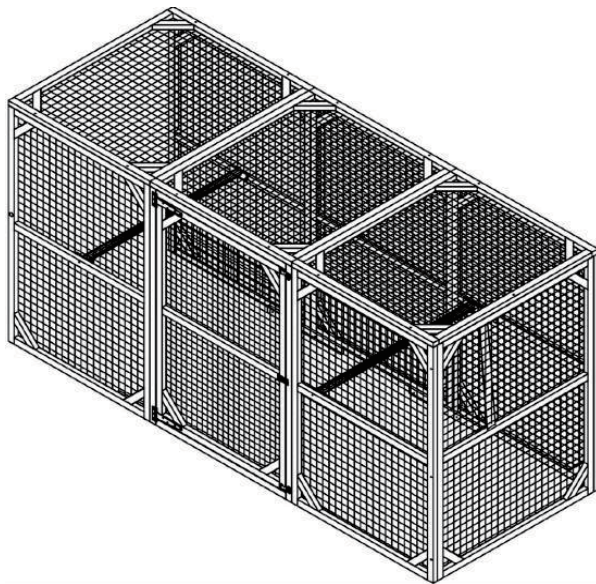
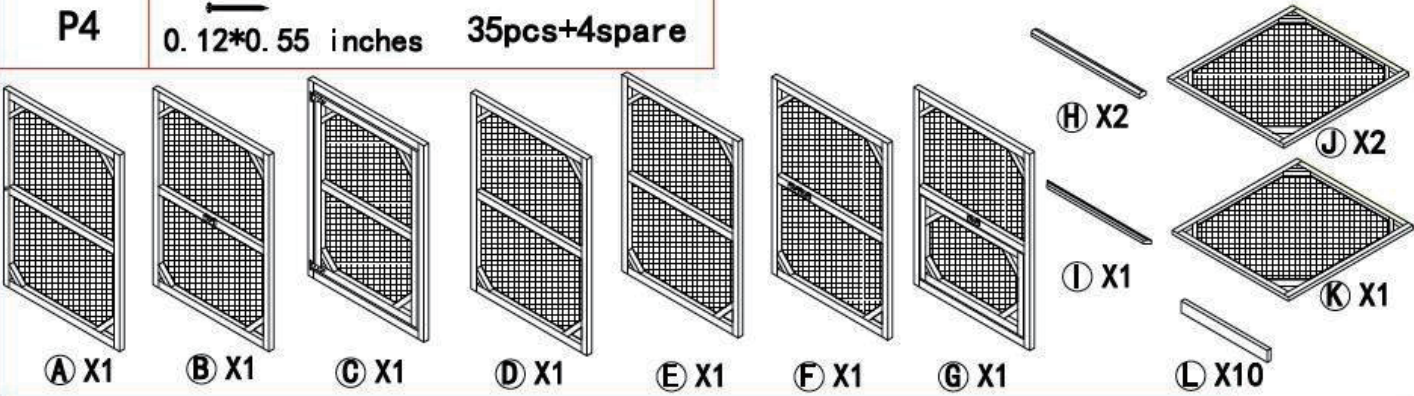
BUT don't fear, with these instructions and even referring to the assembly videos on our site it'll be a breeze!

Grab a power screwdriver and if you have someone to help you hold the panels it will make the process a lot more enjoyable and easier =) As we are shipping you this from Utah the box may have looked hammered, but it's the contents that matter. By applying another layer of lacquer or stain you give the wood extra strength against the elements and you will eliminate any scratch on the wood or cosmetic concern from shipping. It's wise to put this additional layer on in the beginning too, since the wood will be settling in place!




Lets get Started!

- Unpack this box completely
- Identify all pieces (see key below)
- You will be referencing to this key throughout the assembly process so keep it handy!

P1	 0.14*2.36 inches 22pcs+4spare	P5	 3pcs
P2	 0.14*1.78 inches 24pcs+4spare	P6	 2pcs
P3	 0.14*1.18 inches 40pcs+4spare	P7	 3pcs
P4	 0.12*0.55 inches 35pcs+4spare		

- A, B, C, D and E are the names of the panels for step 1. Each panel is marked. In addition you will need 8 L pieces.

-12 screws from the bag labeled P1 will be used to connect the panels together and 32 screws from the P3 bag will be used to install the L pieces.

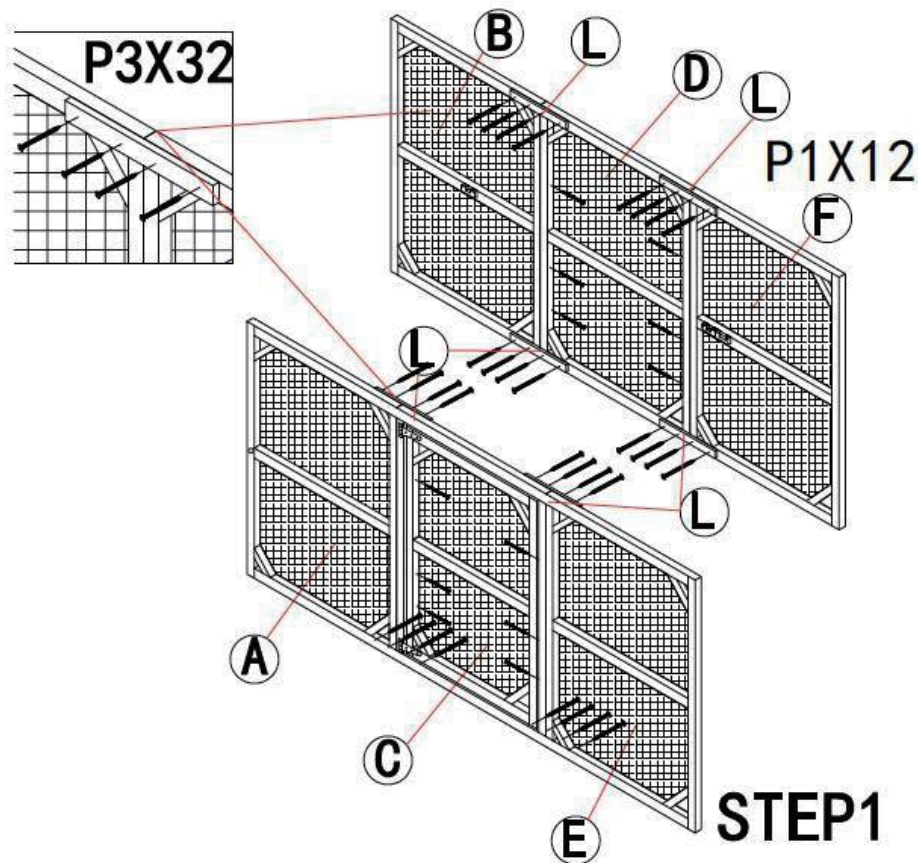


-It will be best to assemble one side at a time. A, C, E and then B, D, F

-Panel A has a 1 inch diameter hole on one of the sides.


*This side will connect to the hen house on the side that the hen house door slides towards. The hole is for the metal rod/handle that connects to the sliding door. This allows you to open/close the door without having to go into the run.

-Connect the panels using 12 screws from the bag P1
It is important to use the pre-drilled holes and to line up the panels before screwing


-Use P3 screws to attach the L pieces. These pieces connect the two panels and provide additional stability and support

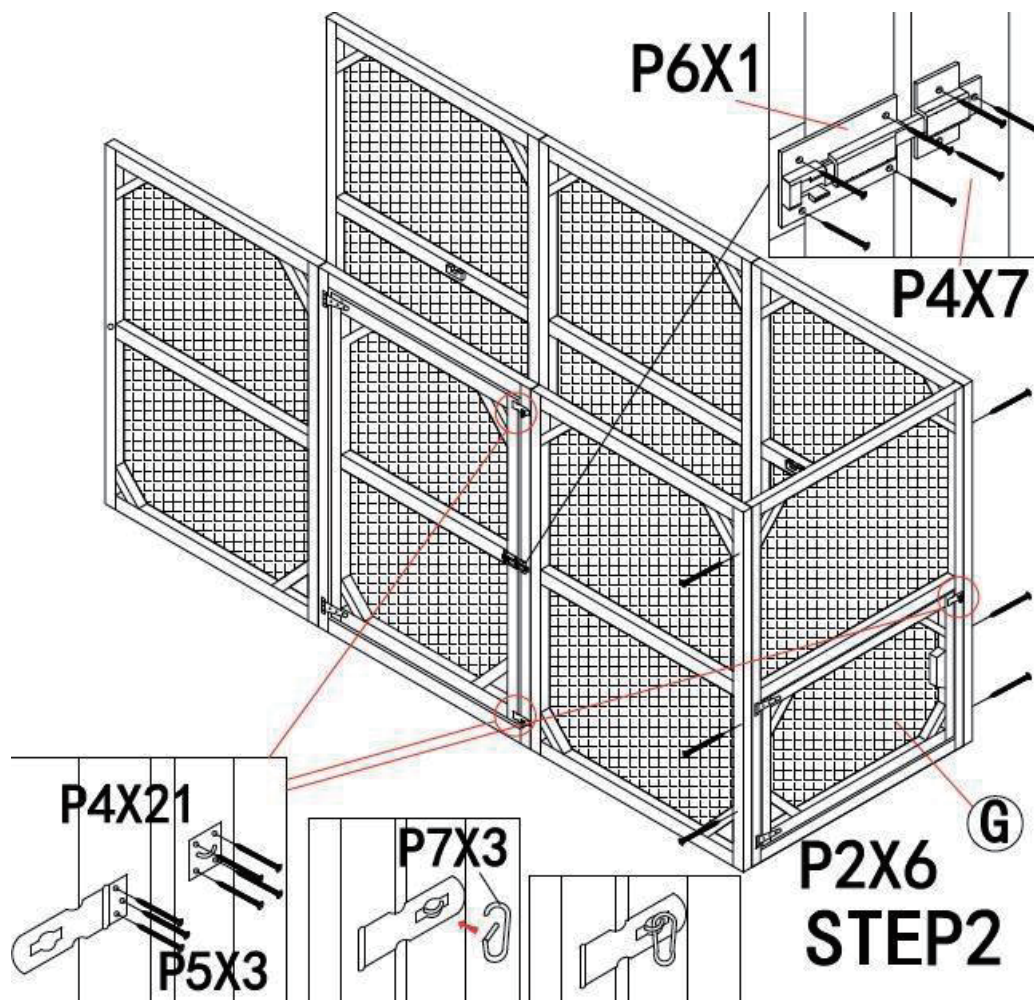

- You will need the G panel, P6 bolt lock and the P5s
- Connect the two sides to G using screws from the bag P2
- Use P4 screws to attach the latches (P6 and P5s). The latches are intended to be installed towards the top and towards the bottom of the door.

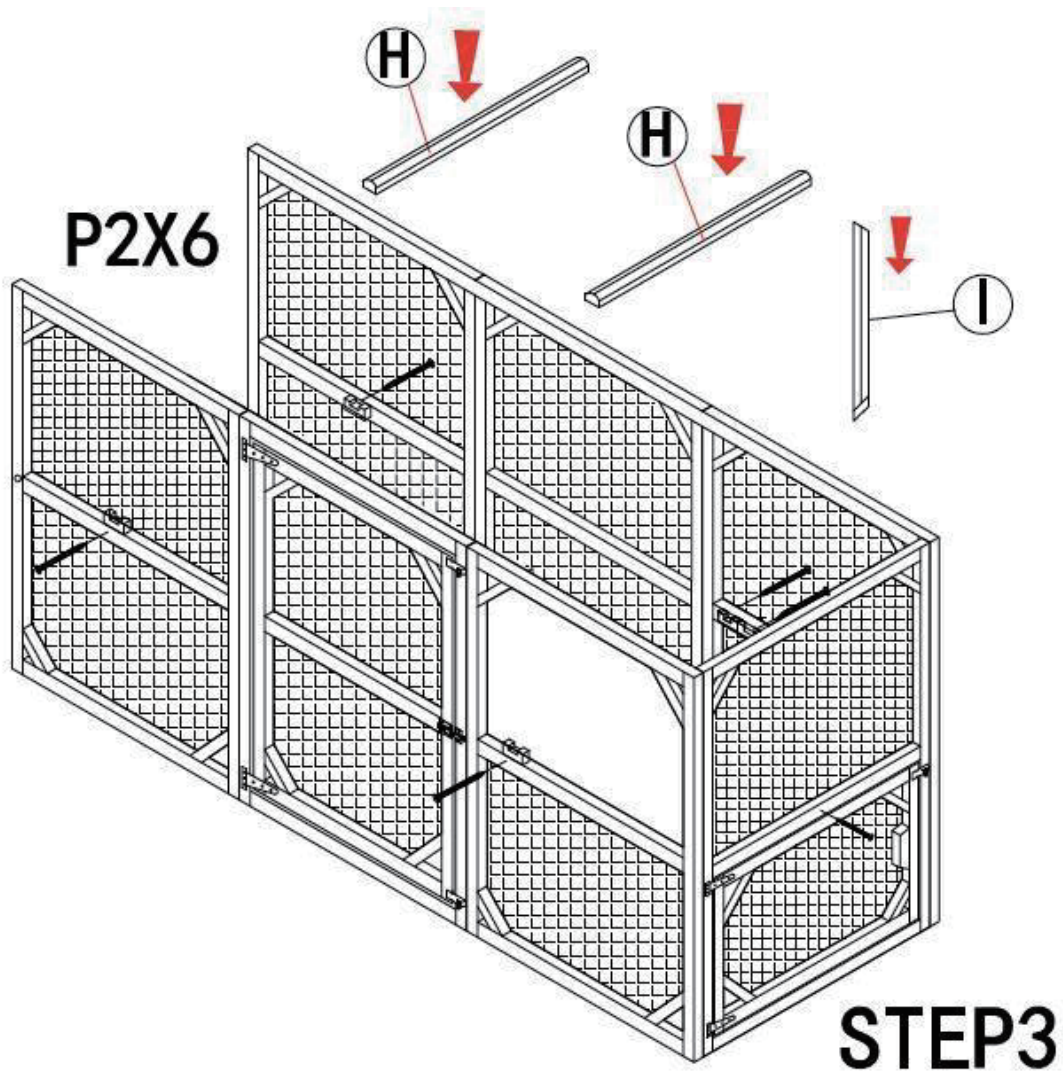


-H, I and P2 screws will be needed
Follow the above diagram and don't forget assembly video on
the site is a helpful tool

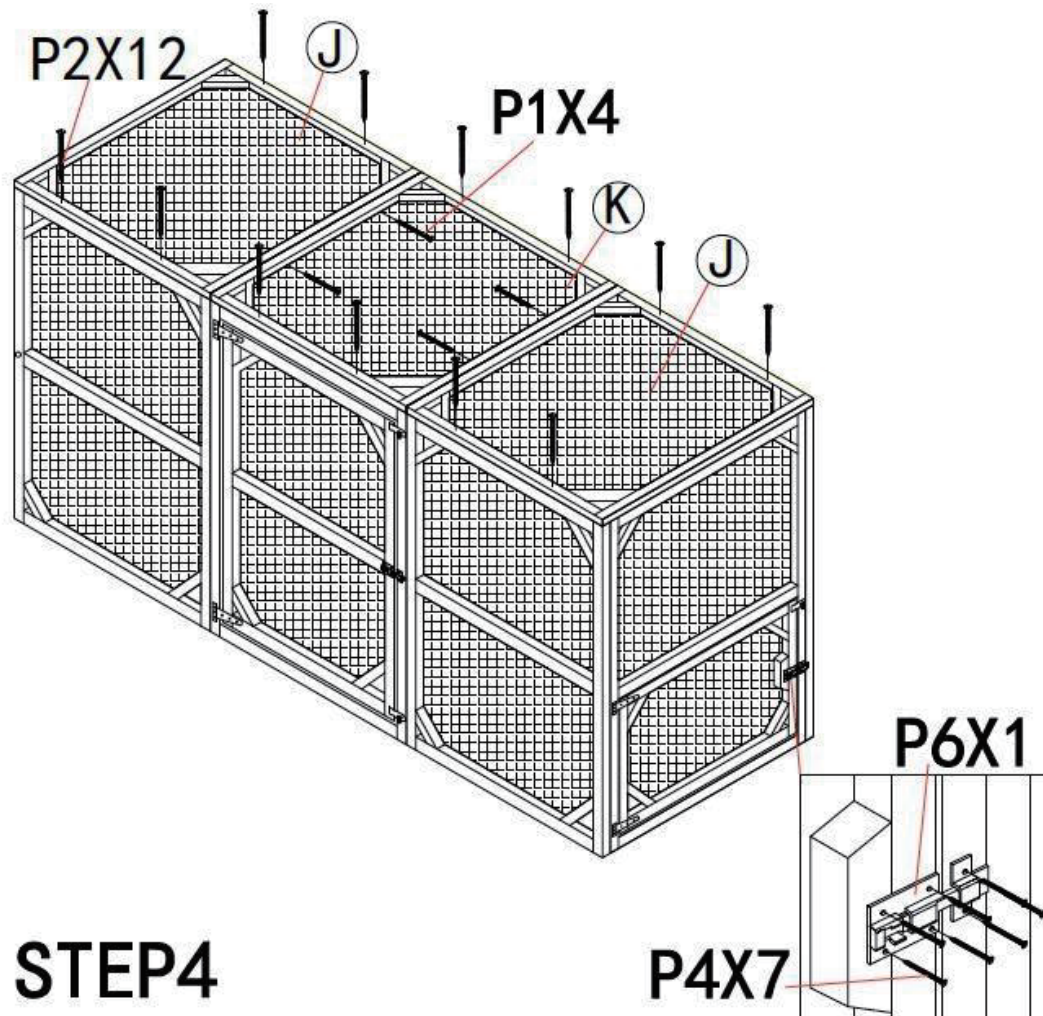


STEP4

- J and K are the panels needed for this step
- 4 screws from the bag labeled P1 will be used to connect the panels together and will be screwed in horizontally
- 12 screws from the bag labeled P2 will be used to screw the top panels into the bottom panels.
- Be sure to line up the panels before screwing

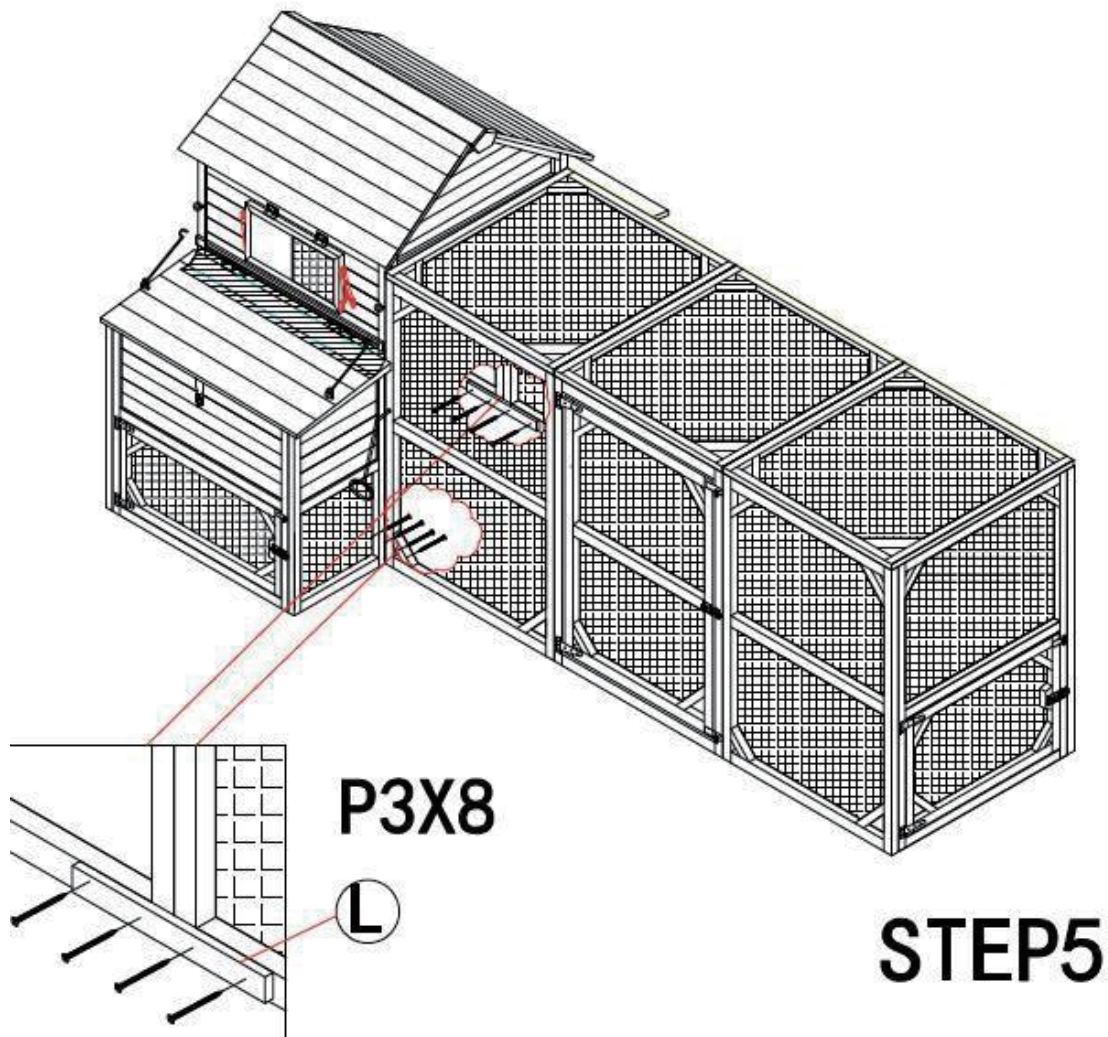

-Nice work! We pre-drilled holes and included two additional L pieces so that you can attach this run to your hen house (see diagrams above).

-Use 8 screws from the bag labeled P3 to connect the run to the hen house.

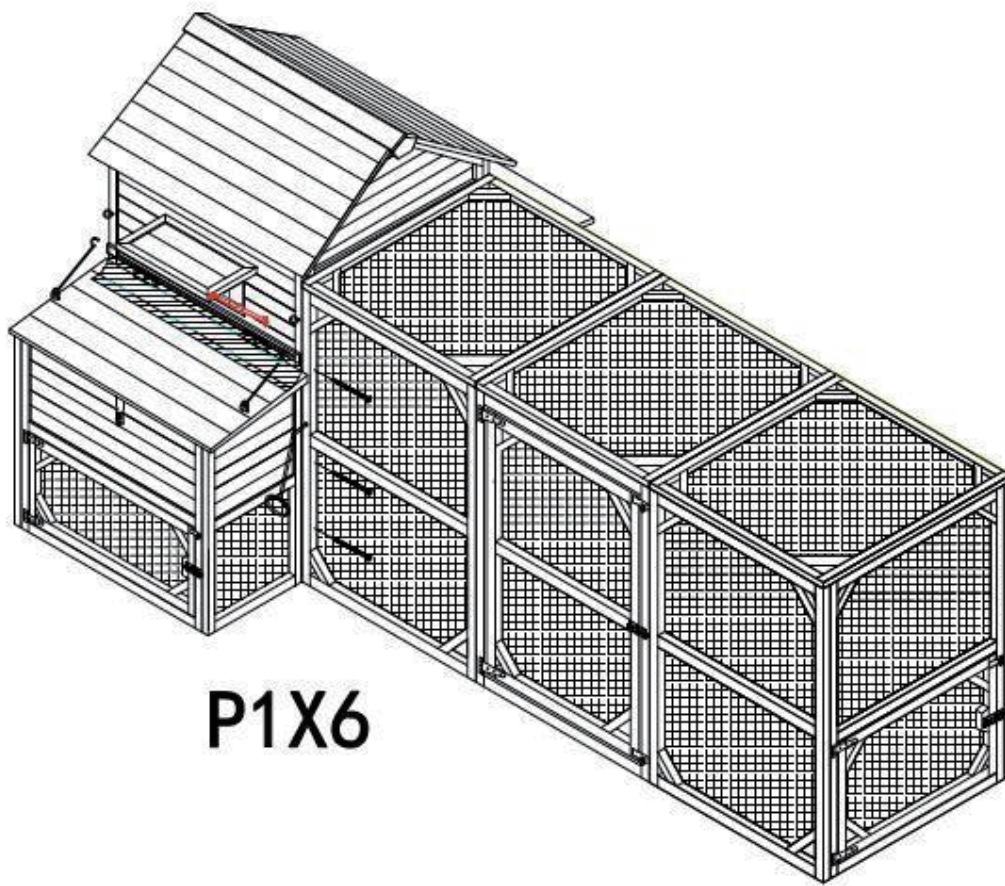

P1X6

FINISH

- Lastly secure the sides to the hen house and you have finished

It's official, you are all set and your girls have a new Run!!

We would love to be tagged in any pictures you post on Instagram or Facebook! If you like your coop please take a moment to post a positive review for us =)

Sincerely,

The Chicken Coop Company Family

PS Please maintain your coop/run. We recommend staining your coop/run at least twice a year. In addition we recommend tightening screws and using wood glue to secure your coop/run.

