




THE CHICKEN COOP COMPANY








Hello! We are excited for your purchase and to be on this journey with you! We are confident that you are going to love your new Run Roof! “Some assembly required” can make all of us a bit nervous... but do not fear! With these instructions it will be a breeze.


A power drill and someone to help hold the panels will make the process enjoyable and much easier. This Roof will fit on your Rhode Island XL Run and the Orpington and Rhode Island Walk-in Runs. The box may look beat up but it's the contents that matter.

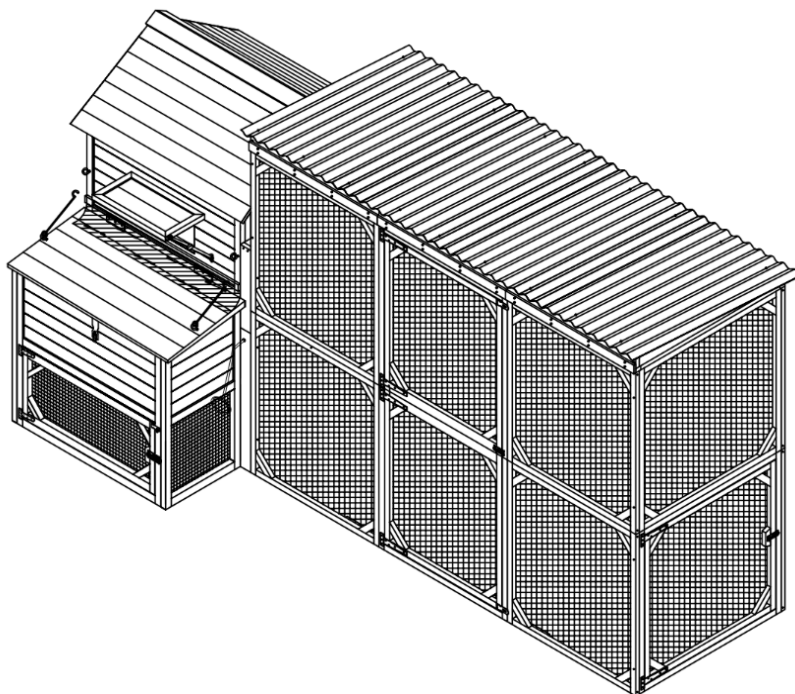- Unpack the boxes completely
- Identify all pieces (see key below)
- Wood glue is optional for this project - TiteBond III is a great option if you would like to go the extra mile.
- You will be referencing this key throughout the assembly process so keep it handy!




ROOF ASSEMBLY INSTRUCTIONS


P1	 3.5×60mm	9pcs+4spare	P2	 3.5×45mm	6pcs+4spare
P3	 3.5×30mm	24pcs+4spare	P4	 4.8×25mm	18pcs+1spare
P5	 3×16mm	4pcs+4spare	P6	 60×12mm	2pcs
P7	 M8	1pc			

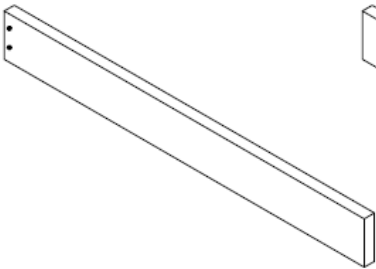


Ⓐ *2

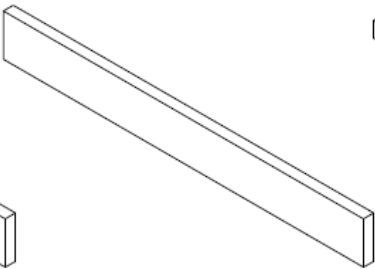


Ⓑ *1

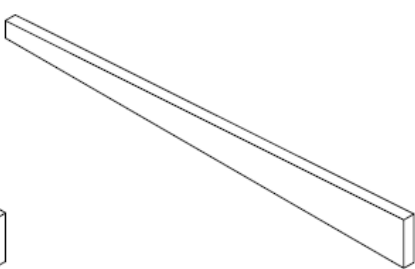


Ⓒ *2

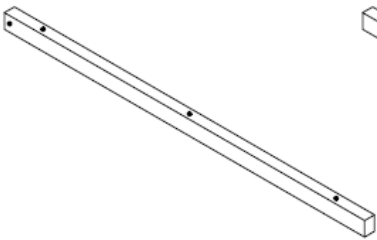


Ⓓ *2

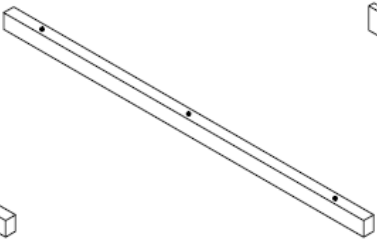


Ⓔ *1

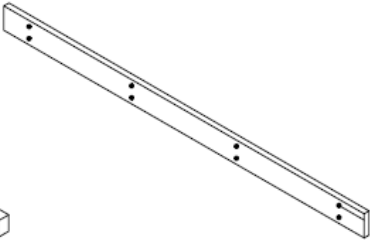

Ⓕ *1

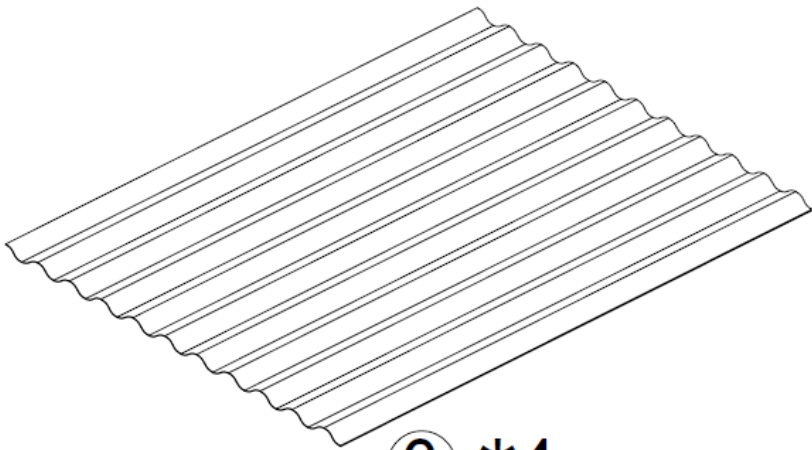

Ⓖ *4

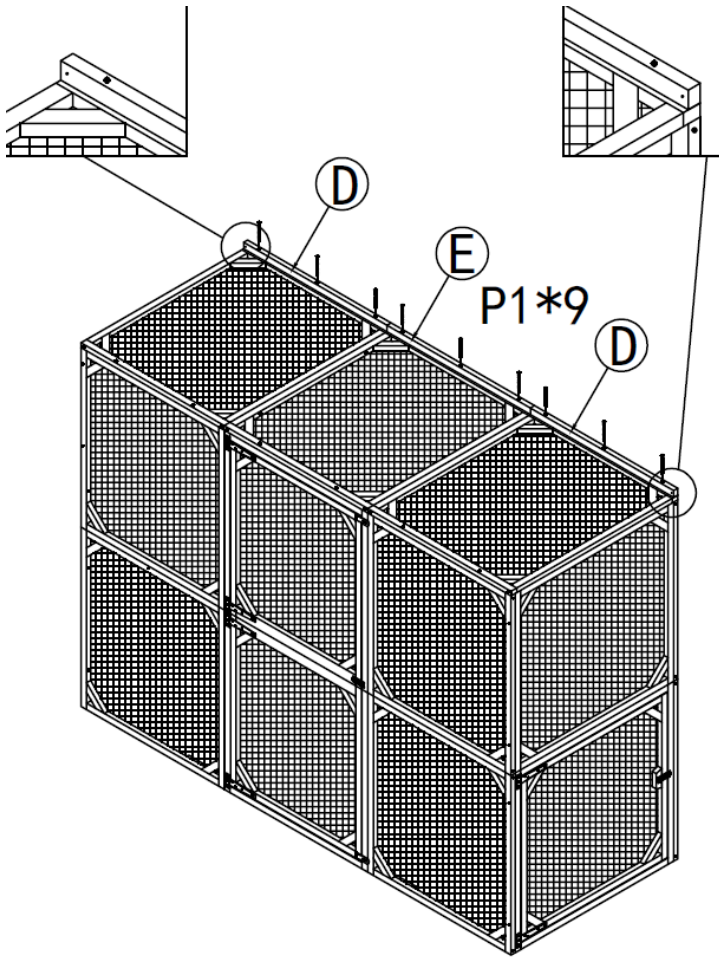

STEP1

BACK SUPPORT


Attach back support (2) Part D and (1) Part E using (9) P1 Screws. Align the first D part with the end of the Run and screw into place using pre-drilled holes.

STEP2


FRONT AND SIDE SUPPORT

Using the (2) P6 Metal straps, attach (2) Part A and (1) Part B with (4) P5 Screws. Part B should be in the middle. *The strap should be attached on the top half of the board.

Then secure Part C on both ends with (6) P2 screws. (2) screws in the front of each and (1) in the back of each

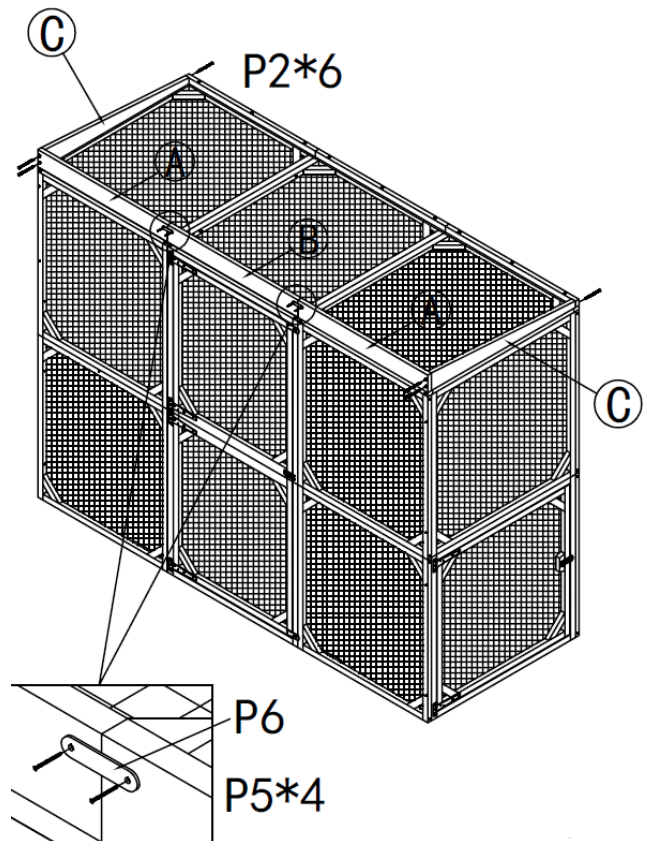

P3*24

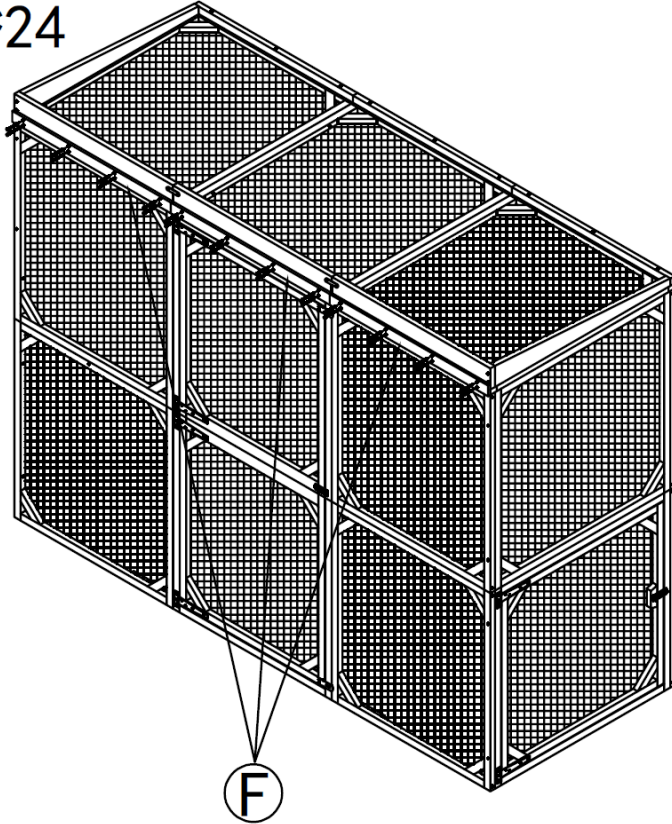

STEP3

INSTALL FRONT PLATE

Using (24) P3 screws, attach (3) Part F into place. The plates should be half on the roof support and half on the coop. These will secure the Roof to the Run.


FINISH

ATTACH ROOF PANELS

Attach the (4) G Roof Panels with (18) P4 Screws. The roof should overlap to avoid leaking.

**The (G) panes should have off the coop 1 or more inches

The screws are self tapping and with a power drill and P4 Drill bit, the screws will cut their way through the metal and into the supporting wood. No need to pre-drill holes.

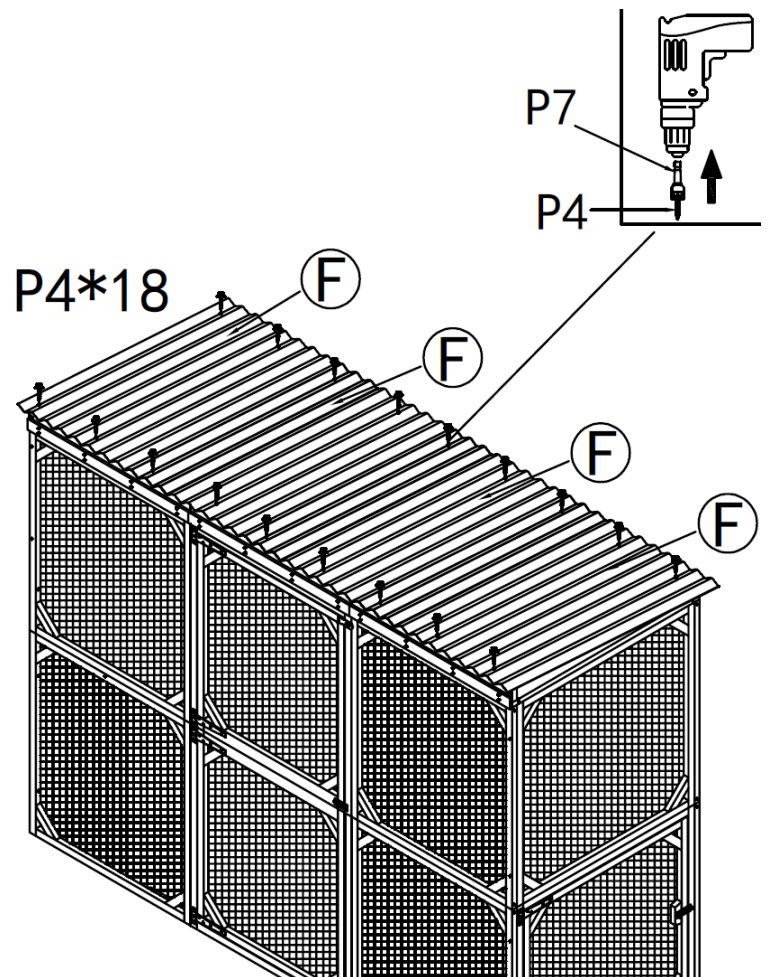

Congratulations! Your flock now has a new Roof to keep rain and snow out of the Run and you have the luxury of keeping the Run just a little bit cleaner!

We hope the directions were clear and you are pleased with the experience. We would love your feedback and to see your completed setup. You can post pictures on Instagram or Facebook or you can send pictures/ideas directly to us via email at family@chickencoopcompany.com. We're in this together!

We are excited to be on this journey with you and are in it for the long run. If you have any questions, don't hesitate to reach out.

Sincerely,

The Chicken Coop Company Family