




THE CHICKEN COOP COMPANY




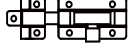

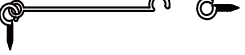





Hi! We appreciate your purchase and are confident that you are going to love your new Orpington Lodge Hen House!

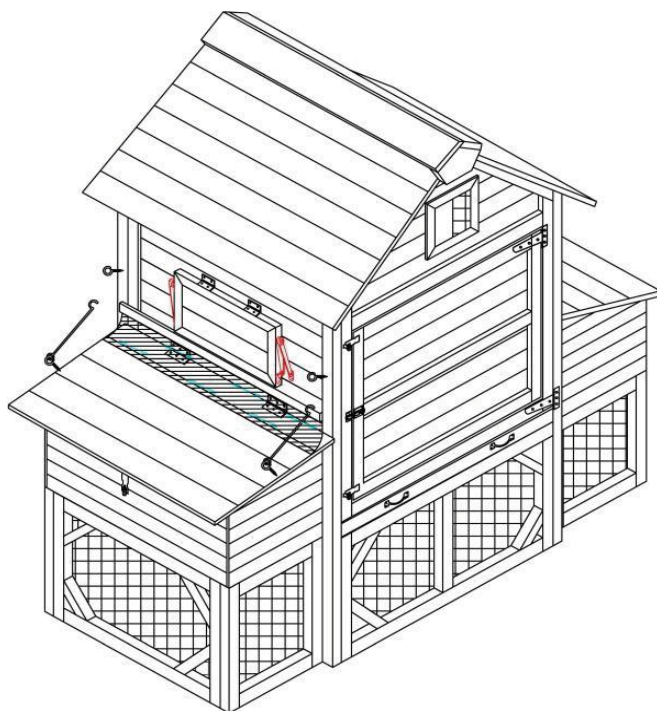
"Some assembly required" can make all of us a bit nervous

BUT don't fear, with these instructions and even referring to the assembly videos on our site it'll be a breeze!

Grab a power screwdriver and if you have someone to help you hold the panels, it will make the process a lot more enjoyable and easier =)
As we are shipping you this from Utah the boxes may have looked hammered, but it's the contents that matter. By applying another layer of lacquer, stain or seal you give the wood extra strength against the elements and you will eliminate any scratch on the wood or cosmetic concern from shipping. It's wise to put this additional layer on in the beginning too, since the wood will be settling in place!




P1	 0.14*1.77 inches 28pcs+4spare	P7	 1pcs
P2	 0.14*1.38 inches 14pcs+4spare	P8	 3pcs
P3	 0.14*0.98 inches 46pcs+4spare	P9	 4pcs
P4	 0.12*0.79 inches 16pcs+4spare	P10	 6pcs
P5	 0.12*0.55 inches 53pcs+4spare		
P6	  4pcs		

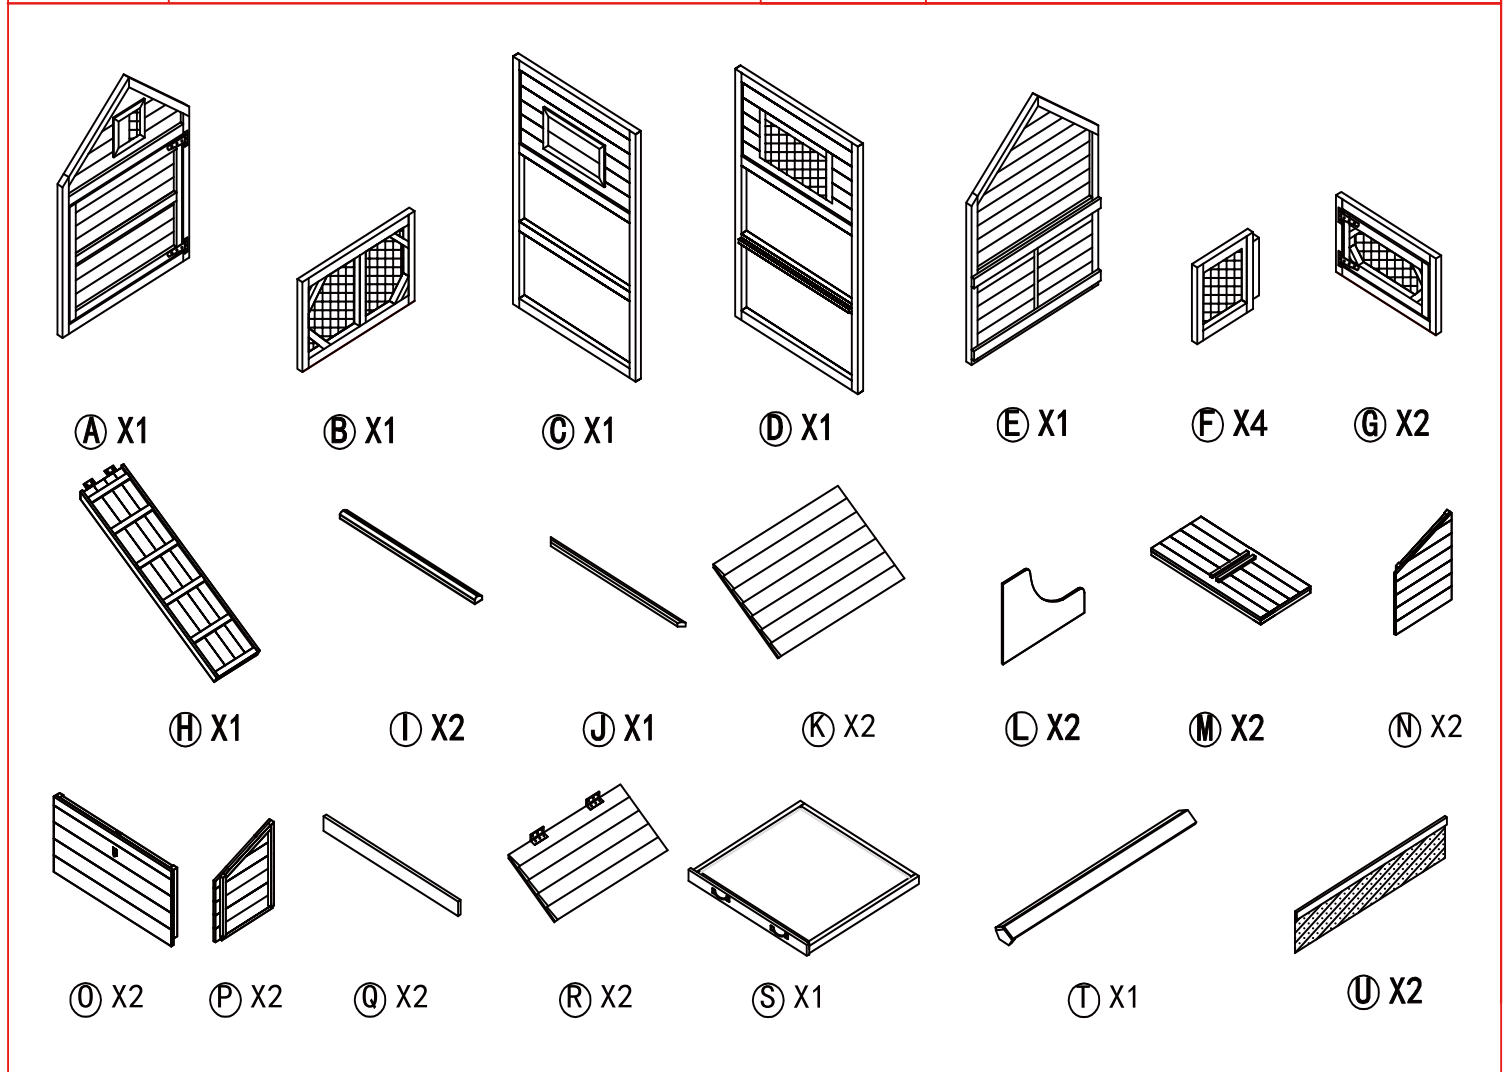


Lets get Started!

- Unpack each box completely
- Identify all pieces (see key below)
- You will be referring to this key throughout the assembly process so keep it handy!

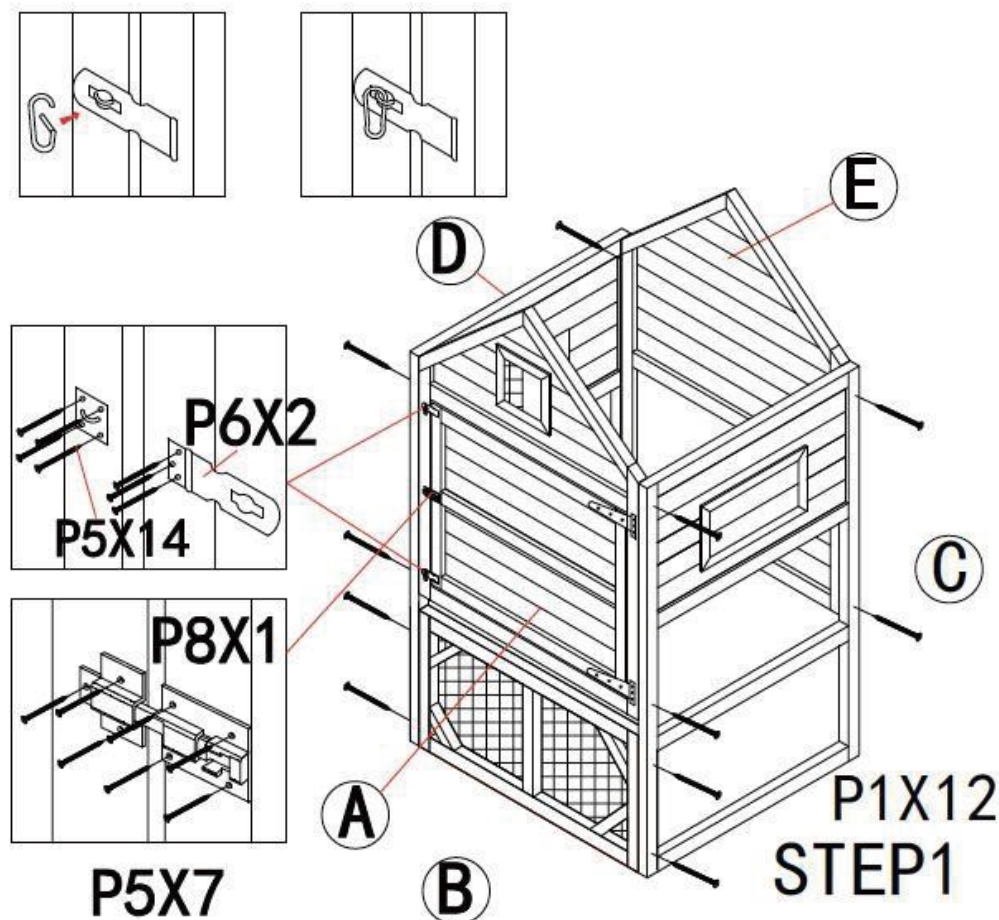


- A, B, C, D and E are the names of the panels (refer to the key).
- Use 12 screws from the bag labeled P1 to connect these panels.
- It is important to use the pre-drilled holes as the starting points.
- Be sure to line up panels before screwing together (make sure C and D are facing the right direction ... check to see which side has the pre-drilled holes).
- Start screwing from the top and work your way down on each panel DO NOT over tighten the screws.
- Use screws from the bag labeled P5 to secure the P6 and P8 latches.

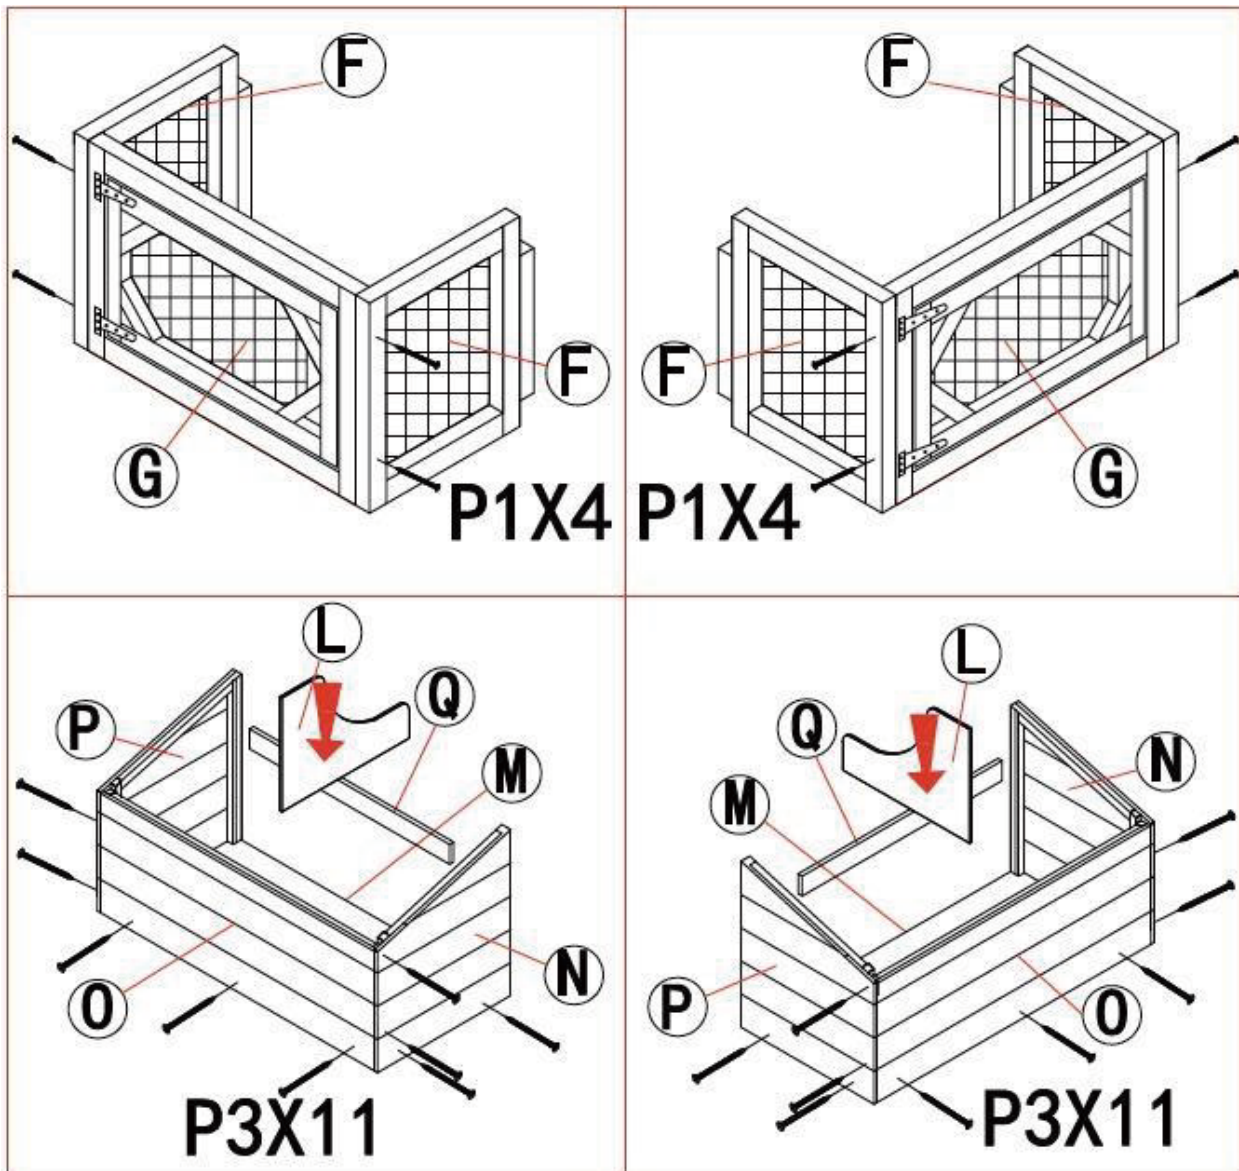


STEP2

- Gather the F and G panels, use screws from the bag labeled P1 to connect these panels as shown.
- To assemble the nesting boxes gather the following pieces:
O,P,L,Q,M,N.
- Follow the above diagram and connect the panels using screws from the bag labeled P3.

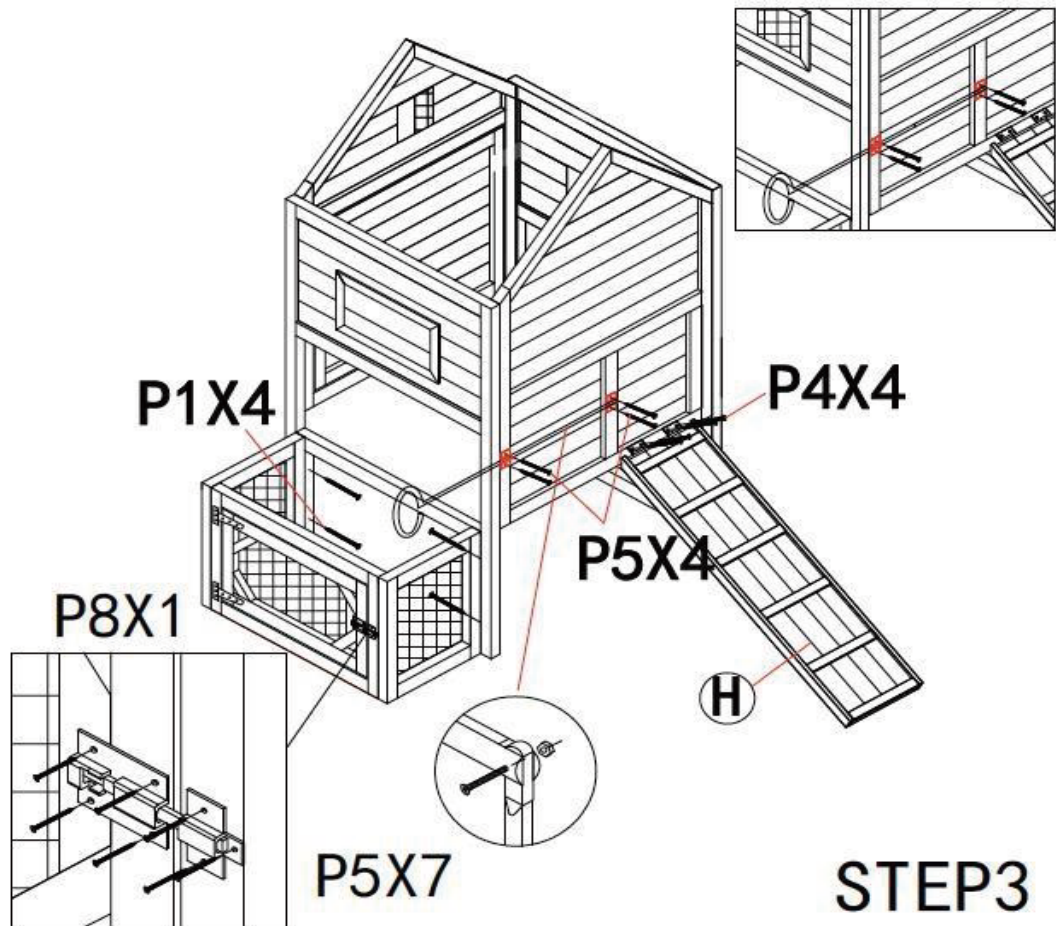


- Attach the nesting box base to the hen house using 4 screws from bag P1.
- Attach P7 (the metal handle that opens and closes the door) using screws from bag labeled P5
- Attach H (the ladder) using 4 screws from the bag labeled P4.

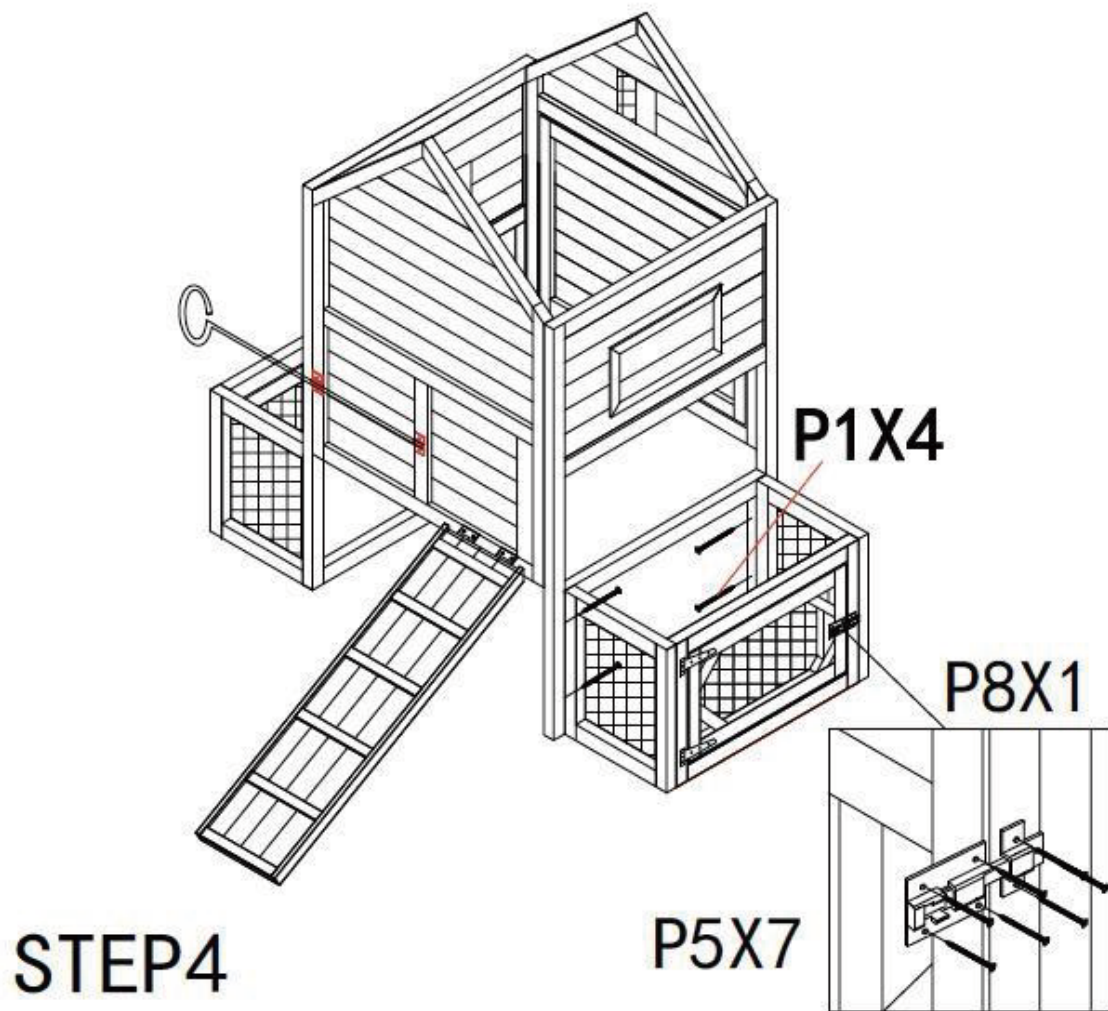


-Attach the nesting box base to the hen house using 4 screws from the bag labeled P1.


It's coming together! Remember refer to the assembly video at any point, it's a helpful tool!

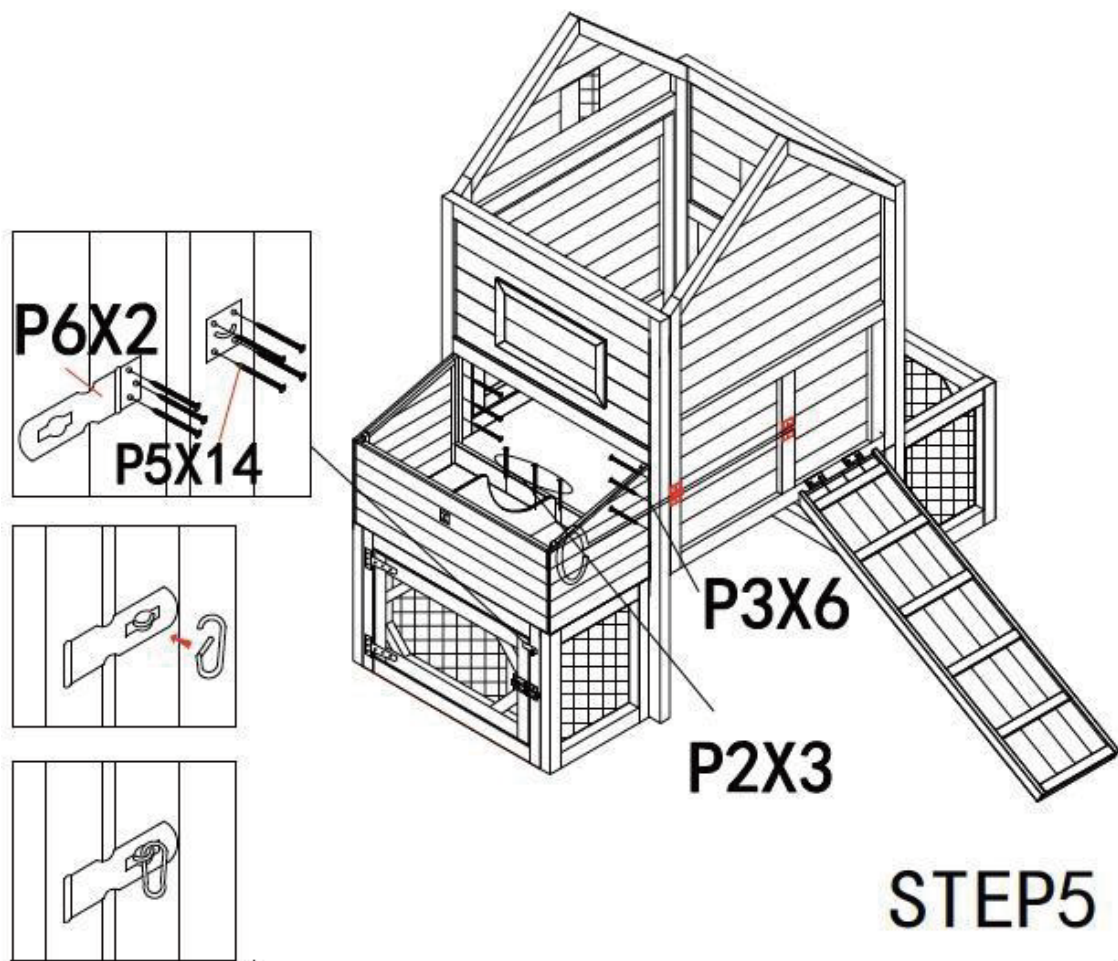

-Attach the nesting box to the coop and base using screws from the bags labeled P2 and P3 as shown in the diagram above.

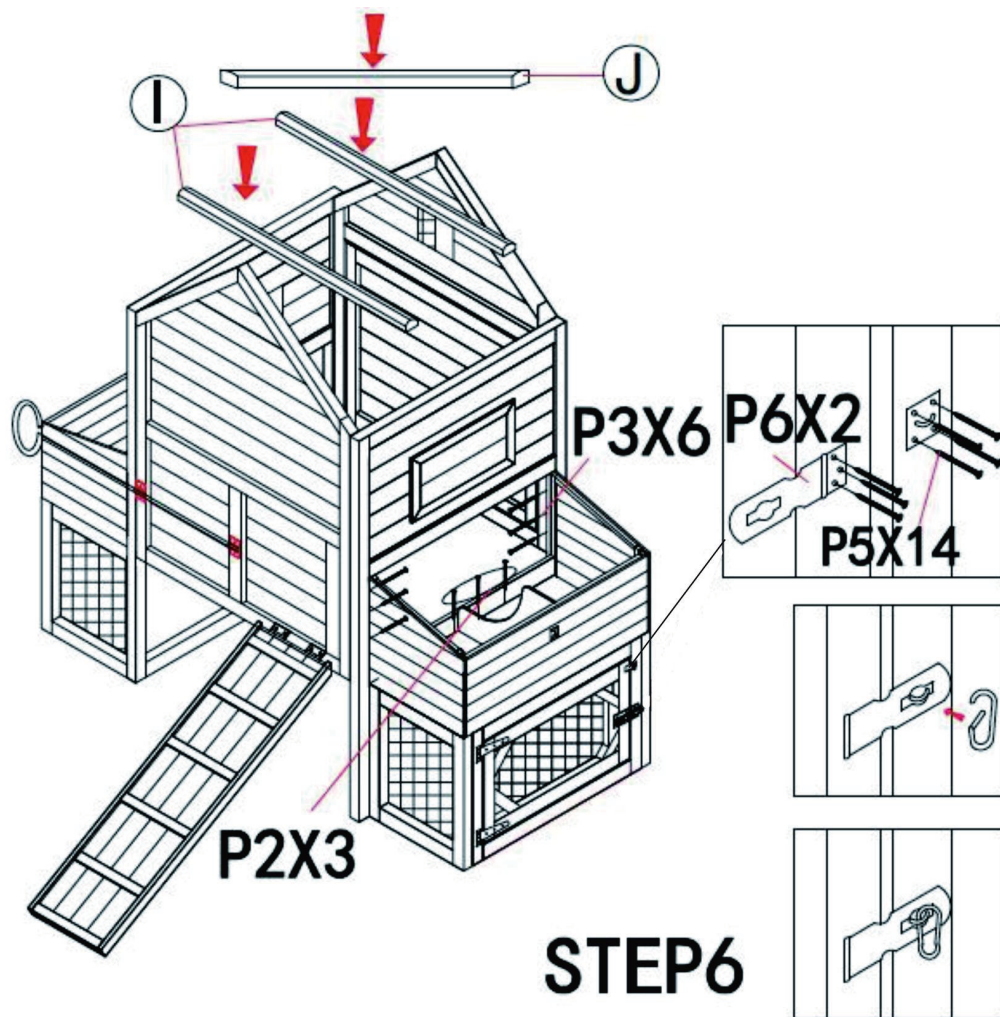

- Insert the three roosting rods.
- Attach the nesting box to the coop and base using screws from the bags labeled P2 and P3 as shown in the diagram above. Just like the other side

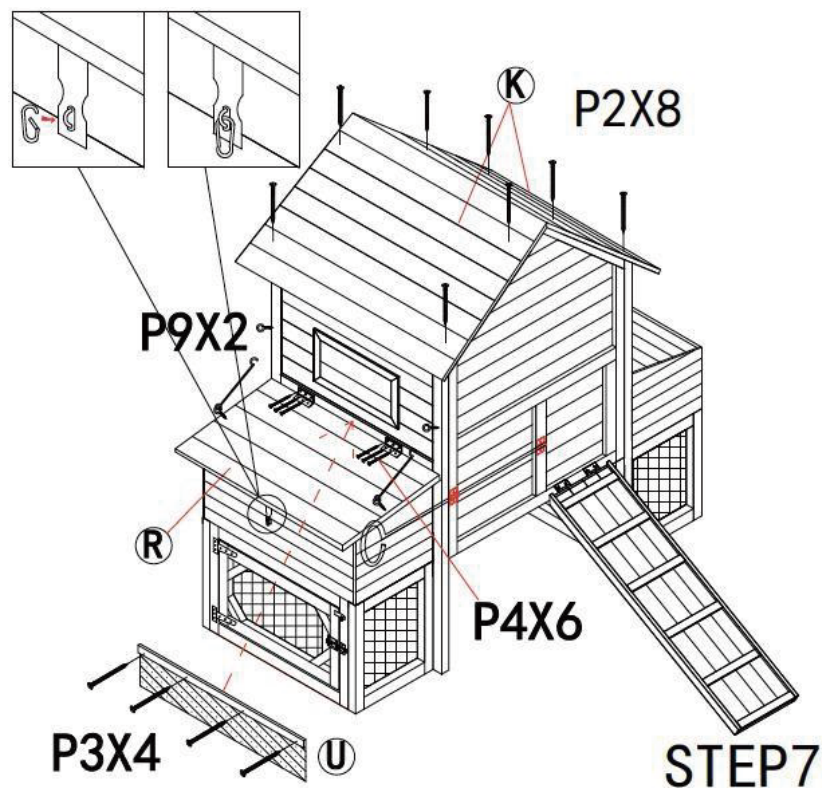


- Next grab K roof panels and R nesting box roof panels (refer to the key)
- Use 8 screws from the bag labeled P2 to secure the K roof panels
- Use 6 screws from the bag labeled P4 to secure the R nesting box roof panel
- Prior to screwing in the roof panels, line up both sides.
- Use 4 screws from the bag labeled P4 to secure U (the flashing)

*This flashing (piece U) should be installed just above where the nesting box roof lid connects to the hen house. This flashing will help keep the inside of the coop dry.

Follow the pre-drilled holes to assemble install P9

Be sure everything is lined up and secure prior to securing with the screws

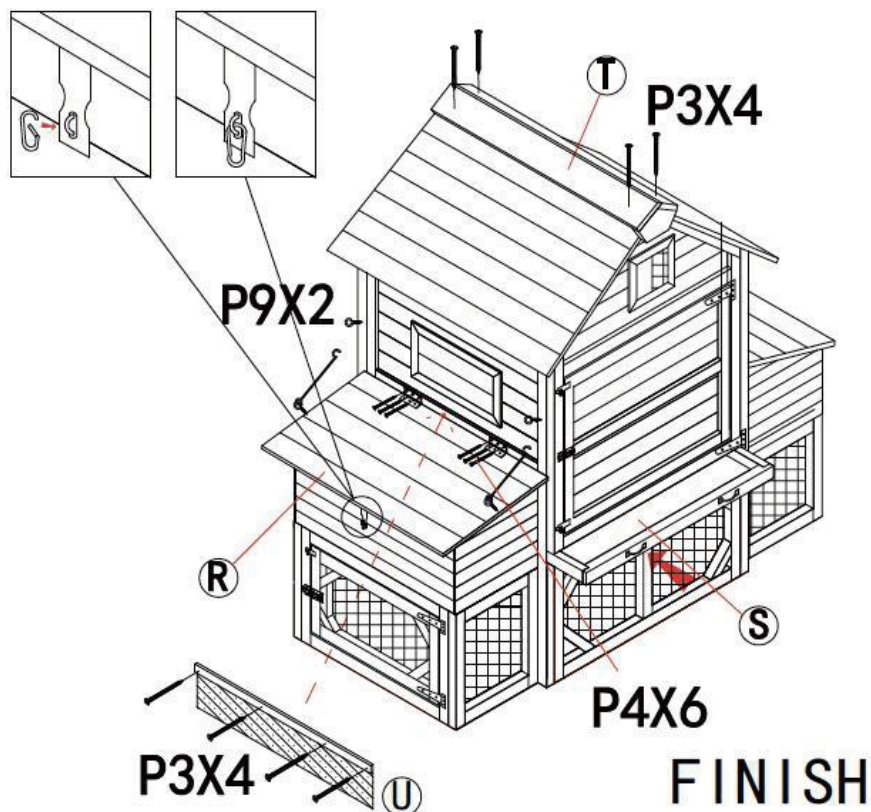

- Secure the roof cap (T piece) using 4 screws from the bag labeled P3.
 - Use 6 screws from the bag labeled P4 to secure the R nesting box roof panel
 - Prior to screwing in the roof panels, line up both sides.
 - Secure U (flashing) using 4 P4 screws.
- *This flashing (piece U) should be installed just above where the nesting box roof lid connects to the hen house. This flashing will help keep the inside of the coop dry.
- Follow the pre-drilled holes to install P9
 - Slide the poop tray in (S panel)

If at some point you decide to add a run extension to your hen house you will use 2 screws from the bag labeled P1 on each side of the run to secure the run panels to the Hen House. You will then use an R piece on both sides of the run and secure it using 4 screws from the bag labeled P5!

Remember you can purchase additional runs and hen houses on our website to create a custom coop and expand as you grow your flock=)

It's official, you are all set and your girls have a new home!!

We would love to be tagged in any pictures you post on Instagram or Facebook! If you like your coop please take a moment to post a positive review for us=)

Sincerely,

The Chicken Coop Company Family

P.S. Please maintain your coop, we recommend staining your coop, tightening your screws and using wood glue to secure your coop when you feel it needs it.

