
PIRGEAR

Battery Box/Utility Door Lock Set Installation Guide

BATTERY BOX LOCK

- 1. Open the battery box and unscrew the retaining nut on the underside that holds the lock in place. You may also have to remove the acorn nut that holds the cam in place, and the cam itself. Remove the lock completely.
- 2. Choose one of the new locks with a long cam. (The shorter cam lock is for the water fill only.) Compare the length of the cam to the cam on the lock you removed. If it's too short, replace the cam with the extra-long spare cam that was included with your kit.

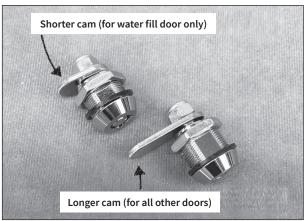


Follow steps 5-9 below.

ALL OTHER LOCKS (WATER FILL, SHOWER DOOR, STABILIZERS, MACERATOR, ETC)

- 1. Open the utility door with your existing key.
- Using a small flat-bladed screwdriver, press on the inside top of the lock where you see a strip of black metal. Push the lock outward as you do so, and it will pop out partially.
- 3. Repeat step 2 on the bottom of the lock. Now you can remove the lock.



- 4. Choose the lock you wish to install. Note that the water fill door requires the lock with the shorter cam. All other doors use the lock with the longer cam.
- 5. Remove the acorn nut, cam, and retaining nut from the lock. Be sure the black rubber gasket is in place.

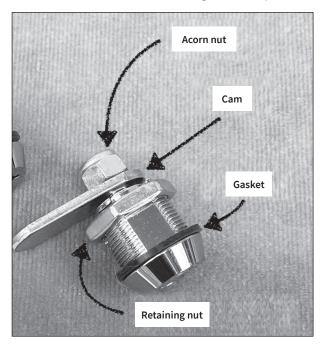

- Slide the lock into the hole left by the previous lock, and replace the retaining nut. Get it finger-tight only at this point.
- 7. Put the cam and acorn nut back on. Get the acorn nut finger-tight.
- 8. Test the installation by inserting the key and operating the lock. Be sure the cam is turning the right way to secure the door.
- 9. Once you're sure the lock and cam are oriented correctly, tighten the retaining nut ¼ turn more with a wrench or pliers, and tighten the acorn nut as needed.

If you have any questions, contact us at help@airgear.store for assistance.

HAPPY CAMPING!