

INSTRUCTIONS

SWIMRUN BACKPACK



DRY BAG BUOY

- ① MAKE SURE THE BAG IS FULLY DEFLATED BEFORE USE



- ② FILL THE BAG WITH YOUR DESIRED KIT THEN CLOSE THE RED STRIPS TOGETHER



- ③ ROLL OVER THE TOP UNTIL YOU REACH THE RIDGED 'FOLDABLE AREA'




- ④ FOLD THE CLIPS AROUND TO THE BACK AND PULL THEM TOGETHER TO ATTACH




- ⑤ INFLATE USING THE MOUTH PIECE ON EACH SIDE



- ⑥ ATTACH THE STRAPS TO THE LOOPS AT THE TOP OF THE BAG

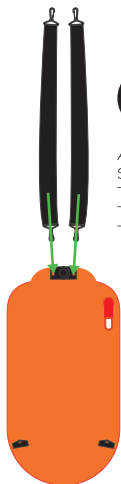

- ⑦ FINALLY, ATTACH THE WAISTBAND

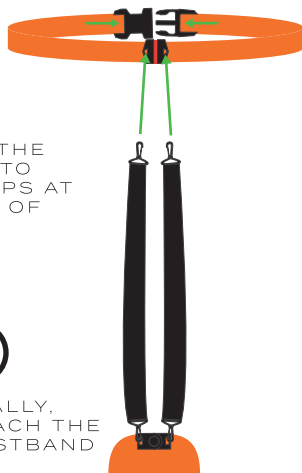

BACKPACK

- ① DETACH THE CLIPS FROM THE WAISTBAND
- ② ATTACH THE CLIPS TO THE LOOPS AT THE BOTTOM BACK OF THE BAG

