








B2C FURNITURE


MODERN HARDWOOD FURNITURE

PARIS 6 DRAWERS LOW CHEST ASSEMBLY INSTRUCTIONS

PARTS LIST			
No.	HARDWARE		Qty.
A	Spring Washer		4
B	JCBC Screw		4
C	Allen Key		1
D	Dowel		6
E	Screw		8

PARTS LIST		
No.	PART LIST FOR FRAME	Qty.
1	Body	1
2	Legs	4

Assembly Tips:
 Remove hardware from box and sort by the size parts and hardware for frame and drawers to check that all hardware and parts are present before assembling. Follow instructions below in proper sequence to ensure fast, easy and correct assembly.

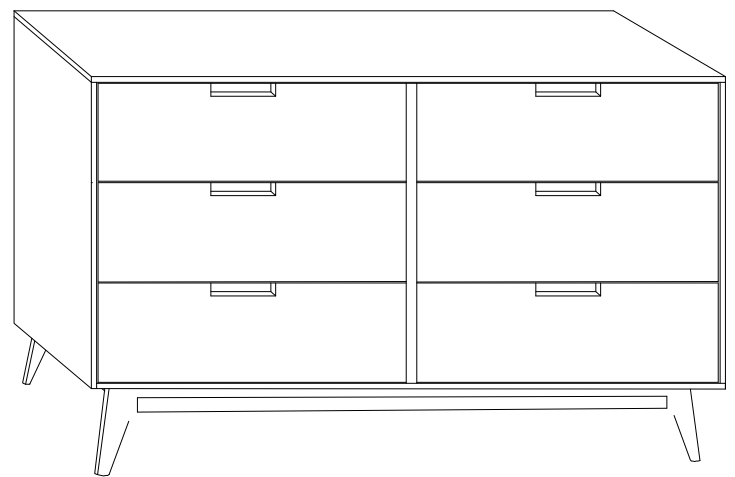

Recommended for assembly:

