



SHADE™


# TALL-CONNECT INSTRUCTIONS

## EASY DOES IT.

These instructions are included to make setup easier when your anchors are very high and out of reach.


***If your anchors are well within reach, you can skip this.***

### STEP 1 TIE 6" LOOP

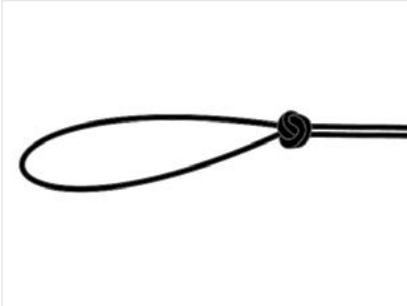


Tie off 6" loop at end of paracord.

### STEP 2 TIE LOOP TO LATCH

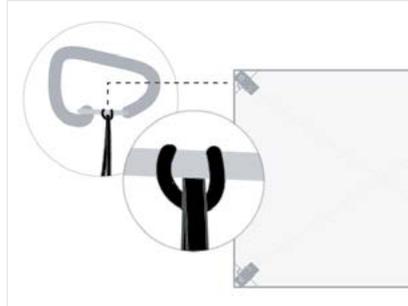


Use loop to tie girth hitch knot to latch on carabiner (on underside of shade).

### STEP 3 FEED PARACORD THROUGH

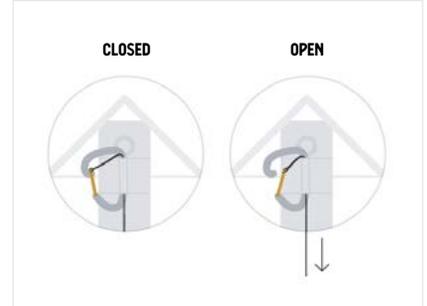


Move knot to top of latch and feed paracord through fabric loop holding carabiner.

### STEP 4 ATTACH TENSION POLE

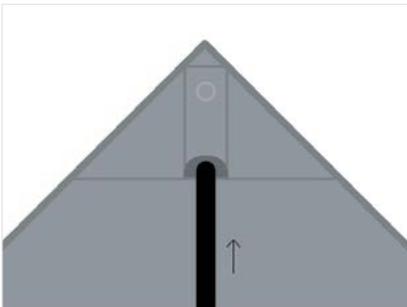

Flip shade over and insert tension pole in corner pocket. This will allow you to hoist the carabiner up to your anchor(s).

### STEP 5 ATTACH CARABINER TO ANCHOR

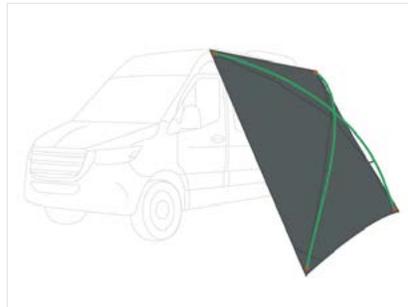

Pull paracord down while using tension pole to reach your anchor. Release paracord to latch carabiner to anchor.

***Repeat steps on additional anchors if needed. Feed paracord through loops on underside of MoonShade and tie off to keep out of the way.***

**YOU'RE ALMOST DONE!  
REFER TO ASSEMBLY INSTRUCTIONS  
TO FINISH THE SETUP**

More detailed instructions, including videos, setup tips, and FAQs can be found at [moonfab.com/setup](http://moonfab.com/setup)

## QUICK TIP

Often only one pull cord is needed. If affixing the shade fabric to the top of a tall van, for example, affixing a pull cord is helpful for attaching the shade fabric to the back corner of the van. The shade fabric corner that goes toward the front of the van can often be easily mounted/clipped when you have something to step up on (like stepping into the van through the door).

***Once you've created your pull cord, keep it attached for easy setup every time!***