
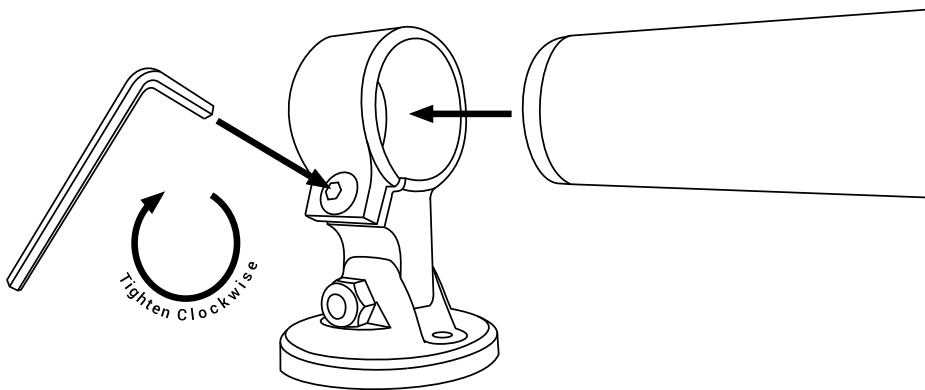


Monkey Bars Extension Kit

SX6155
11/21

Assembly

1. Loosen both clamps on each your cross bars using the 5/32 hex key and remove the crossbars from the bar clamps.
2. Unscrew the crossbars by twisting counter-clockwise.
3. Remove the plastic protective covers from the bar extension couplers and screw the bar extension couplers into the open end of each cross bar.
4. Screw the crossbar couplers into the open ends of the extensions. Twist firmly clockwise to fully seat the couplers.
5. Insert the crossbars back into the bar clamps, portion the clamps where appropriate for your vehicle, and tighten the bar clamps with the hex key.

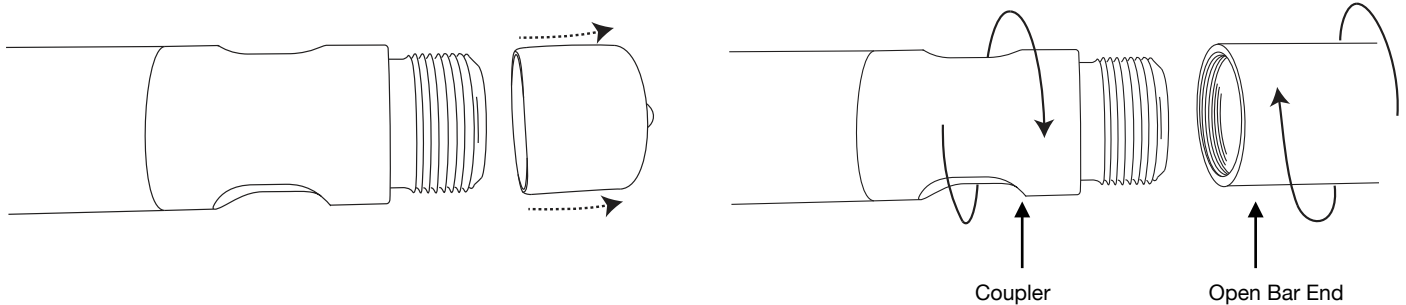

Designed and manufactured by:
SeaSucker, LLC
Bradenton, Florida
www.SeaSucker.com

