



STRING SAVER FLOYD ROSE SADDLE INSTALLATION GUIDE

Correct string radius is achieved using three saddle heights. Saddles are numbered (on the bottom of each saddle) **1** (lowest height), **2** (middle height) and **3** (highest), and should be installed in the following order:

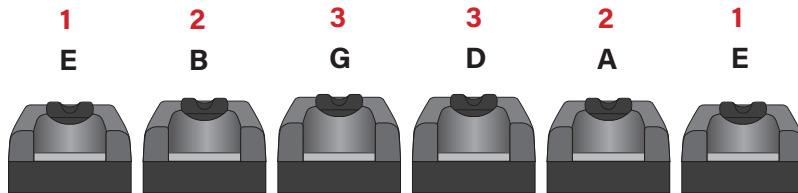

(Saddle heights exaggerated slightly for illustration)

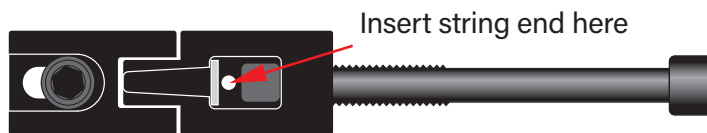

1. Insert string end in hole at base of string block cavity.
2. GENTLY tighten screw until it just touches the string.
3. Tighten with allen key an additional 1/4 TURN ONLY.

CAUTION: Excessive tightening is not required to keep string in place. Overtightening screw may crack the housing and void your warranty.