


REQUIRED TOOLS




Soft Mallet



Phillips Screwdriver

PRESS-FIT BUSHING DIMENSIONS

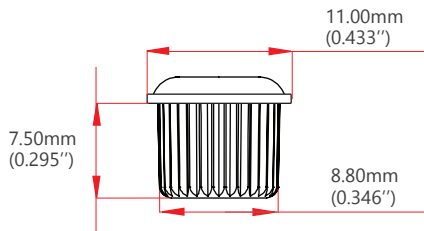

Press-fit Bushing

STEP 1

Remove your old machine heads, screws, and bushings.

STEP 2

Check the peg-head holes to determine if any modification is needed to accommodate the press-fit bushings provided (use reamer to widen holes if needed) - You can find templates at graphtech.com/support: Drawings and Installation Guides.

STEP 3

Press in the new bushings.

STEP 4

Mount tuners & align with headstock (using a straight-edge if applicable).

STEP 5

Use fine tip marker or center punch to mark screw location.

STEP 6


Remove tuner and drill small pilot hole in marked locations.

STEP 7


Reinstall tuners with supplied screws.

IMPORTANT

- Ratio machine heads need to be installed to the matching string position. Each machine head is numbered 1 to 6. 1=High E, 2=B, 3=G, 4=D, 5=A, 6=Low E

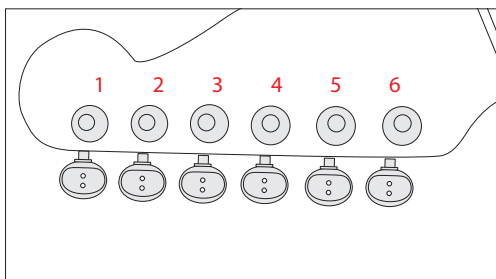

SIX IN LINE RIGHT HANDED

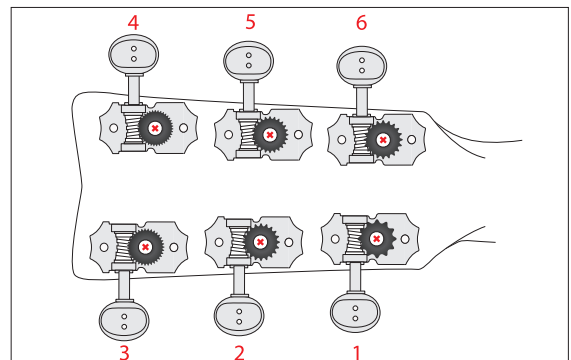

3 + 3 RIGHT HANDED



RATIO MACHINE HEADS WEBPAGE