

2 in 1 Remote Dog Training Collar & Automatic Bark Control Collar

User Manual



Pet Tech Australia

Please read this entire guide before using

Main Features

- 1.2 in 1 Remote Dog Training Collar & Automatic Bark Control Collar, swap between modes with one 'click'
2. Maximum remote range up to 1,000m with line of sight & without interference.
3. On/off switch on the remote prevents accidental 'pocket' signals.
- 4.3 training modes: Tone/Vibration/Static.
- 5.1-100 Adjustable intensity levels for Vibration and Static Stimulation.
6. IPX5 water resistant receiver and transmitter (weatherproof).
7. Receiver has a built in 650mAh ultra-large capacity lithium battery.
8. Train up to 3 dogs with one remote transmitter.
9. Rechargeable receiver and transmitter.


Packing List:

- 1 x Handheld Transmitter
- 1 x Receiver
- 1 x Nylon Collar
- 1 x Wrist Strap
- 1x USB Charging Cable
- 2x Long Contact Points
- 2 x Long Silicone Case
- 2 x Short Contact Points
- 2 x Short Silicone Case
- 2 x Anti-abrasion Buckle
- 1 x User Manual
- 1 x Test Light



Transmitter layout:


1. **Power Button** – Press once to turn the remote on/off. Long press to turn the auto bark feature on/off
2. **Tone Button** – Press once to emit a tone from the receiver
3. **Static button** – Press to send 'static stimulation' to the receiver
4. **Vibrate button** – Press to send 'vibration stimulation' to the receiver
5. **Increase/Decrease buttons** – Used to adjust the level of static and vibration from level 0-100
6. **Channel button** – used to swap between different dogs (if you have more than one receiver)
7. **LED light button** – To turn the small led light on/off

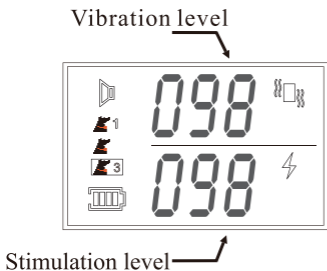

Remote transmitter

Receiver layout:

- 1.Press to turn receiver on and off, contact signal to the remote transmitter.
- 2.Flashlight:It has different shows when charging and work,the following will introduce it.
- 3.Contact points (static stimulation): choose a suitable length to fit for different thickness dog hair, can conduct static easier and train your dog conveniently.

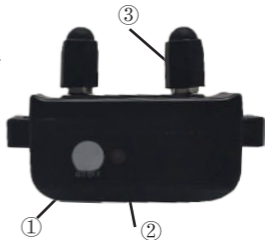

How to Us

Note: Please charge for 2 hours before using the product

1.Charge the remote transmitter:

- (1)Connect the charger cable to the charging port.
- (2)Plug the charger into a standard outlet.
- (3)The icon of the battery will flash during charging and be solid when charging is complete.

2.To turn the Transmitter on and off:

- (1)Press power button to turn the transmitter on/off the Transmitter.
- (2)When on, the backlight will stay lit for about 30 seconds, if no signals are received the backlight will turn off.

3.Charge the collar receiver:

- (1)Open the rubber cover, connect the receiver to a charger into a standard outlet.
- (2)The red light flashes slowly during charging, while the red light becomes solid, the device is fully charged

Battery notice

When the receiver is turned on, press the power button twice quickly to get a power indication.

Receiver beeps 5 times, representing 100% (80-100%)

Receiver beeps 4 times, representing 80% (60-80%)

Receiver beeps 3 times, representing 60% (40-60%)

Receiver beeps twice, representing 40% (20-40%)

Receiver beeps once, representing 20% (1-20%)

4.To turn the Receiver on

Press the power button once, the receiver will emit a short "beep" sound, this indicates it is turned on - the red LED light will flash once every 8 seconds.

5.To turn the receiver off

Press the On/Off Button once, the receiver will emit a longer "beep" sound and the led will stop flashing

Notice

- 1.Charge the remote transmitter and receiver at least 2 hours for the first charging.
- 2.The collar cannot receive any signals while it is charging.
- 3.The receiver will turn off automatically when battery energy is low.
- 4.This product is rechargeable. To extend battery life, please charge it once a month if it is not in use.

6.How to pair the Transmitter and Receiver

(this should be pre-done when you receive the device. No need to do this step initially)

- (1)Turn on the remote and select the desired channel by pressing the CH button.
- (2)Adjust the levels by pressing "+" or "-" button (ensure the level is above 1).
- (3)Turn on the receiver, the receiver will emit a short "beep" sound, and the red LED light will flash once time every 8 seconds.
- (4)Hold (long press) the power button of receiver for 2 seconds again, the indicator light will be fast flashing for 10 seconds, press a function button (static stimulation/vibration/ tone) within 10 seconds. The receiver will emit the corresponding sound, vibration or static stimulation, confirming that the pairing was successful.
- (5)If you have multiple receivers, simply choose a different channel and pair as per above.

The remote and receiver(s) should now be paired. Pairing is necessary to control the receiver.

You should then test each of the functions before attaching the collar to your pet.Notice



Notice

1. Please keep in mind the dog channel you choose – if you change channel the device will not work.
2. The remote will go into sleep mode after 30 seconds of no interaction. You can reactivate it by pressing any button.
3. When the transmitter turned off, it will not send any signal to the receiver.

Testing:

Static stimulation function test

Static stimulation function can be tested with the included test light. Press the static stimulation function button with the test light touching the prongs, the test light will shine if it is working correctly.



Vibration function test

Press the vibration function button, the receiver will vibrate.

Tone function test

Tone level cannot be adjusted.

Press the tone button, the receiver will emit a tone.

Auto Bark & Remote functions;

1.The 2 in 1 can also be used as Automatic Anti Bark Collar. Turn on the remote, press and hold the remote power button for 3 seconds. If the receiver beeps twice, it means the anti-bark function is off now. Press and hold the remote power button for 3 seconds, if the receiver beeps once, the anti-bark function is on now.

2. The remote dog training mode has been set as the factory default setting before the shipment.

3.Below is how the automatic anti bark mode works:

a.1st Bark – receiver will emit a 2 second tone

b.2nd Bark (within 30 seconds) – receiver will emit a 3 second tone

c.3rd Bark– receiver will emit a 5 second tone and a weak static charge

d.4th, 5th, 6t a& 7th Barks – 5 second warning tone and increasing static charge.

4.Automatic Protection Mode:

No matter how many times the barking device activates, it will reset automatically and return to the initial standby state when the dog stops barking for 30 seconds.

5.In order to protect the dog, the indicator light will enter into a fast-flashing state if the device gets to the 7th bark, and the barking device will stop working for 1 minute and enter into the initial standby state.

How to Wear Receiver Collar Correctly

1.Correct receiver position helps healthy and effective pet training. Receiver should be placed on bottom of your pet's neck, and the probes must contact pet's skin directly.

Putting the conductive silicone covers on the prongs will reduce the static shock level



2.If your pet has a thick/long coat you might need to use the longer probes.

3.The anti-abrasion cushions can reduce friction on the neck. We suggest using these from time to time to give the neck a rest. Note – if you only use vibration mode, these can be used in place of probes (they are not conductive).



4. The space between Receiver Collar and Pet's Neck shall be maintained to a finger distance, can't be too loose, otherwise static effectiveness shall be badly influenced.



Regular Maintenance

- 1.Please examine regularly to ensure tightness collar.
- 2.Clean the probes with to remove dirt & oil regularly.
- 3.Examine your pet's neck to ensure there is no rubbing/friction issues.

Frequently Asked Questions (FAQ)

Q: What age is this recommended for?

A: Not recommended for use on puppies younger than 6 months.

Q: Once my pet is trained and has been obeying my commands, is it still necessary for my pet to continue to wear the Receiver Collar?

A: You may need to reinforce your pet's memory with the Receiver Collar from time to time – this really depends on the dog.

Q: I want to test Static Stimulation function of Receiver Collar on my finger, but it does not work, is anything wrong?

A: If you test the Receiver Collar on yourself, please touch the 2 probes at the same time, touching only one screw cap (electrode) will not work.

Q: What's the function of anti-abrasion cushions?

A: 1. Use the anti-abrasion cushions can prevent skin abrasion when wearing the probes for too long. It can also be used to ensure the collar will not shock as they are not conductive.

2. Some dogs learn to behave while wearing the collar – and lots of owners just need to put the collar on the dog for the dog to behave. If you get to this point – use the cushions for comfort. There is no need for the probes if the collar is being used in this way.

Q: What do I do if my pet's neck becomes red and irritated?

A: Discontinue use of the pet training systems for a few days. If the condition persists beyond 48 hours, see your veterinarian. Even if the skin returns to normal, monitor your pet's skin condition closely.

Q: Can I attach a leash to the Receiver Collar?

A: No. This can result in pulling the probes too tightly against your pet's neck. Use a separate collar placed above the Receiver Collar.

Q: How long can I leave Receiver Collar on my dog?

A: The Receiver Collar is not designed to be for more than 12 hours out of every 24-hour period. If on longer, you are advised to examine your pet regularly.

Q: How long should I process my training session for my pet?

A: Training sessions should be kept positive and short, it is better for about 10-15 minutes long each time.

Q: What are the proper levels of Vibration and Static Stimulation for my pets?

A: Try to find the best suitable levels of Vibration and Static Stimulation for your pet starting from the lowest level. Start low, only go up if necessary.

Legality – Please be aware of the Australian state-based laws. This device is not permitted for use in all states. It is up to you to be aware of this. Pet-Tech does not assume any liability for misuse.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However; there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.