Care Instructions



Keep out of direct sunlight.



When necessary, clean both interior and exterior surfaces with lint free cloth.



Only place dry objects in sanitizing bay.

Warranty

We stand behind the quality of our product. We offer a 1-year limited warranty on every PhoneSoap product as well as a lifetime warranty on the UV-C bulbs. Exclusions and limitations may apply.

To view the full warranty and return policy visit: phonesoap.com/warranty

By using this product, you agree to the Legal and Privacy Policies as stated on our website at phonesoap.com/legal

Please contact us with any questions or concerns www.phonesoap.com/contact



PhoneSoap LLC 1837 S East Bay Blvd Suite 201 Provo, UT 84606 cs@phonesoap.com (866) 432-0525



CAUTION

The manufacturer is not responsible for any interference or damage caused by unauthorized modifications to this equipment UV light can be irritating to the eyes and skin. This device has been designed to contain UV exposure. Do not attempt to look directly at the UV lamp while it is on. UV light can potentially cause discoloration with continuous, prolonged exposure to white or lightly pigmented plastics.

FCC STATEMENT

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPPRATE THE FOLIMENT

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART IS OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS COUPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CALISE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS

HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MFASILIES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- · INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

FCC RADIATION EXPOSURE STATEMENT

THIS EQUIPMENT COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE. (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

WARNING: THIS PRODUCT CONTAINS A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. WWW.P65WARNINGS.CA.GOV

Let's get started.



Ready to sanitize, right out of the box.







Place object sanitizing bay.



Close door to begin




After 10 minutes. remove freshly sanitized object.



phnsp.co/home_setup



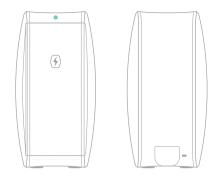



Top Button

 Touch and hold for 3 seconds to switch between automatic and manual disinfection modes.

> Automatic Disinfection Cycle begins once door closes and ends after 10 minutes.

 Manual Disinfection Touch button to start/stop sanitizing.

USB

 Use the USB ports located on the top inside front of the unit to charge your device while sanitizing.

Sanitizing Bay

Place objects centrally within the space.

Microsuction Feet

Remove plastic covering before use. To clean, rub with water and let dry.

Need help?

www.phonesoap.com/contact (866) 432-0525











