


# Isolate<sup>®</sup>

## Instruction Guide


---

Tip

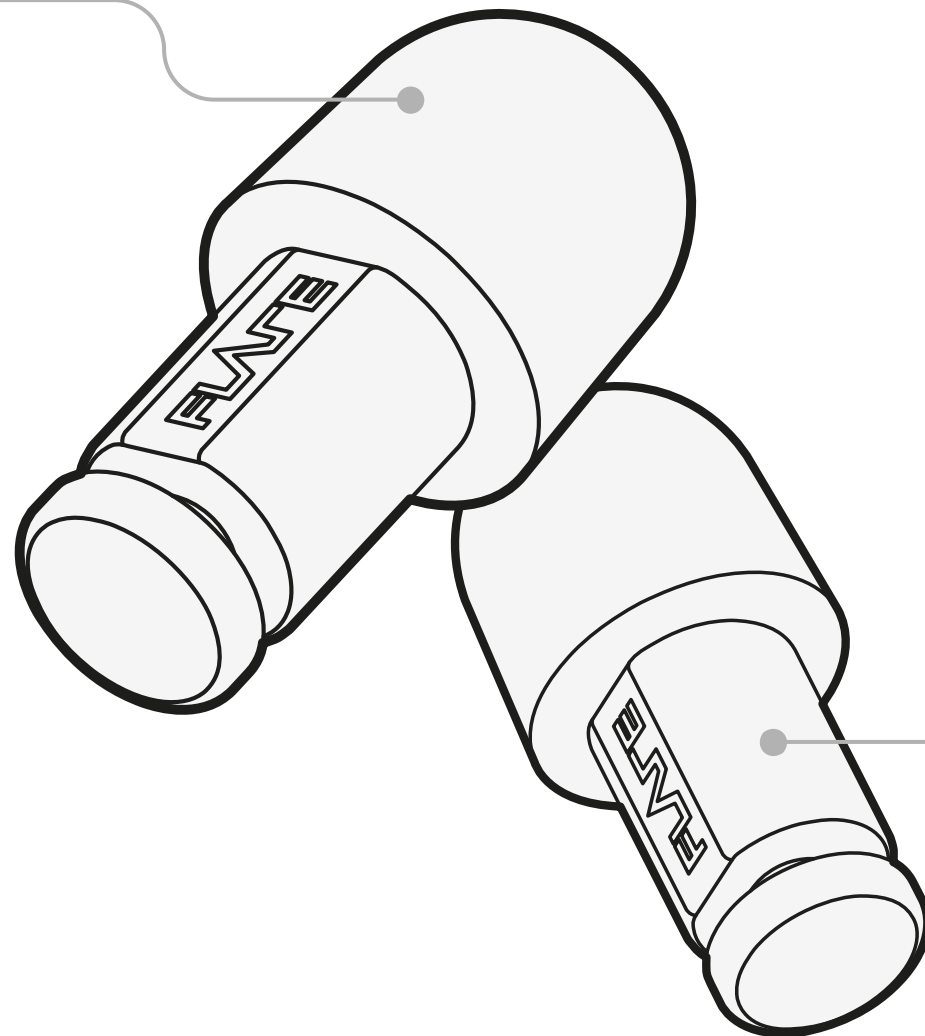


Stem


Isolate comprises of a stem and a tip.

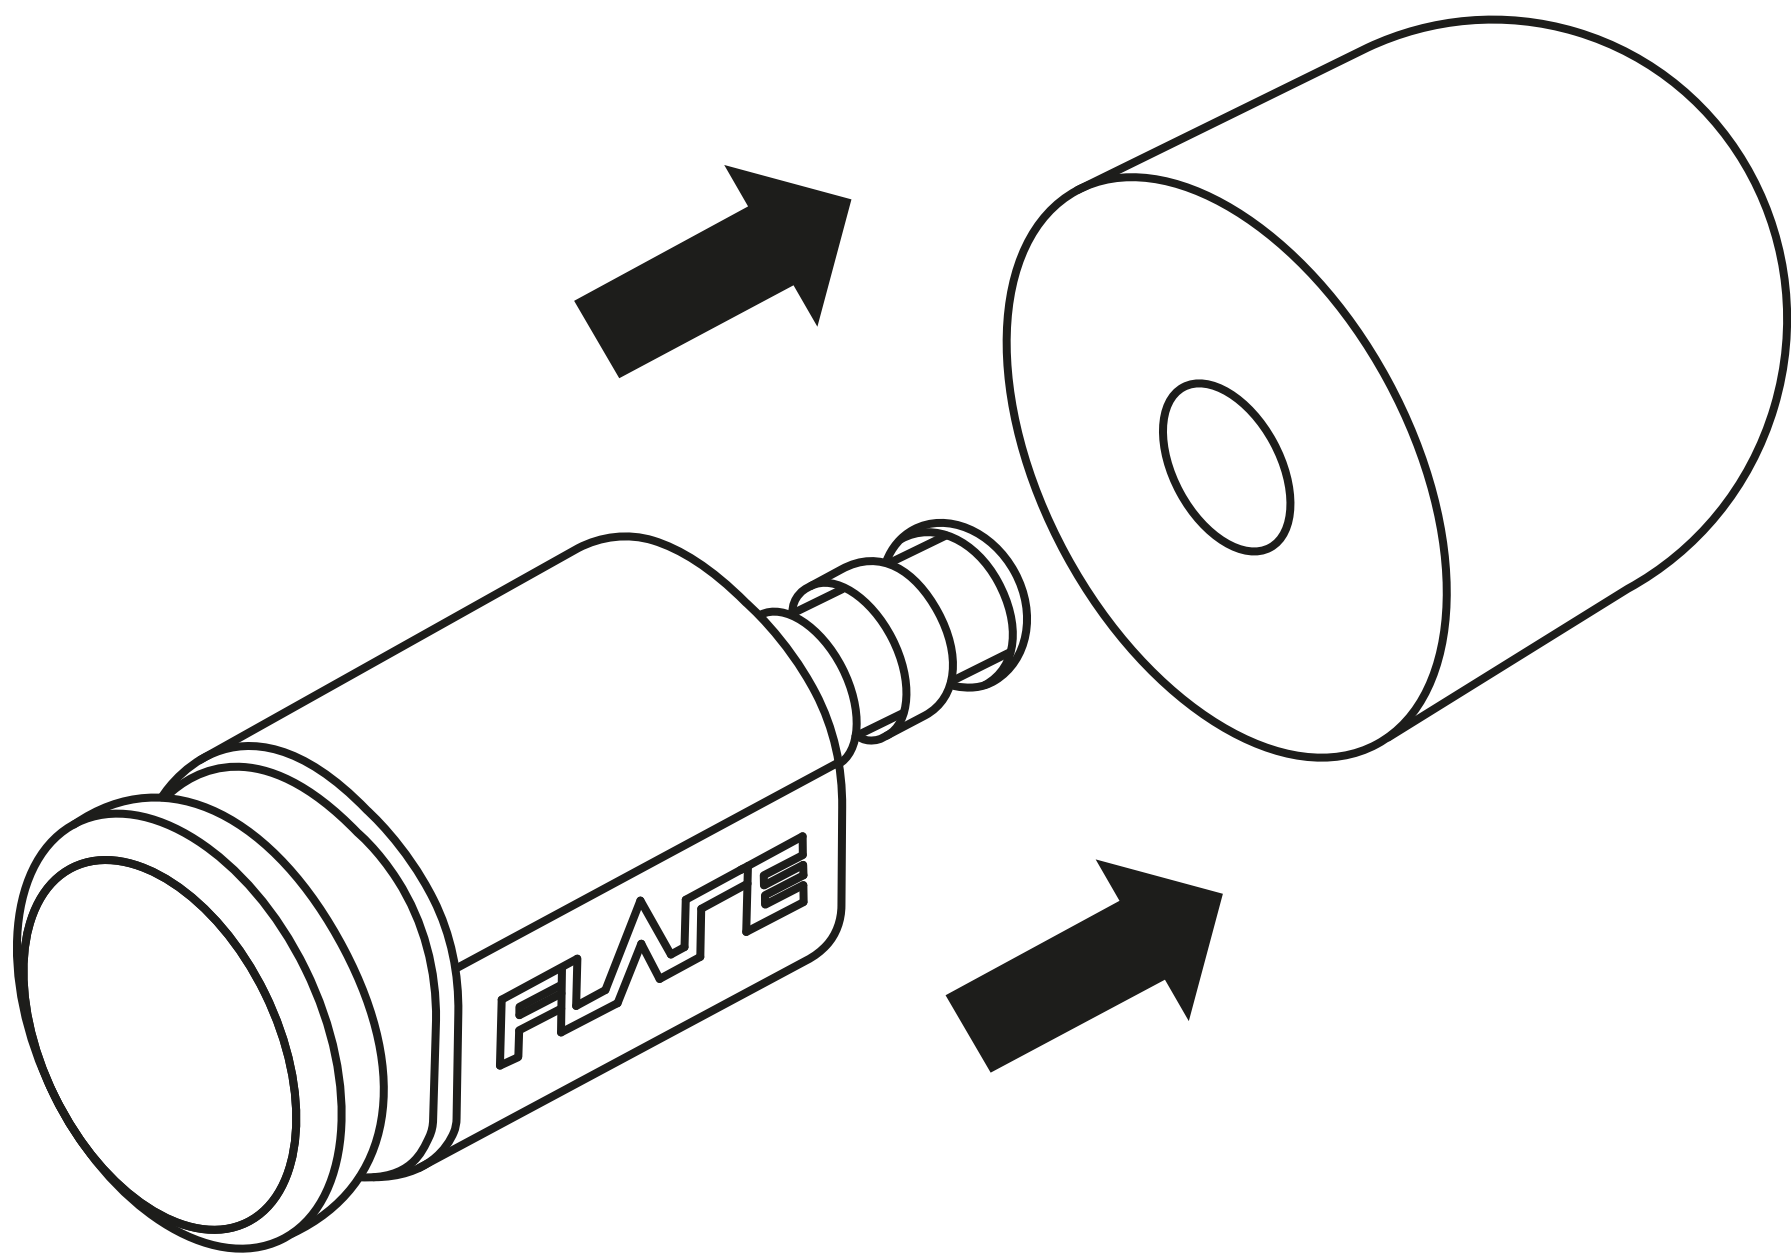


Select a suitable tip size  
(if you are unsure, start with  
the smallest tip) and attach  
it to the Isolate stem.

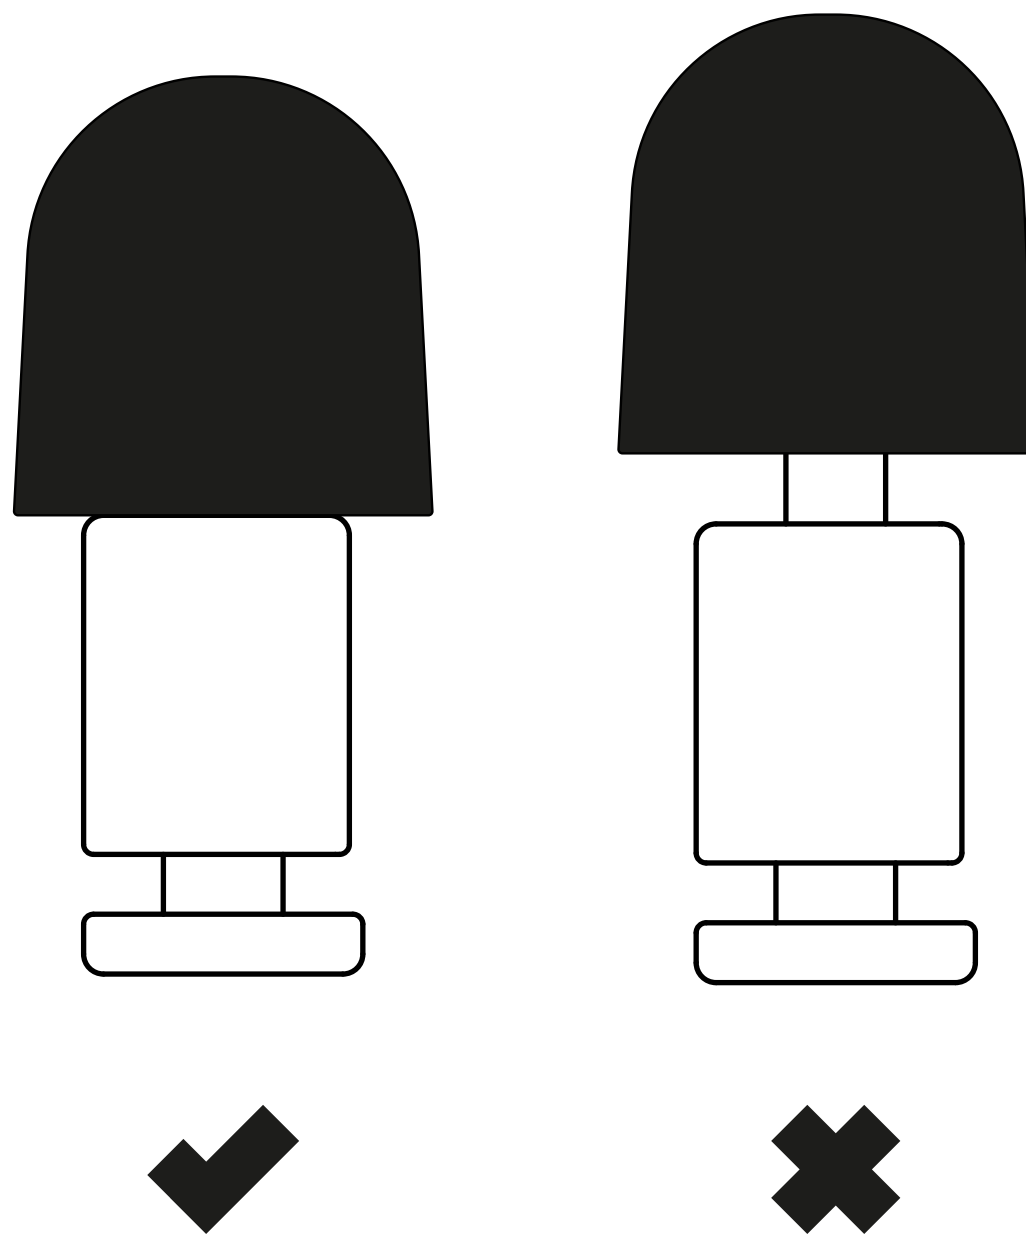

Push the tip on to Isolate  
leaving no gap between the  
tip and stem.

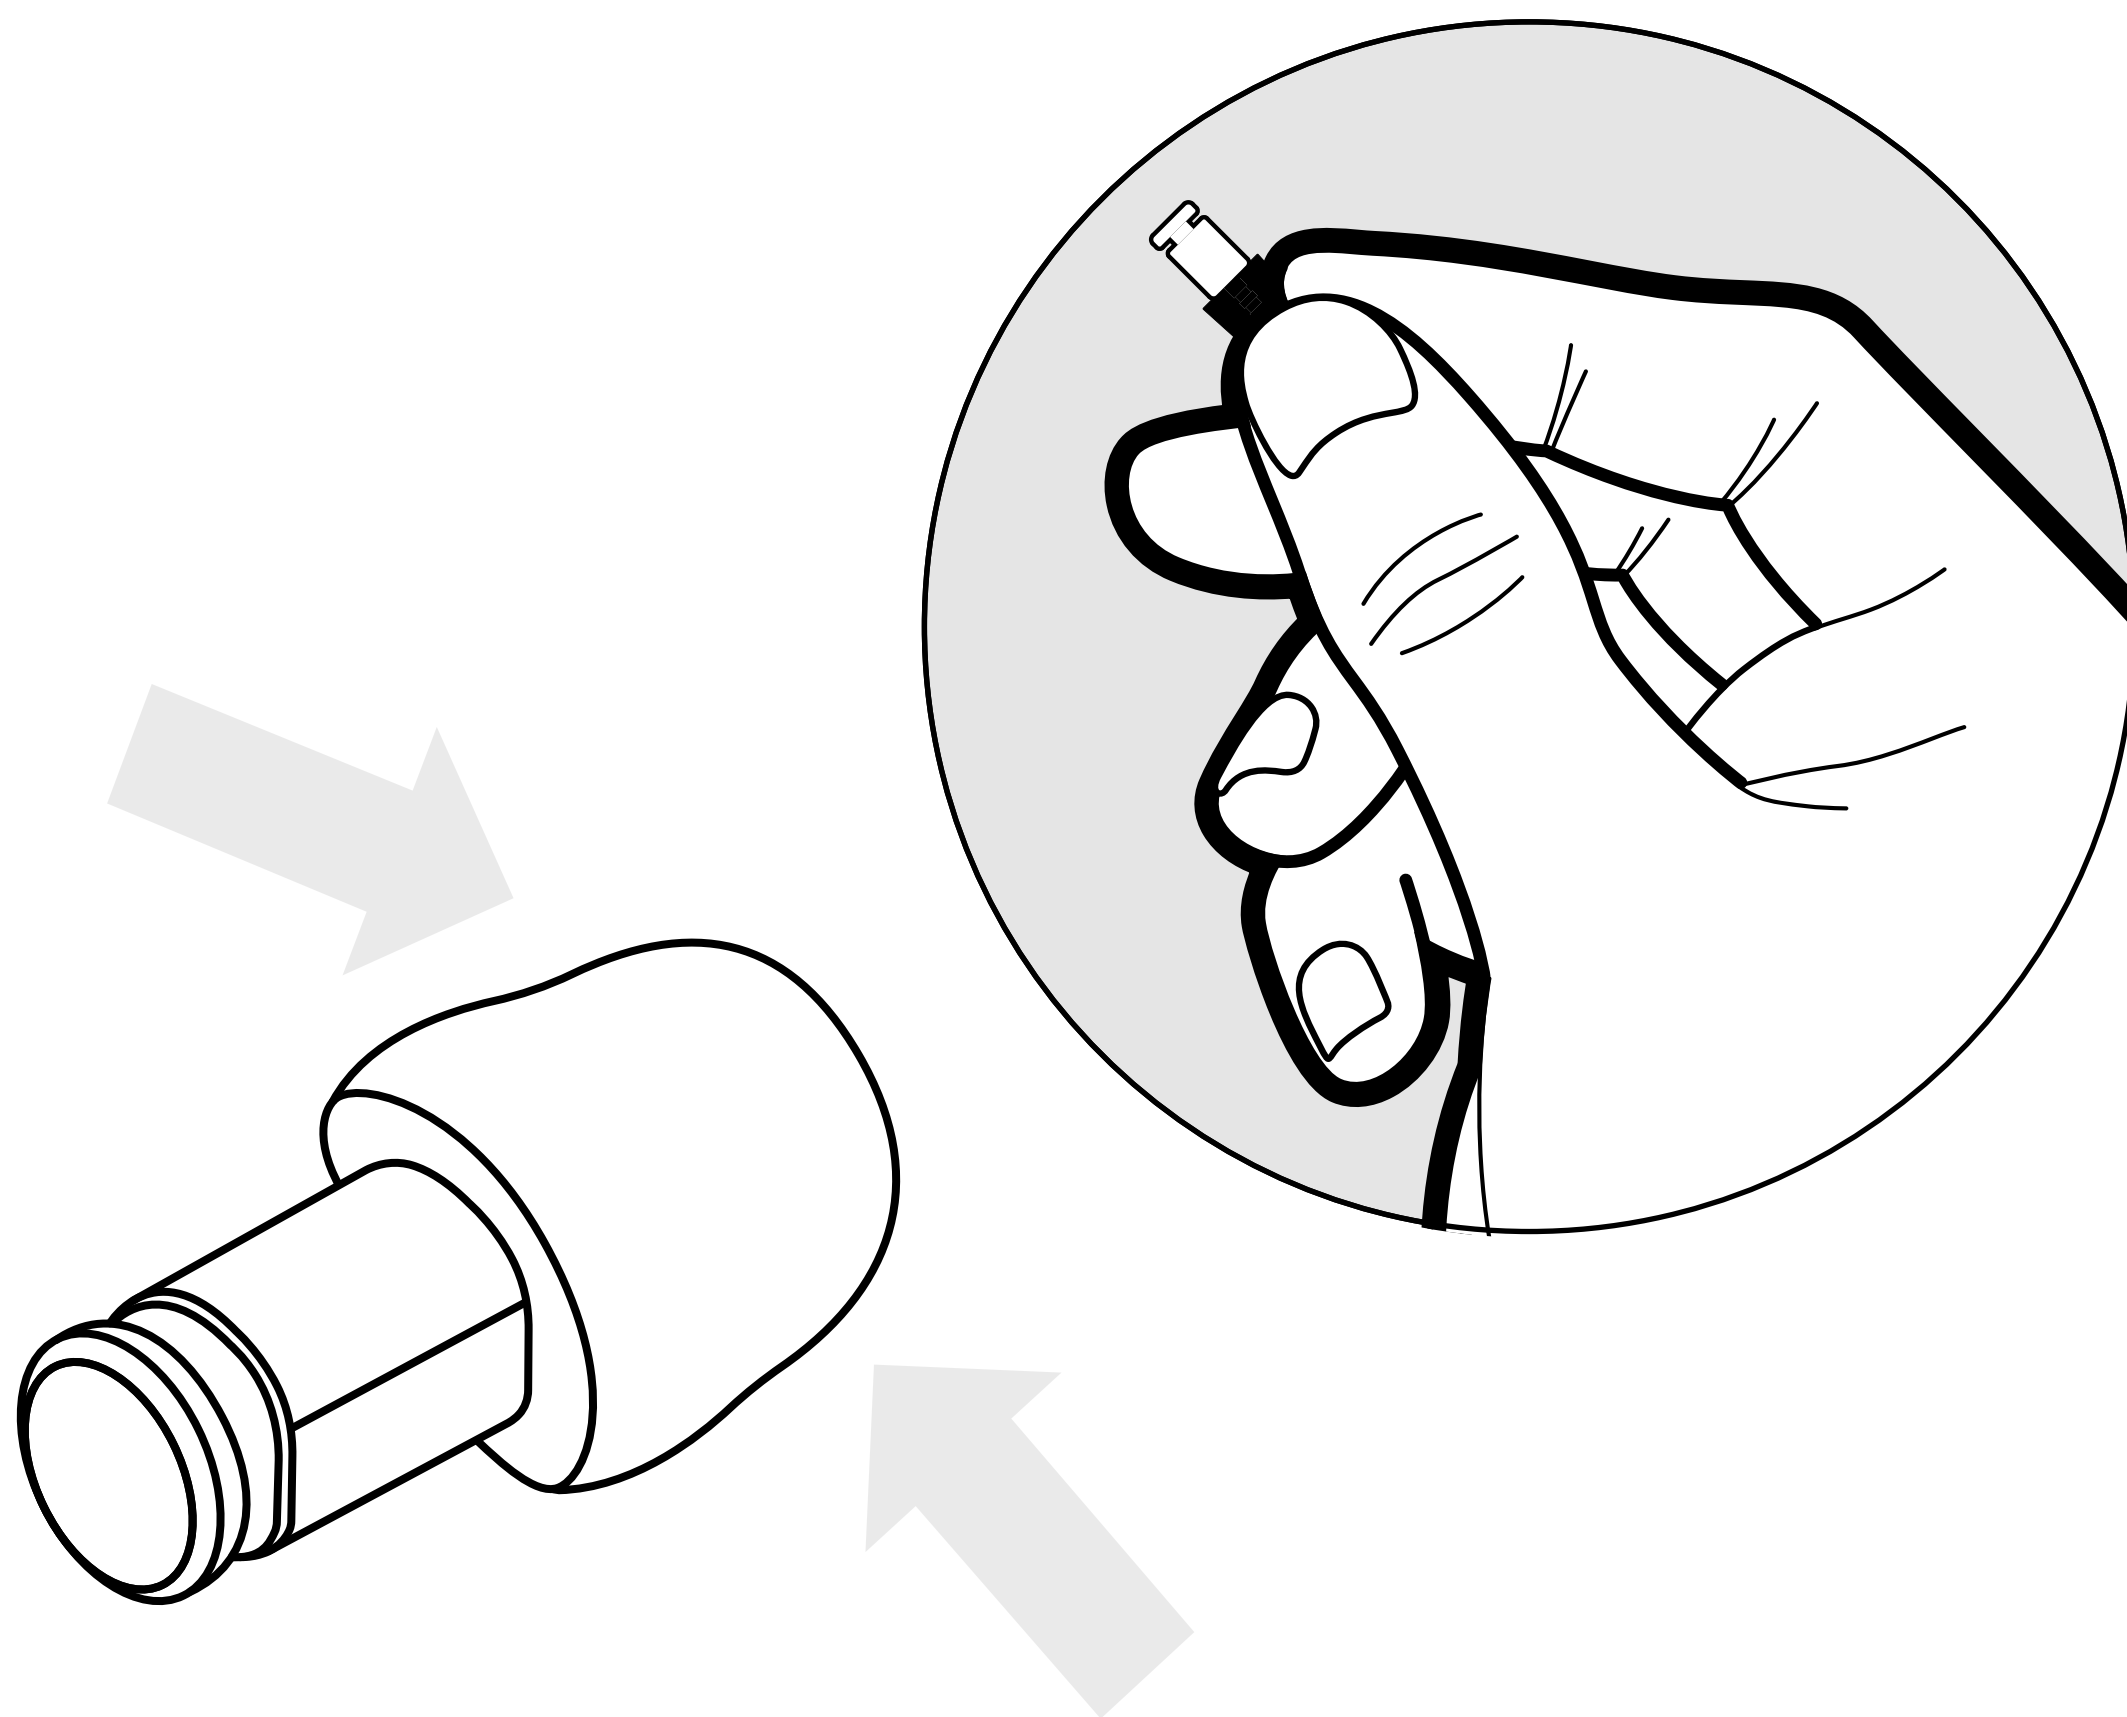


Pinch and roll the tip between fingers  
to compress the thermo-reactive memory foam tips.

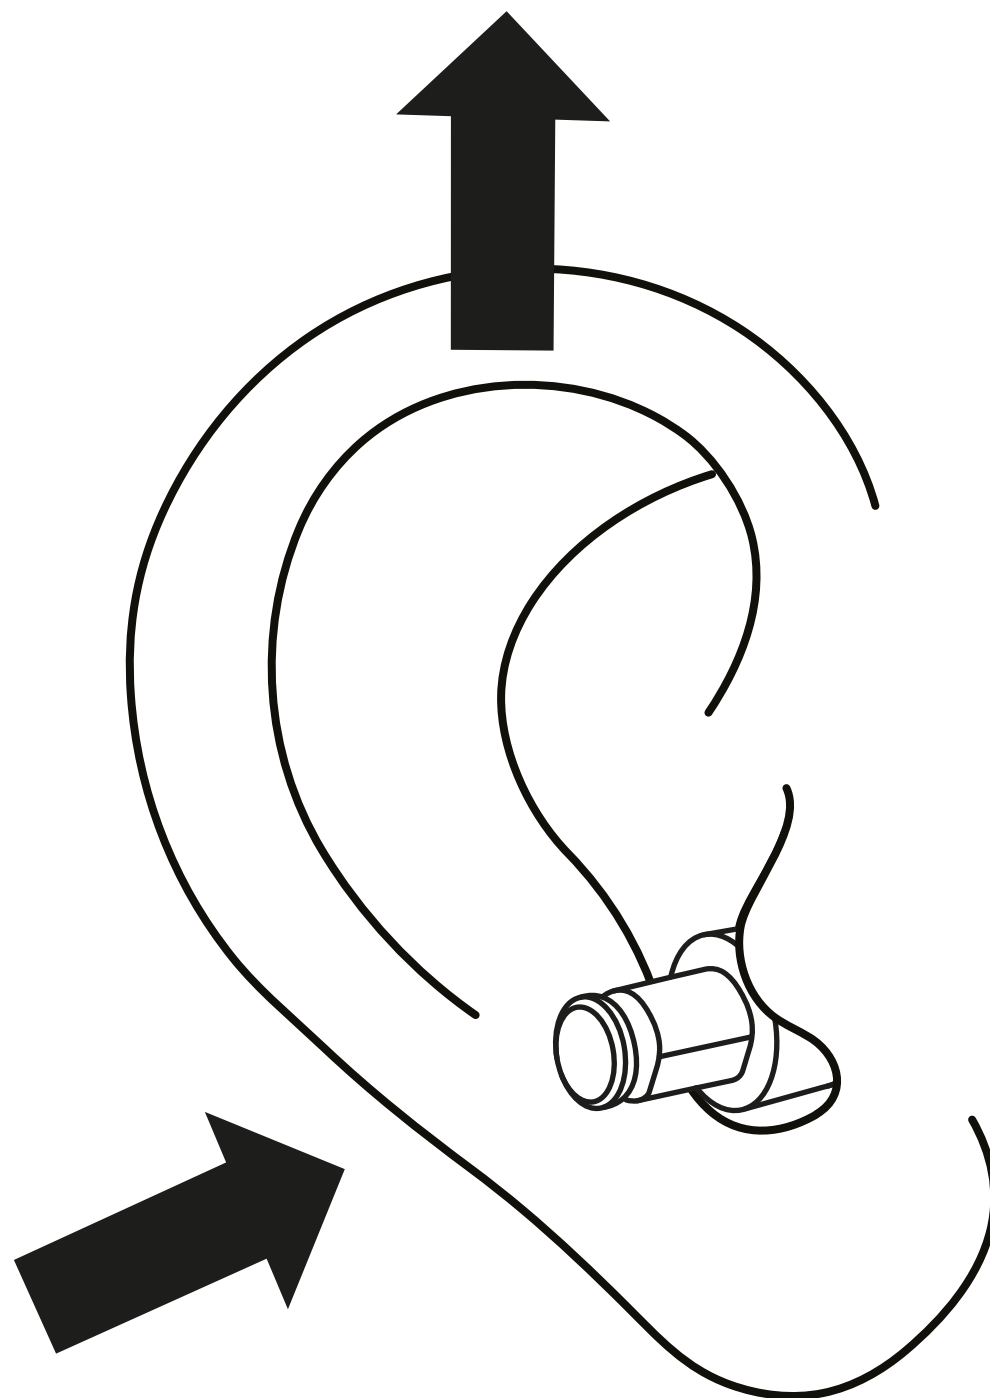

Pull top of ear up and  
backwards to open ear canal.  
Insert Isolate gently  
and securely into your ear.

Allow up to 10 seconds for the tip to expand and  
shape to your ear canal for the perfect seal.

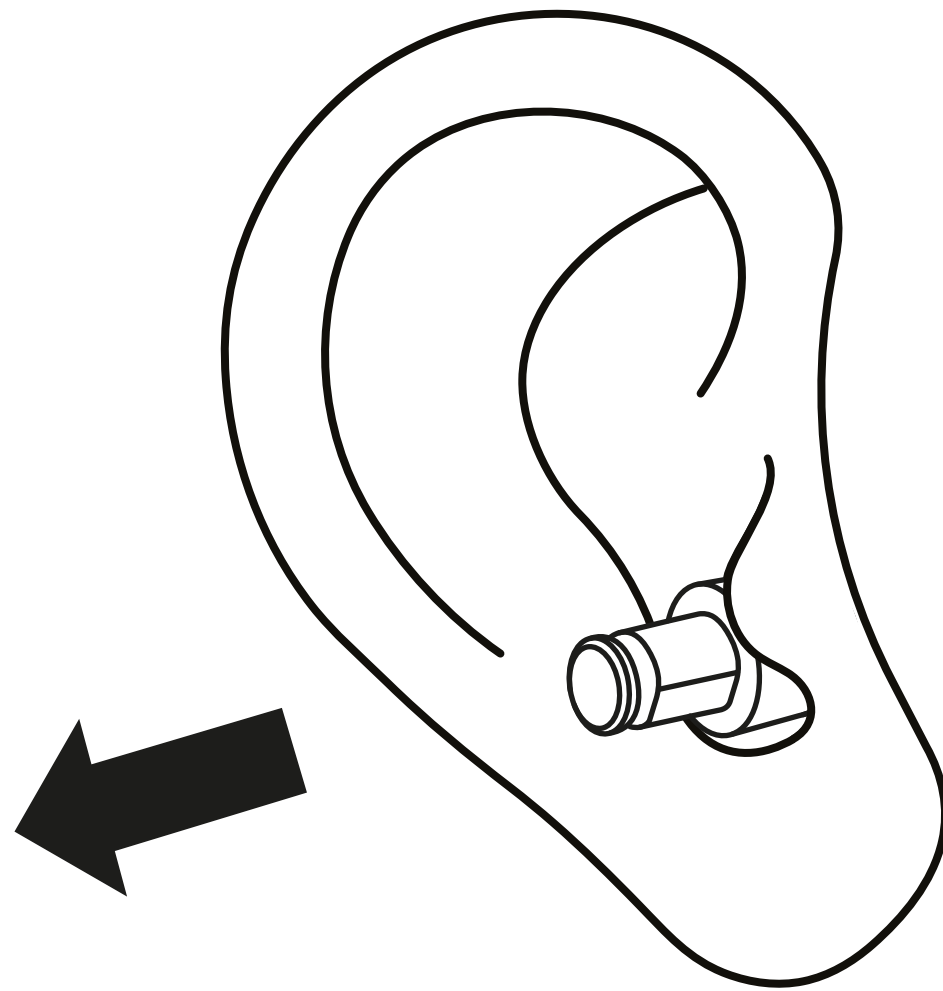

To remove, pull top of ear up and backwards. Then twist and gently pull Isolate out of your ears.

# Safety Guide

**Warning:** If the recommendations are not adhered to, protection afforded by the earplugs will be severely impaired. The bodies do not have a set lifespan but should be carefully maintained as per Flare recommendations. Sudden or fast removal of earplugs out of the ear canal may damage the ear drum. If a user feels uncomfortable or in pain at any point due to noise level, the user should safely leave the environment and then remove the PPE.

**Please Note:** To determine correct fitment, only bone conducted sound should be heard. The user should hear no direct sound coming through their ears. The earplugs should feel secure and fit well enough not to fall out or protrude beyond the outer ear.

- Keep in the sealed packet until ready to use. Store in a clean, cool and dry area away from direct sunlight and any harmful chemicals that may damage the earplugs
- Once opened keep clean to avoid contamination in the mesh pouch provided. Clean and disinfect metal with warm soapy water. Clean and disinfect tips with a damp cloth and leave to dry
- This product may be adversely affected by certain chemical substances. Further information should be sought from the manufacturer
- This hearing protection is RE-USABLE.

**Flare recommends:**

(1) The earplugs are worn at all times in noisy surroundings (2) The earplugs are regularly inspected for serviceability (3) The earplugs are fitted, adjusted and maintained in accordance with the manufacturer’s instructions (4) Memory foam tips are replaced every month. Spare tips are also available at [flareaudio.com/products/isolate-replacement-tips](https://flareaudio.com/products/isolate-replacement-tips) under the following part numbers: TIP-DOM-WBMF-BLK-LRG-6PC / TIP-DOM-WBMF-BLK-MED-6PC / TIP-DOM-WBMF-BLK-SML-6PC / TIP-DOM-WBMF-BLK-XS-6PC

**Warning:** Choking hazard. Small parts

This product conforms to European standard EN 352-2:2020

Frequency (Hz)	63	125	250	500	1000	2000	4000	8000
Mean (dB)	26.7	27.4	28.3	28.7	30.4	32.2	32.7	36.3
St deviation (dB)	5.5	3.3	2.9	3.0	3.7	2.5	3.1	4.1
APV (dB)	21.2	24.1	25.4	25.8	26.7	29.7	29.6	32.3
SNR = 30	H = 31.9			M = 30.1			L = 28.9	

C€2834 

# Safety Instructions



## **Choking hazard**

To avoid accidental ingestion, keep the earplugs away from children and pets.



## **Surroundings**

Do not use earplugs in situations where being aware of your surroundings is important, as this can be dangerous. For example, avoid wearing earplugs while driving, cycling, near traffic, construction zones, or when alarms may sound.



## **Maintenance**

Clean only with a dry cloth. Do not use harsh chemicals. Remove earplugs immediately if you experience discomfort or loss of audio, contact support ([info@flareaudio.com](mailto:info@flareaudio.com)).



# Declaration of Conformity (UK & EU)

Flare Audio Limited  
Unit 11 Chartwell Business Centre, 42 Chartwell Road,  
Lancing, West Sussex, BN15 8FB, United Kingdom

flareaudio.com | +44(0)1903 761000

The undersigned declares under the sole responsibility that the products;

**Model** - Isolate®

**Model No.'s** - ISL-4-ALU-BLK / ISL-4-ALU-12-1009 / ISL-4-ALU-15-1231 /  
ISL-4-ALU-ALP-EBLU / ISL-4-TI-MAC

**Included Accessories** - Replacement memory foam tips

are in conformity with the provisions of the following relevant harmonised  
legislations and Standards of the European Union  
(including all applicable amendments)

**RoHS** Directive 2011/65/EU Annex II Amendment Directive (EU) 2015/863

**REACH** EC Regulation No. 1907/2006 - Substances of Very High Concerns  
(SVHCs), ECHA EU Regulation June 2024

**Declaration of Conformity:** [flareaudio.com/pages/conformity-statements](https://flareaudio.com/pages/conformity-statements)

---

## UK Authorised Representative

Flare Audio, Unit 11, Chartwell Business Centre,  
42 Chartwell Rd, Lancing, BN15 8FB, UK.  
Email: [info@flareaudio.com](mailto:info@flareaudio.com) • [flareaudio.com](https://flareaudio.com)


## EU Authorised Representative

Global Trade Department (NI) Ltd,  
Office 834, Unit 6, 100 Lisburn Road, Belfast, BT9 6AG,  
Northern Ireland. Email: [contact@globaltradedept.com](mailto:contact@globaltradedept.com)

## CCQS Certification Ltd (NB No. 2834)

Block 1 Blanchardstown Corporate Park, Ballycoolin Road,  
Blanchardstown, Dublin 15, D15 AKK1

Scan the QR code to  
access all technical  
documentation and  
regulatory information

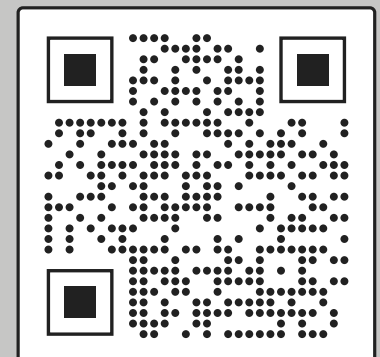

This leaflet was updated on 20/10/2025