


Portable Power Station

A complete guide to the operation, management, and maintenance of your portable power station.

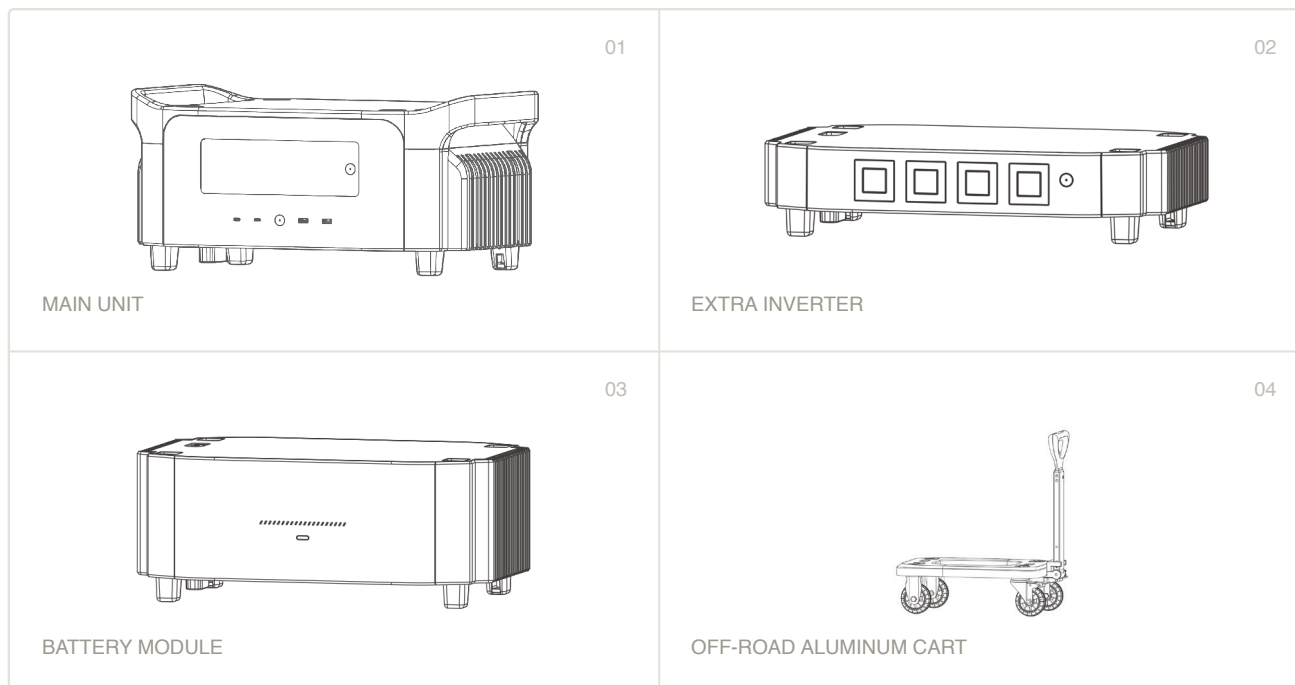

CONTENTS

1	About this Manual	Page 2
2	Safety Information	Page 3
3	Product Overview	Page 5
4	Getting Started	Page 12
5	Charging the Power Station	Page 16
6	Management via the Companion App	Page 18
7	Expanding the System	Page 19
8	Storage and Maintenance	Page 22
9	Using with an RV (travel trailer or motorhome)	Page 23
10	Regulatory Compliance	Page 24

1 About this Manual

- This manual provides detailed instructions on the operation, management, and maintenance of the portable power station.
- Documentation content is subject to change (updates, revisions, or termination) without notice. To obtain the latest documentation and technical assistance, visit **www.airgear.store**.
- The illustrations in this documentation are for demonstrative purposes only and may differ from the actual product you received.

IMPORTANT

Please read the product documentation thoroughly and ensure you understand it before using the product. Improper use may cause serious injury, product damage, or property loss. Always refer to the most up-to-date documentation available at **www.airgear.store**. This documentation takes precedence over all other versions.

By using this product, you acknowledge and agree to all terms and conditions stated in the documentation. The manufacturer is not liable for losses caused by improper use or failure to adhere to the provided instructions. Subject to applicable laws and regulations, the manufacturer reserves the right to the final interpretation of this document and all documents related to the product.

2 Safety Information

2.1 General Requirements

- Do not disassemble, repair, or modify the device by yourself. For any maintenance or service, contact AIR GEAR Customer Service.
- Disconnect the device from all external power sources before attempting any service or maintenance.
- To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the device from the power source.
- Do not pierce the device with sharp objects.
- Do not insert fingers or hands into the ports on the device.
- Do not insert wires or other metal objects into the device, to prevent short circuits.
- Do not block or restrict the air vent during operation.
- Do not use any unofficial or unrecommended components or accessories. For any replacement, contact AIR GEAR Customer Service for further assistance.
- Do not operate the device if the cord, plug, or any output cable is damaged.
- Do not stack any heavy objects on the device.
- Place the device on a stable and flat surface. Avoid damage to the device or personal injury caused by the product falling or tipping over.
- The AC output socket is automatically disabled if it remains idle for a certain period. To ensure a continuous power supply, set the Power Saving Mode in the companion app. Additionally, regularly check the power station's battery level.
- This device is not intended to power life-sustaining medical equipment, such as medical-grade ventilators (e.g. hospital-grade CPAP machines) or artificial lungs (e.g. ECMO systems). If you intend to use it with non-life-sustaining medical equipment, consult the equipment manufacturer first to confirm compatibility with an external power source.
- Power supply devices generate electromagnetic fields during use, which might affect the normal operation of medical implants or personal medical equipment such as pacemakers, cochlear implants, hearing aids, and defibrillators. If such medical equipment is in use, contact its manufacturer to inquire about any restrictions. These measures are fundamental to ensuring a safe distance between medical implants and this product while in use.
- The plug of the included charging cable is a disconnecting device, and the wall outlet to which it is connected must be easily accessible and well grounded.
- Electrical appliances connected to this device shall comply with local certification requirements.
- Do not use the device to power tools for cutting into live parts, wiring, or materials that might conceal live parts or wiring.
- During use in a repair facility such as a vehicle repair center or workshop, or any other place where repairs are conducted, do not place the device on the floor or at a height less than 457 mm (18 inches) above the floor.

- This product must be grounded. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. For your safety, the manufacturer provides a cord with an equipment grounding conductor and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment grounding conductor might result in a risk of electric shock. If you encounter either of the following situations, consult a qualified electrician instead of modifying the plug provided with the product:
 - You are unsure whether the product is properly grounded.
 - You find that the plug provided with the product does not fit the outlet.

2.2 Emergency Measures

- In case of any emergency, take precautions against electric shock before touching the device, such as wearing insulating gloves.
- If the product gets wet, stop using it immediately and refrain from further operation or powering it on. Place the product in a secure, waterproof, and well-ventilated area, then contact Customer Service for assistance.
- If the product falls into water, place it in a secure, waterproof, and well-ventilated area, and keep it away from contact until it is completely dry. The dried product should not be used again and must be properly disposed of according to local laws and regulations.
- If the product catches fire, use fire extinguishers in the following order: water or water mist, sand, fire blanket, dry powder, and finally a carbon dioxide fire extinguisher.
- If the device is overturned and severely damaged, wear insulating gloves to power it off, place it in an open area far from flammable materials and people, and dispose of it according to local laws and regulations.

2.3 Disposal and Recycling

- A device with severe damage, malfunction, or a depleted battery should be properly disposed of or recycled.
- The product contains batteries. Dispose of the product following local laws and regulations for battery disposal and recycling. Do not dispose of it with household waste, to avoid environmental pollution and safety hazards.
- If possible, ensure the battery is completely discharged (to 0% capacity) before disposing of the device. If not, do not place the battery directly into the recycling box; contact an authorized battery recycling company for proper handling.

3 Product Overview

3.1 Appearance

MAIN UNIT

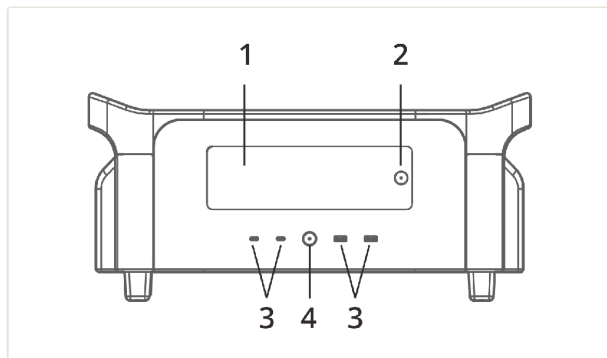


Figure 1. Min unit, front view.

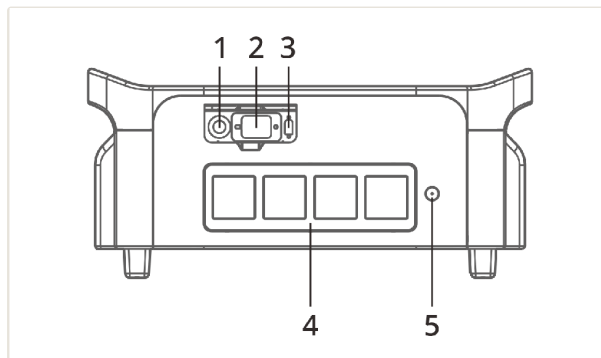


Figure 2. Min unit, rear view.

1 Display screen

2 Power ON/OFF button

3 USB output ports

4 USB ON/OFF button

1 Overload protection switch

2 AC input port

3 Solar/DC input port (XT60)

4 AC output socket

5 AC on/off button

BUTTON COMBINATIONS

FUNCTION	COMBINATION OF BUTTONS	DURATION
Turn the power station on / off	POWER ON/OFF button	2 seconds
Power Saving Mode on / off	POWER ON/OFF button + USB ON/OFF button	3 seconds
Child Lock on / off	POWER ON/OFF button + USB ON/OFF button	1 second
Wi-Fi reset	USB ON/OFF button	5 seconds
Factory reset	POWER ON/OFF button	15 seconds
Enter Warehouse Mode	POWER ON/OFF button + USB ON/OFF button	15 seconds

WAREHOUSE MODE

Warehouse Mode means that the power station is completely powered off. It is recommended when the device will not be used for an extended period of time or when it is being returned to the factory. Once in Warehouse Mode, the device can only be reactivated by plugging into a wall outlet, or a solar panel that is producing at least 50 Watts.

EXTRA INVERTER

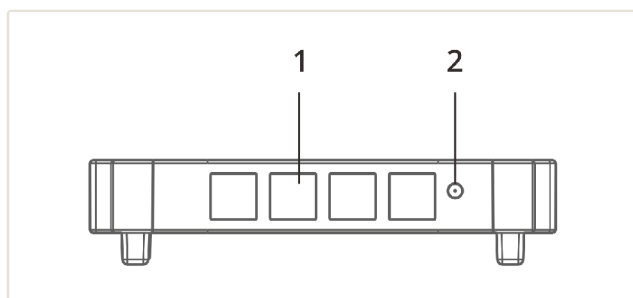


Figure 3. Extra inverter, front view.

- 1 AC output socket
- 2 AC on/off button

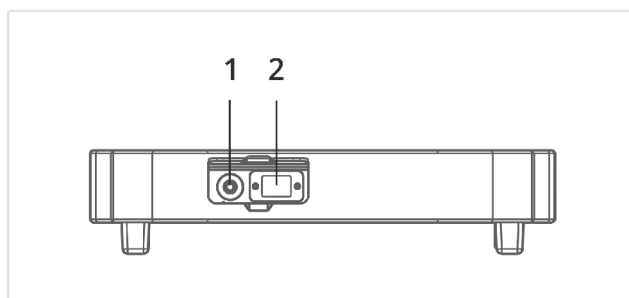


Figure 4. Extra inverter, rear view.

- 3 Overload protection switch
- 4 AC input port

BATTERY MODULE

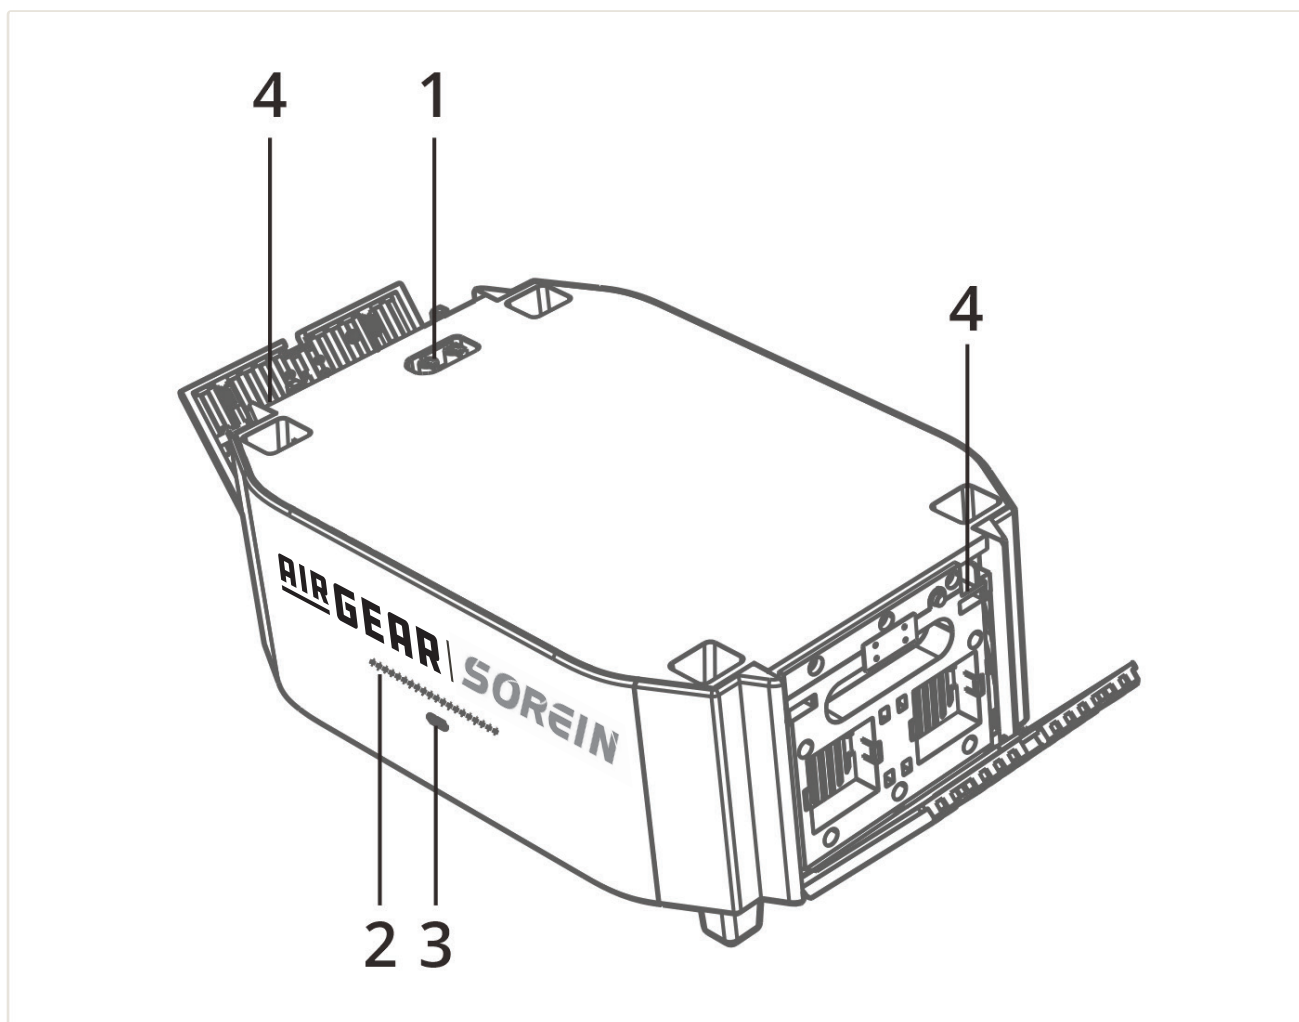


Figure 5. Battery module.

- 1 Battery port
- 2 LED indicator
- 3 LED indicator button
- 4 Latch

3.2 Display Screen

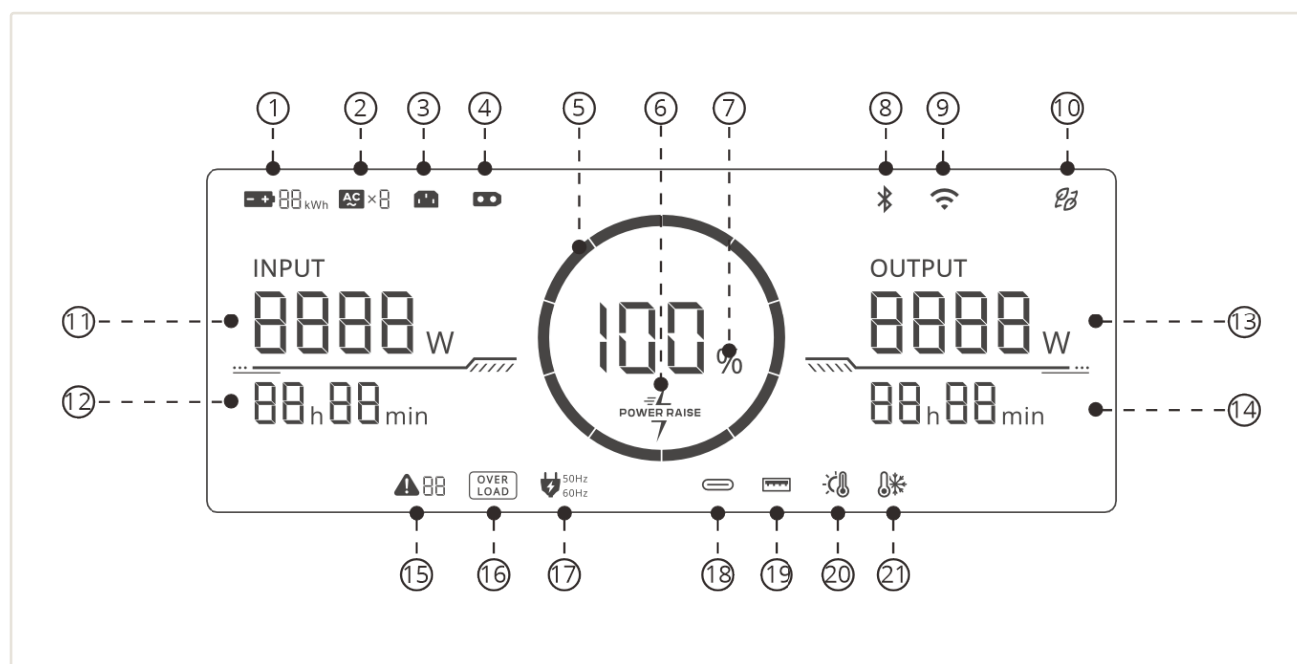


Figure 6. Display screen indicators and readouts.


SCREEN INDICATORS


1	Total battery capacity (kWh)	12	Remaining charge time
2	Total number of inverter modules	13	Total power output
3	AC charging	14	Remaining discharge time
4	Solar charging	15	Warning and error code
5	Remaining battery indicator	16	Overload warning
6	PowerRaise indicator	17	AC output
7	Remaining battery percentage	18	USB-C output
8	Bluetooth connection	19	USB-A output
9	Wi-Fi connection	20	High-temperature warning
10	Power Saving Mode	21	Low-temperature warning
11	Total power input		

- When Power Saving Mode is on, the screen automatically turns off after 5 minutes of inactivity to conserve power. To wake it, briefly press the Power button.
- Error codes, overload, high-temperature warnings, and low-temperature warnings appear only if there is an abnormality in the unit.

3.3 Warning and Error Messages

The display screen shows warning and error indicators when the unit detects an abnormality. The table below lists each indicator, its meaning, and the recommended corrective action.

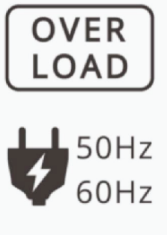LCD INDICATOR	ISSUE DESCRIPTION	SOLUTION
	Child Lock Protection	Press and hold the Power ON/OFF button and the USB ON/OFF button simultaneously for 1 second to disable the child lock.
	High Temperature Protection	1. If you are using many appliances or a high-power appliance, try reducing the number of appliances or suspending the use of high-power appliances. 2. If high-power charging is in progress, try switching to low power or simply stop charging. When the high-temperature indicator has cleared, you can restart the relevant module manually.
	Low Temperature Protection	1. Place the unit in a warm place to use. 2. If the unit has shut off due to low temperature, move it to a location above 10°C for more than half an hour before switching it on again.
	AC Output Overload Protection	1. Ensure that the power of each appliance connected to the AC outlet does not exceed the rated power; if it does, disconnect the appliance. 2. Ensure that the total power output of all AC outlets on each level does not exceed the rated power; if it does, remove some equipment. 3. Check for short-circuited equipment and remove it if found. Restart the AC module by pressing the AC output switch once all issues have been rectified.

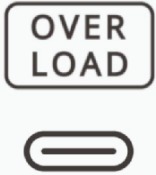LCD INDICATOR	ISSUE DESCRIPTION	SOLUTION
	USB Output Overload Protection	Up to 100 W devices are supported. Remove the overload device from the port, then short-press the USB outputs ON/OFF button to restart the module.
	Excessive AC Charging Voltage Protection	1. Make sure the AC input voltage does not exceed the maximum limit (135 V in USA/Japan; 240 V in Europe). 2. If the limit is exceeded, connect an appropriate converter before charging. 3. Reconnect the AC charging cable and restart AC charging after the issue has been resolved.
	Low AC Charging Voltage Protection	1. Make sure the AC voltage is not below the minimum limit (80 V in USA/Japan; 210 V in Europe). 2. If below the minimum, connect an appropriate converter before charging. 3. Re-plug the AC charging cable and restart AC charging after the issue has been rectified.
	Excessive AC Charging Current Protection	1. Disconnect all electrical appliances connected to the unit. 2. Press the overload protection button on the back of the unit, then re-plug the AC charger cable. 3. If the unit charges normally, resume use. If the issue persists, contact customer service.
	Excessive AC Output Voltage Protection	1. Disconnect all equipment connected to the unit. 2. Restart the unit by pressing the switch on the AC module.

LCD INDICATOR	ISSUE DESCRIPTION	SOLUTION
	Low XT60 Charging Voltage Protection	1. Ensure the input voltage is not less than 10 V and the power is not less than 50 W (e.g. ensure the solar panel has sufficient sunlight). 2. Check for broken or shorted input cables and replace if necessary. 3. Re-plug the XT60 cable and restart XT60 charging after the issue has been rectified.
	Excessive XT60 Charging Voltage Protection	1. Ensure the XT60 input voltage does not exceed 100 V. 2. If it does, reduce the XT60 input voltage (e.g. by reducing the number of solar panel cells connected in series). 3. Re-plug the XT60 cable and restart XT60 charging after the anomaly has been rectified.
	XT60 Charging Voltage Too High	The input voltage is too high and the MPPT module may be damaged. Contact customer service directly.
	Two Inverters Directly Connected	Do not directly connect two inverters. Set up your system as follows: inverter 1 → battery 1 → inverter 2 → battery 2...
	Internal Communication Error	Turn off the power station. Disassemble all modules, then re-assemble, and re-start the power station. If the problem persists, contact AIR GEAR Customer Service.
	Device Damaged	Do not disassemble the equipment. Power off the device and contact customer service for assistance.

3.4 Specifications

PRODUCT NAME	MAIN UNIT	EXTRA INVERTER	BATTERY MODULE	OFF-ROAD ALUMINUM CART
GENERAL INFO				
Net weight (pounds)	21	15.7	48.5	14.3 lbs
Dimensions (L × W × H, inches)	18.3 x 11.8 x 7.6	18.3 x 11.8 x 4	18.3 x 11.8 x 7.3	22.9 x 16.2 x 7.5
Battery capacity	N/A	N/A	2400 Wh, 48 V	N/A
OUTPUT PORTS				
AC outlet	EU: 3600 W US: 3300 W JP: 3000 W	EU: 3600 W US: 3300 W JP: 3000 W	N/A	N/A
USB-A	18 W × 2, total 36 W	N/A	N/A	N/A
USB-C	100 W × 2, total 100 W	N/A	N/A	N/A
INPUT PORTS				
AC charging	EU: 2200 W US: 1800 W JP: 1500 W	EU: 2200 W US: 1800 W JP: 1500 W	N/A	N/A
Solar charging (XT60)	11–60 V, 20 A max, 1000 W max	N/A	N/A	N/A
BATTERY INFO				
Capacity	N/A	N/A	2400 Wh LFP, 48 V	N/A
OPERATING TEMPERATURE				
Optimal operating temperature	20°C – 30°C (68°F – 86°F)			
Discharging temperature	–20°C – 45°C (–4°F – 113°F)			
Charging temperature	0°C – 45°C (32°F – 113°F)			
Storage temperature	0°C – 45°C (32°F – 113°F)			

4 Getting Started

4.1 Setup

The power station is assembled with the Off Road Cart at the bottom, then the Battery Module or Extra Inverter, and the Main Unit on top.

1. Assemble the Off-Road Cart.

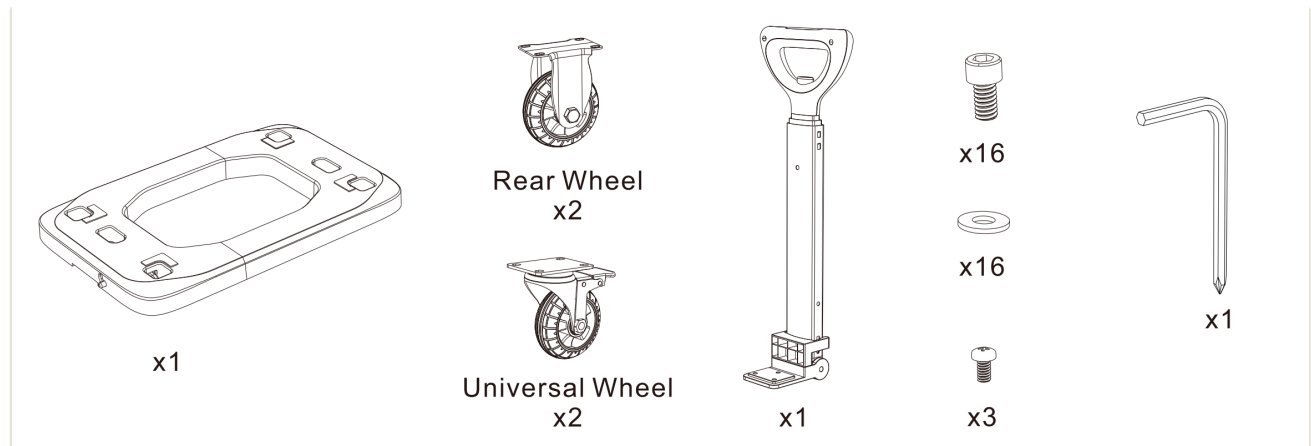


Figure 7. Parts and hardware included.


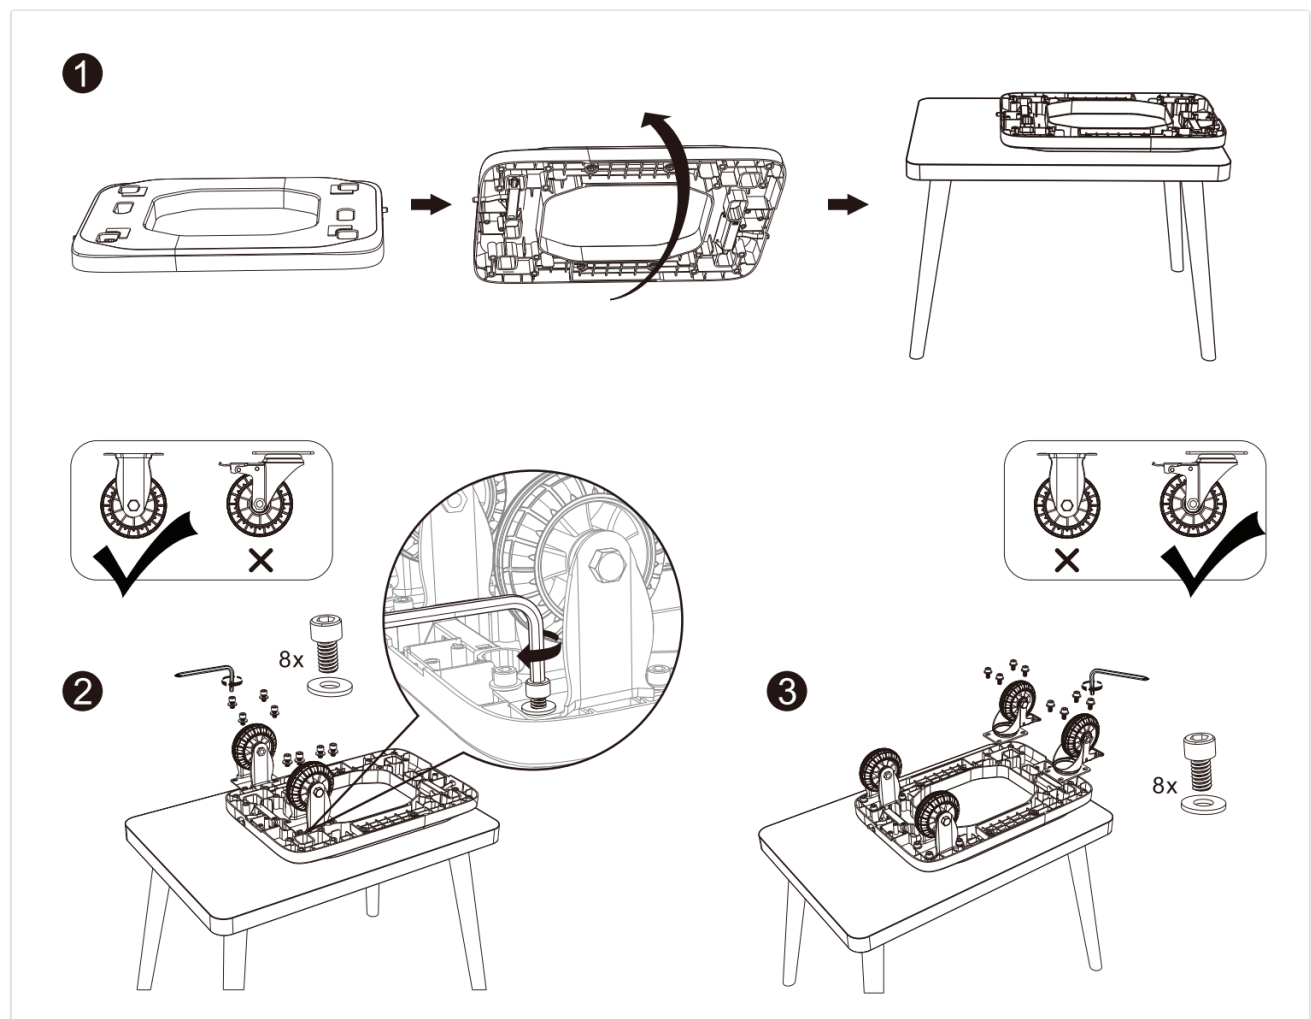





Figure 8. Attaching the casters to the chassis (steps 1–3).



4

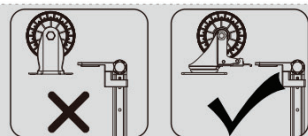

Please install the pull handle on the side with the Universal Wheels.

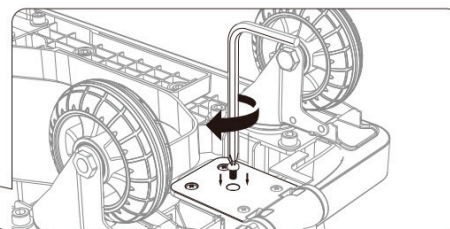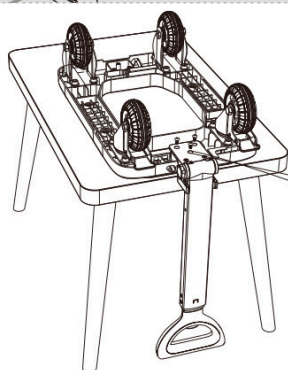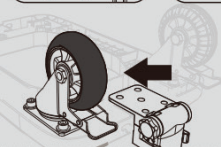

3x

Figure 9. Installing the pull handle (step 4). Fit it on the side with the universal wheels.

5

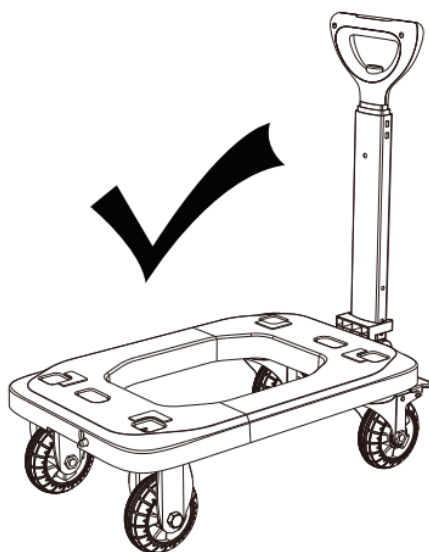


Figure 10. The fully assembled cart (step 5).

2. Place the Battery Module module onto the Cart. If you have more than one Battery Module, they can be stacked in any order.

If you have an Extra Inverter, place it between two Extra Batteries.

The Main Unit module is always on top.


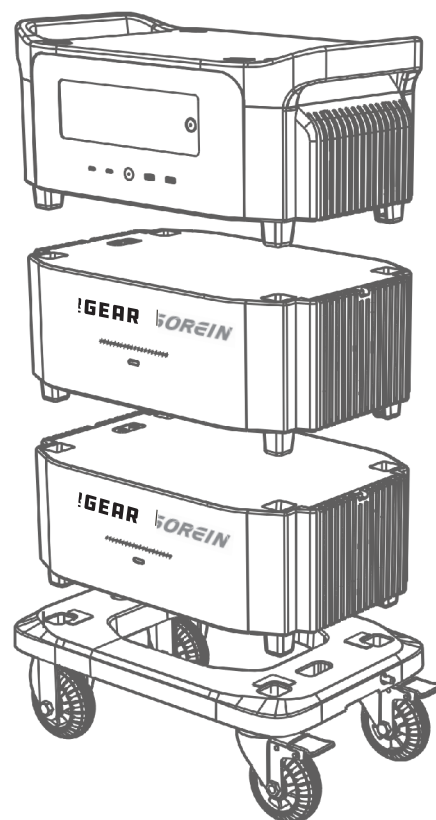


Figure 11. Correct stacking order and latch alignment.

CAUTION

- Because an Battery Module module weighs 48.5 pounds, we recommend using an AIR GEAR Carry Bag, and/or enlisting the help of a second person to move it.
- The AIR GEAR x Sorein Power Station must be used as a single unit on a firm, flat surface. Do not leave the power station on a tilted surface, as it may topple over, potentially resulting in personal injury or product damage. Always lock the wheels of the Cart when not in motion.

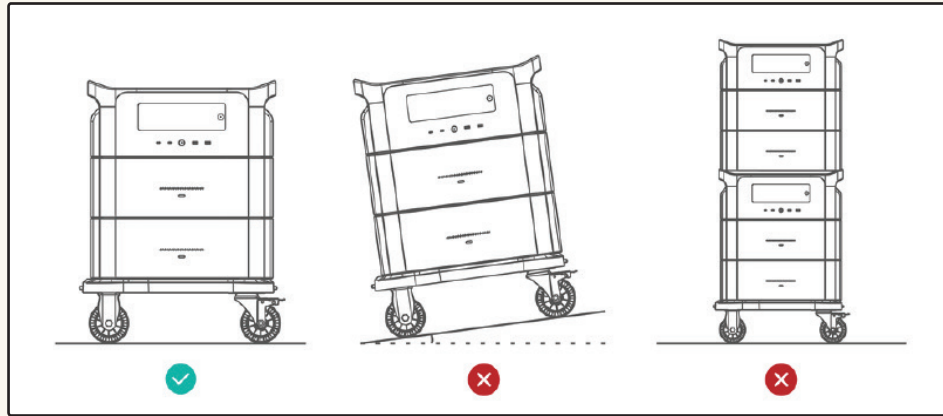

4.2 Power On / Off

- To power on the device, press and hold the power button for 2 seconds.
- To power off the device, press and hold the power button for 2 seconds until the display screens say “OFF”. The green light in the center of the power button should go off as well.
- When the device is powered off, it automatically powers on when connected to solar or AC power for charging; the screen takes 5 to 10 seconds to light up.
- When the device is powered on, press the power button once to turn the screen on or off.

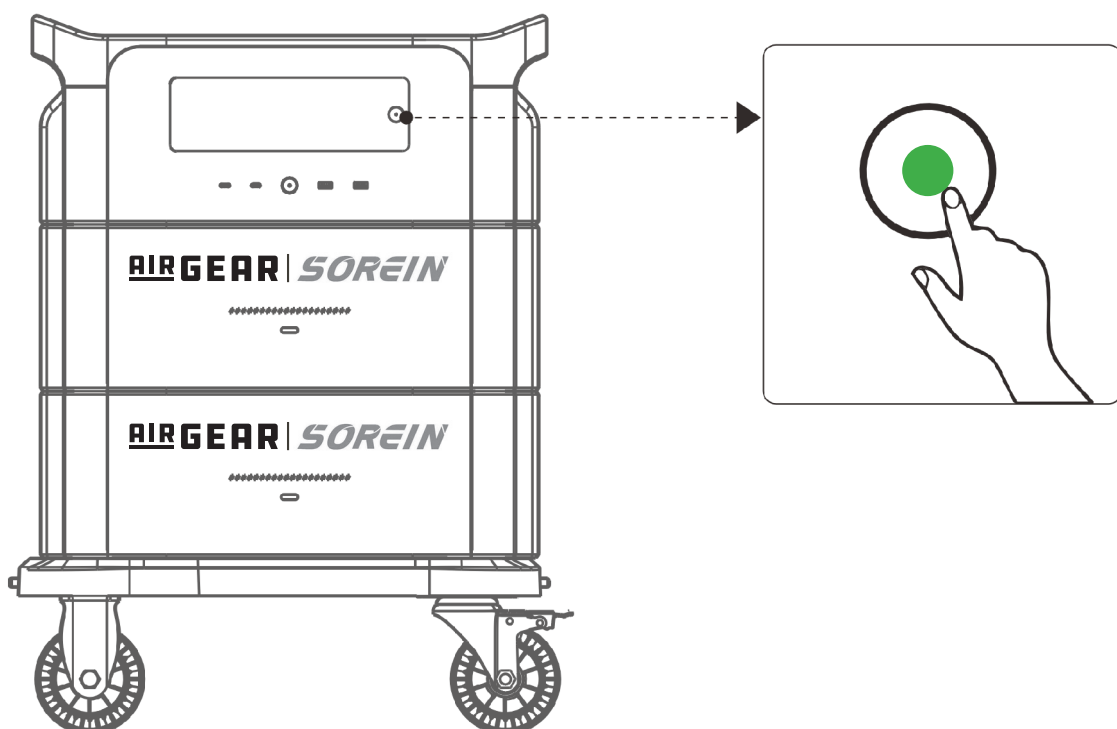


Figure 12. Powering the device on and off.

4.3 Powering Your Appliances

The AIR GEAR x Sorein Power Station automatically powers on when connected to a solar panel producing at least 50 Watts, or AC power. The screen takes 5 to 10 seconds to light up.

When the device is powered on, press the AC output button to enable the AC output socket. Then connect your AC load equipment to the AC output socket to charge or power it.

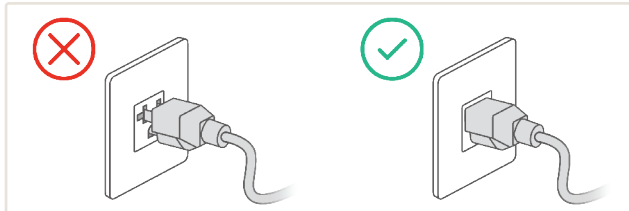


Figure 13. Securing both ends of the cable.

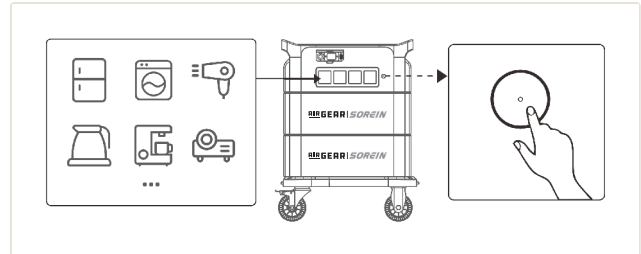


Figure 14. Enabling the AC output.

NOTE

The power station, and in particular the AC inverter, consumes power even when nothing is plugged into it. Be sure to turn off the AC outlets whenever they are not needed.

Turn off the main power (on the front) when the power station is not in active use. Make sure the green indicator light in the center of the AC power button is off.

5 Charging the Power Station

When charging your power station, ensure both ends of the cable are securely connected.

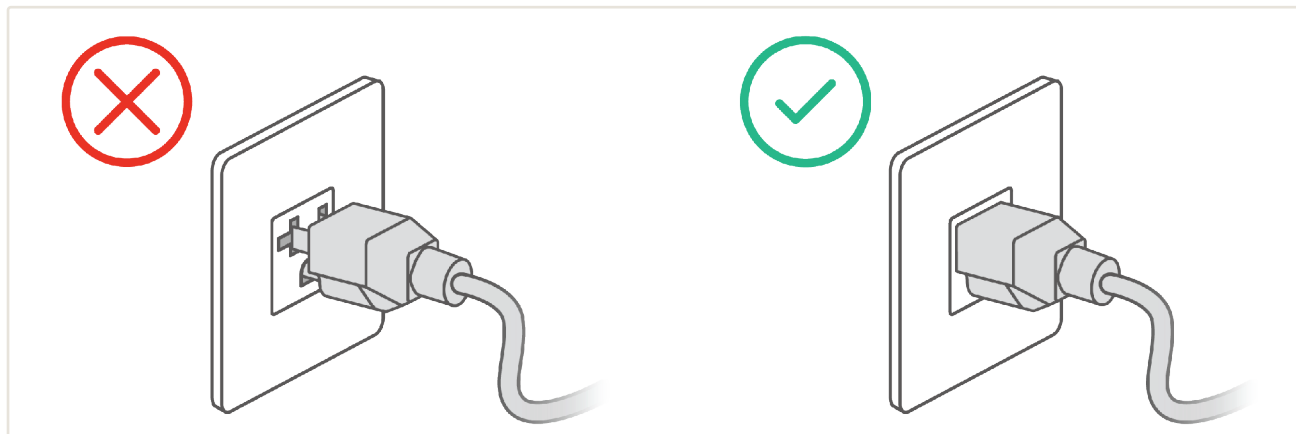


Figure 15. Connecting the charging cable.

VIA SOLAR PANEL OR DC-DC CHARGER

You can charge the power station with an optional solar panel. We recommend the Sorein 400W Solar Panel. This panel is ideally suited for maintaining the charge in your power station while you use it. The Sorein panel comes with MC4 connectors, and a 4-way adapter that includes the XT60 plug needed to connect to the Main Unit. Extension cables are available from AIR GEAR.

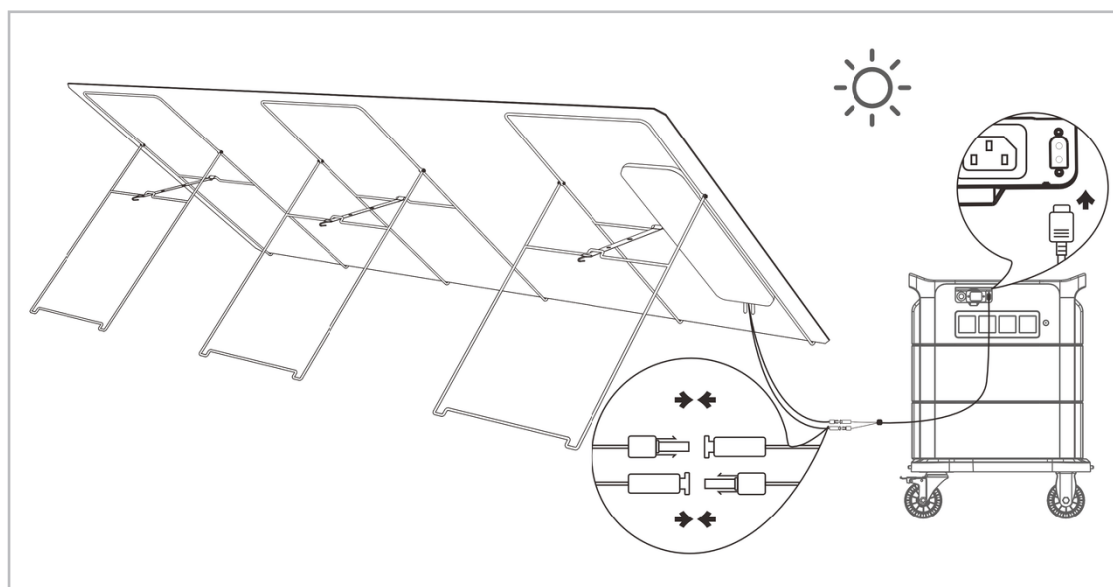


Figure 16. Charging via solar panel.

VIA WALL OUTLET

When charging from an AC power outlet, note that the maximum inverter output from the Main Unit is reduced to 1,300 Watts. If you need more output power, add an Extra Inverter (for an additional 3,300 Watts).

If you must use an extension cord to charge the power station, use a minimum 12/3 (extra heavy-duty) cable rated for at least 1800 Watts.

You can use other brands of solar panels to charge the Sorein Power Station, as long as the combined output of the panels is more than 50 watts and less than 1,000 watts. If you are using multiple panels, be sure that their combined output does not exceed any of these limits:

- 1,000 watts
- 20 amps
- 60 volts

Connecting panels in a serial arrangement is not recommended. Multiple panels should be connected in parallel.

IMPORTANT: If you exceed the limits above, the MPPT charge controller in the AIR GEAR x Sorein Power Station may be damaged. If that happens, you will not be able to charge the power station through the XT60 connector. Contact AIR GEAR Customer Service for assistance.

Do not use a charge controller with your solar panels. Using a charge controller will prevent the panels from charging the power station.

A DC-DC charger from a vehicle can also be used. This is the recommended method when charging from a vehicle (rather than a truck-mounted inverter outlet). The DC output must not exceed the specifications above.

HYBRID CHARGING: SOLAR PANEL + WALL OUTLET

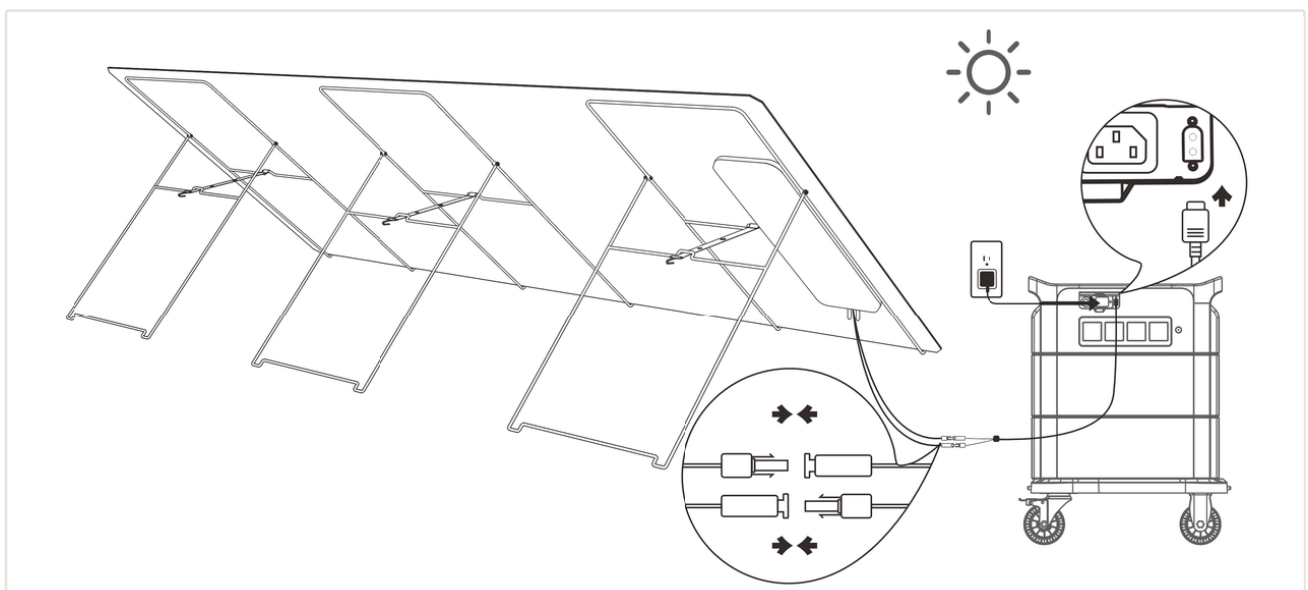


Figure 18. Simultaneous solar and wall-outlet charging.

6 Management via the Companion App

6.1 Download the Companion App

The companion app is a one-stop solution that lets you monitor the status of all your devices in real time, manage them from one place, control them remotely, and customize all settings — such as battery life, input/output, and more.

To download the app, search for *EnergyKeeper* in the iOS App Store or on Google Play.



Figure 19. Downloading the EnergyKeeper app.

6.2 Add the Device and Connect to the Network

You can add the device to the companion app to manage and control it anywhere, at any time. To add the device and set up the Internet connection, do the following:

1. Open the app and log in to your account. If you don't have an account, create a new one.
2. Tap the button that lets you add a device.
3. Select the device from the device list and follow the on-screen instructions to add the device and set up the Wi-Fi network.

For further details about setting up the app, visit www.airgear.store and choose “Help Center” under the Customer Support tab.

6.3 General Settings

After binding your device to your account, you can manage settings such as:

- Monitor your power station's status
- Rename your device.
- Share your device with others.
- Customize power input or output.
- Set the charge and discharge limits.
- Change the operating mode.
- Upgrade firmware.

Both Bluetooth and a local WiFi network are required in order to set up the Energy Keeper app for the first time. After the app is set up and your power station is connected to WiFi, you can monitor and control it from the app. Note that the power station can only be accessed remotely when WiFi is available. The app does not support Bluetooth-only connections.

For assistance with setting up the app, visit the AIR GEAR Help Center, or contact Customer Service.

7 Expanding the System

7.1 Expand Battery Capacity

If you frequently encounter power-intensive scenarios or require prolonged usage during power outages, you can proactively install additional batteries. Your power station can connect up to 23 Battery Module packs, with 5 packs per stack, using an optional connection cable.

The following illustrations show how to connect different numbers of Battery Module packs.



Figure 20. Connecting 2–5 extra batteries.

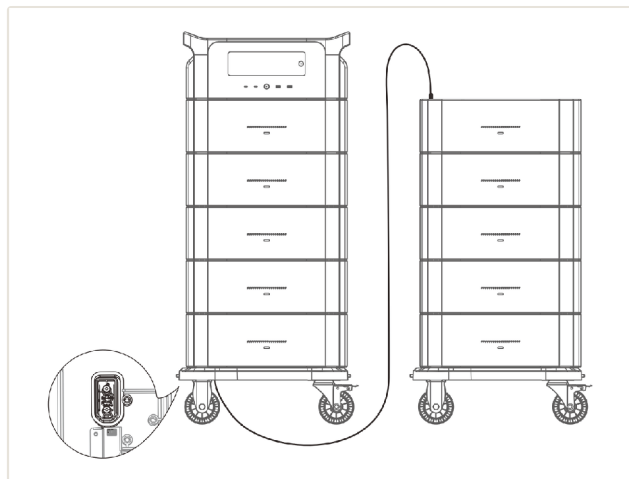


Figure 21. Connecting 6–10 extra batteries (10 shown).

If more than 5 Battery Modules are needed, divide them into separate stacks, and connect with the optional connecting cable.

To utilize this amount of power, you'll also want Extra Inverters. The Extra Inverters should be layered between Battery Modules, rather than stacked all together.

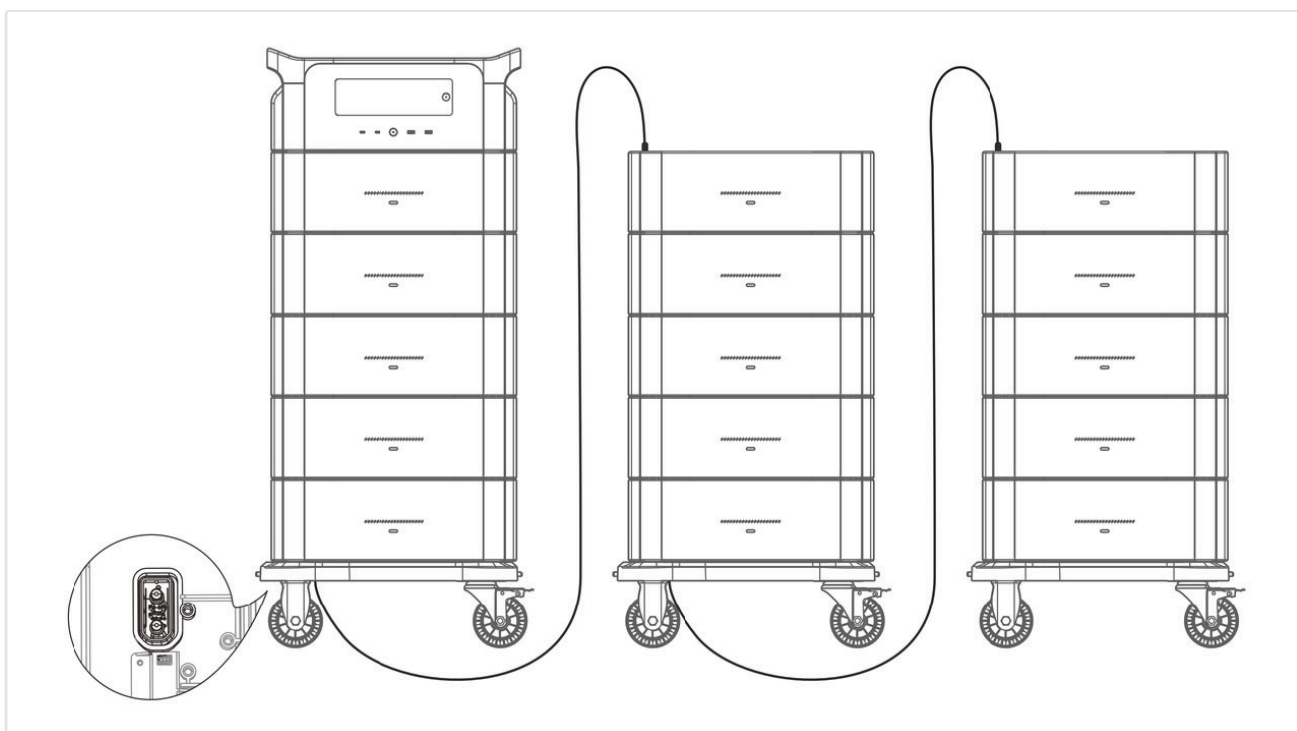


Figure 22. Dividing more than 10 batteries into separate stacks.

NOTE

- The rated capacity of one Battery Module pack is 2.4 kWh. You can expand capacity by connecting up to 23 battery packs to achieve a total capacity of 55.2 kWh.
- To connect more than 5 battery packs, you may need to purchase another portable stand and connecting cable.
- If you use more than 5 battery packs, arrange them in two stacks with even distribution to ensure balanced weight, symmetrical cable routing, and stable system performance.

7.2 Maximize Power Output

When using the device to power more appliances, you can connect up to 5 extra inverters. This setup allows all connected units to work together as one integrated system, combining their total output up to 21.6 kW and total capacity to 55.2 kWh to power your entire home.

NOTE

To achieve the maximum output power of 21.6 kW, connect 5 extra inverters with at least 10 Battery Module packs connected separately. For details, see “Expand battery capacity.”

7.3 Maintain Uninterrupted Power

When connected to the grid, the power station functions as a reliable UPS (uninterruptible power supply) — a device or system that provides continuous backup power during a grid power outage. In the event of a sudden power outage, it automatically switches to battery power within 20 ms, ensuring your connected devices stay up and running without interruption.

When using an Extra Inverter, the effective switching time is 0 ms. However, note that the output power from an Extra Inverter will be noisier, which may cause some sensitive GFCI circuit breakers in an RV to “nuisance trip”. If this happens, connect the load to the Main Unit instead.

UPS MODE	UPS 1	UPS 2
Inverter requirement	1 inverter	2 or more inverters
Connection topology	1 inverter IN and OUT	Main unit: AC IN · Extra inverter: AC OUT
LCD display	UPS 1	UPS 2
Maximum AC output power	1800 W (EU) · 1300 W (US & JP)	3600 W (EU) · 3300 W (US) · 3000 W (JP)
Switching latency	<20 ms	0 ms
Noise level	Low	High
Inverter power loss	Low	High
Recommended appliances	Fridge, TV, modem, Wi-Fi router, game console, etc.	Computers, network-attached storage (NAS), and multiple devices with a total rated power under 3000 W.

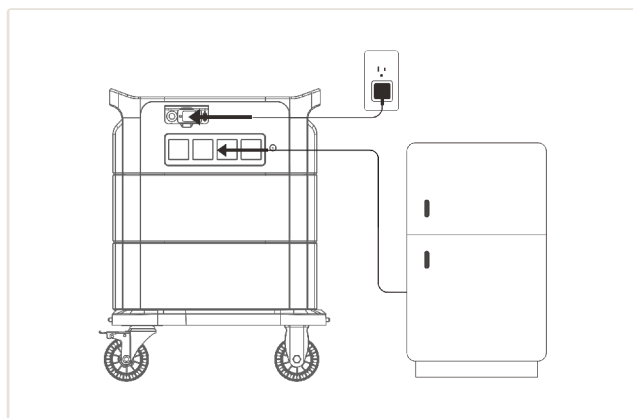


Figure 24. UPS 1 configuration.

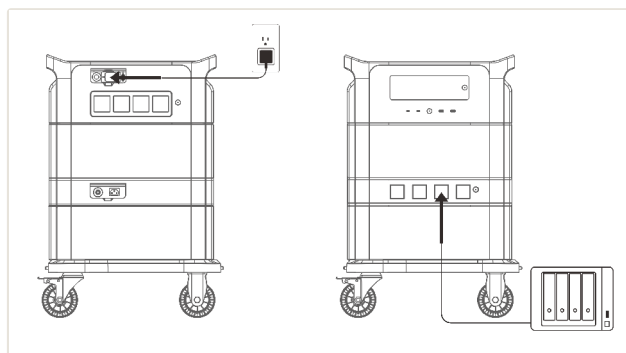


Figure 25. UPS 2 configuration.

8 Storage and Maintenance

8.1 Storage

- Store the device in a dry, cool, well-ventilated environment where the temperature is between -10°C and 45°C . The recommended range for optimal battery health is 0°C to 30°C (32°F to 86°F).
- Place the device on a flat, non-slip surface to reduce the risk of falling.
- Keep the device away from water sources, heat sources, strong magnetic fields, environments with corrosive gases, and any flammable or explosive substances.
- For long-term storage, charge and discharge the product every 3 months (fully charge it, then discharge to 60% for storage) to maintain battery health.
- Do not leave this product unused or without charging for more than six months, as this will void the warranty.

8.2 Cleaning

- Before cleaning, power off the device and unplug all cables.
- Use a soft, dry cloth to wipe the surface.
- Do not use water, solvents, or chemical cleaners that might damage internal components or ports.
- Do not spray any liquid directly onto the device.
- Do not disassemble the device to clean internal components. Improper operation might void the warranty and cause safety hazards.

8.3 Maintenance

- Periodically check for dust or debris in vents or ports and clean the device if needed.
- Do not deeply discharge the device frequently, as this will shorten the battery lifespan.
- Ensure all cables and connectors are intact and not frayed or damaged.
- Store and operate the device within the recommended temperature and humidity range.
- If the device shows any signs of abnormal symptoms (e.g. unusual heat, smell, or noise), stop using it immediately and contact Customer Service.
- Do not open or disassemble the device under any circumstances. If your device needs to be serviced, contact Customer Service.
- Ensure the air vent is unobstructed during use to avoid overheating.

9 Using with an RV (travel trailer or motorhome)

- If you have used Warehouse Mode for storage, be sure to take the station out of Warehouse Mode before you go on a trip. See section 3.1 for details.
- Always keep the power station on the Cart or a clean, dry, hard surface when in use, to avoid damage to the electrical connectors, arising from dirt or moisture.
- Don't use an Electrical Management System (EMS) on the output of the power station. An EMS isn't needed, and will stop the flow of power from the power station. You can use an EMS when charging, in the input side.
- Always turn off the power station before removing or adding any module, such as Battery Module or Extra Inverter.
- **Avoid overloading the inverter.** Repeated overloading will cause early failure, which is not covered by the warranty. The water heater and refrigerator should be running on propane, when that option is available. If your air conditioner overloads the inverter, install a "soft start" device in the air conditioner, and be sure not to use other high-wattage appliances at the same time.
- Note that the AC power output drops to 1,300 Watts when the battery is below 20%. Don't try to run an air conditioner or microwave oven when the battery is below 20%.
- **Never use a generator Neutral-Ground bonding plug.** Such a plug will immediately destroy the inverter if it is in place when the power station is plugged in to charge.
- Keep the Sorein Power Station out of direct sun on hot days, and sheltered from rain. We recommend the AIR GEAR Weather Cover for light rain and dew. In case of heavier rain, put the power station in a sheltered, dry, location.
- If you must use an extension cord to charge the power station, use a minimum 12/3 (extra heavy-duty) cable rated for at least 1800 Watts, and keep the length under 25 feet.
- During travel, pack all the power station components so they won't be subject to excessive vibration or damage from other items. AIR GEAR has padded Carry Bags for this purpose.

10 Regulatory Compliance

FCC COMPLIANCE STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm (7.9 in) between the radiator and your body.

INDUSTRY CANADA COMPLIANCE

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.