



Max Frame

assembly manual




Max Frame
Assembly
Information

EVERMAX3.0-WH-S | EVERMAX3.0-BLK-S


Tools



4mm Allen Wrench
(included)

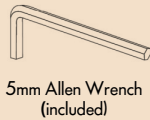


5mm Allen Wrench
(included)

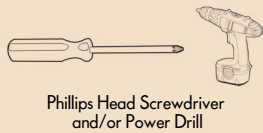

Phillips Head Screwdriver
and/or Power Drill



Tape Measure

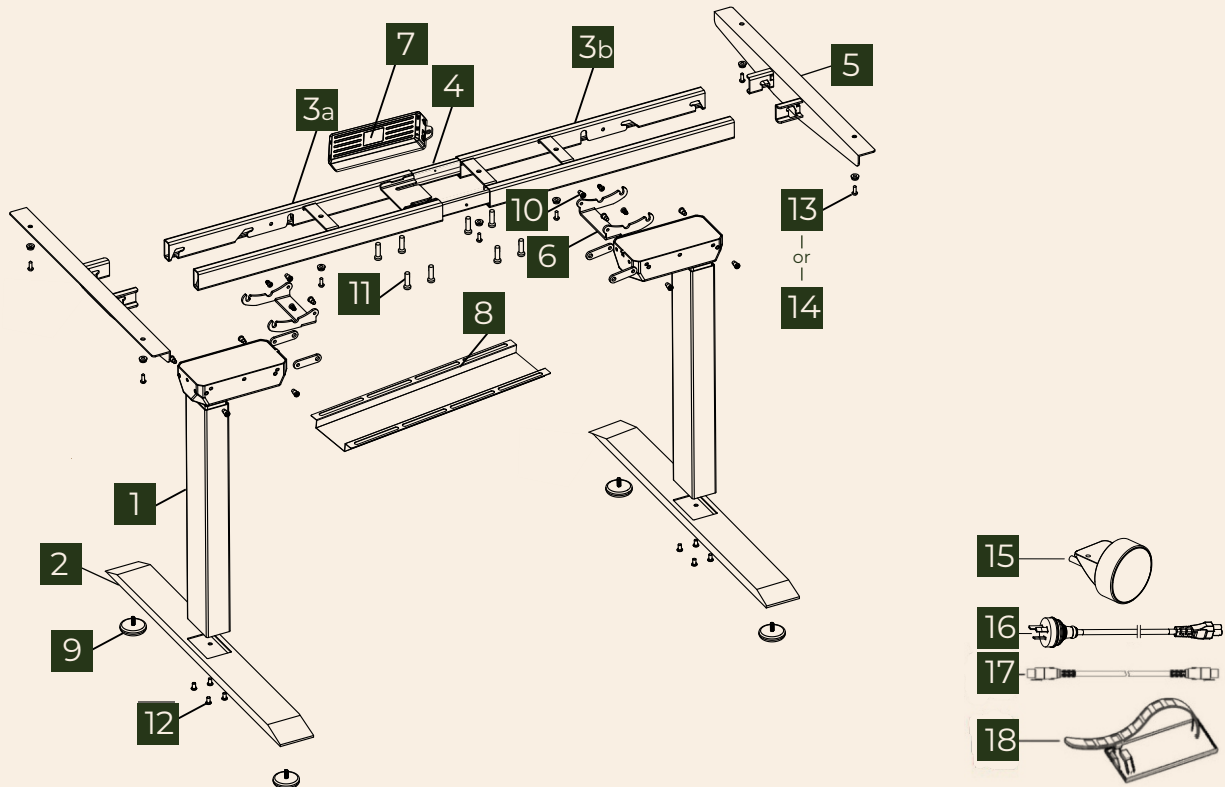

Parts

Qty

Parts

Qty

1	Leg	2
2	Foot	2
3a	Frame End-CB	1
3b	Frame End	1
4	Center Rail	2
5	Side Bracket	2
6	Lock Buckles	2
7	Control Box	1
8	Cable Tray	1
9	Foot Glides	4
10	M6x18mm Hexagon Socket half-thread screw	8

11	M8x38mm Pan Head Screw	8
12	M6x14mm Machine Screw	8
13	ST5x20mm Wood Screw	7
14	M6x12mm Pan Head Screw	4
15	Health Coach Controller*	1
16	Power Cord	1
17	Extension Cable 1.3m	1
18	Cable Clip	10
19	M4x12mm Phillips Head Machine Screw*	2
20	ST5x16mm Wood Screw*	2

*These parts can be found in the Health Coach Controller Kit.



WARNING! Failure to follow these instructions may result in serious injury.



Ensure no obstacles are in the desk's path. Ensure the desktop is not touching any walls.
Ensure all cords are an appropriate length to accommodate the changes in height.



Keep Children away from electric height-adjustable desks, control units and handsets.
There is a risk of injury and electric shock.



Do not open or dismantle any of the components - the Legs, Control Box, or Switch.
There is a risk of electric shock.



Do not sit or stand on the desk frame. Do not crawl or lie under the desk frame.



Do not place any objects taller than 50cm underneath the desk.



Keep liquids away from all electrical components.



This product is designed with a duty cycle of 10% (2 minutes on, 18 minutes off).



In the event of a power outage or if the power cords is unplugged,
a manual reset may be necessary.



Health Coach Controller Troubleshooting

Ensure that the desk is at its lowest height before attempting to reset.



Health Coach User Guide

Please scan the QR code to view all the features and recommended uses of our Health Coach Controller.

Reset Health Coach

- Enter Reset Mode: Turn the controller anti-clockwise (DOWN position) and hold until the display reads "RESET", then release the controller.
- Finish Reset: Turn and hold the DOWN position again until the desk lowers itself to the minimum height, slightly rises and stops.

The desk will have been reset.

Touch Settings

- Turn the controller anti-clockwise (DOWN position) and hold until the display reads "RESET", then release the controller.
- Press and hold the "1" button while the display flashes "RESET" and then switches to either:
10.1 (= One Touch)
10.2 (= Constant touch)
- Press the "1" button again until desired setting is reached. Once the chosen setting is displayed, release the button and wait about 5 seconds for the display to return to "RESET".
- Finish the reset process by turning the controller anti-clockwise and holding it until the desk lowers further, slightly rises and stops.

The new touch settings will have been saved - the desk is now ready to use.

Changing Measurement Units (CM/Inch)

- Turn the controller anti-clockwise (DOWN position) and hold until the display reads "RESET", then release the controller.
- Press and hold the "2" button while the display flashes "RESET" and then switches to either:
10.3 (= CM)
10.4 (= Inches)
- Press the "2" button again until desired setting is reached. Once the chosen setting is displayed, release the button and wait about 5 seconds for the display to return to "RESET".
- Finish the reset process by turning the controller anti-clockwise and holding it until the desk lowers further, slightly rises and stops.

The new unit settings will have been saved - the desk is now ready to use.


Manually Change Displayed Height Value

- Turn the controller anti-clockwise (DOWN position) and hold until the display reads "RESET", then release the controller.
- Press and hold the EverDesk+ Logo for about 5 seconds until the minimum height is displayed.
- Turn the controller anti-clockwise or clockwise to decrease or increase the height value respectively.
- Finish the reset process by turning the controller anti-clockwise and holding it until the desk lowers further, slightly rises and stops.

The new height value is saved and the desk is ready to use.


This height adjustable desk has electric motors and is designed for use in dry work areas only. The desk height is adjustable so that it can be positioned at the most ergonomically suitable height. Any other use comes at the user's risk. Under no circumstances will EverDesk+ accept warranty claims or liability claims for damages caused from improper use or handling of the desk frame.

1 STEP ONE: Mounting Side Brackets

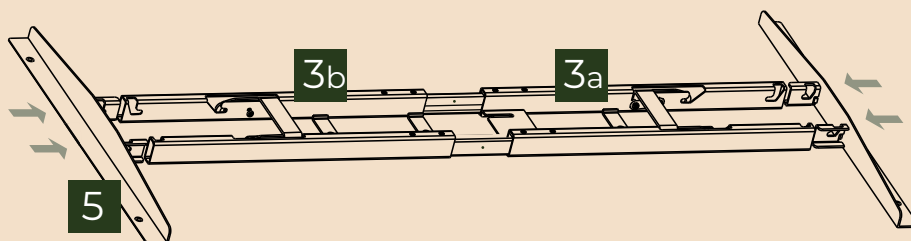

- Slide Side Brackets (Part 5) into Frame Ends (Parts 3a and 3b).

2 STEP TWO: Locking the Leg, Frame and Side Brackets

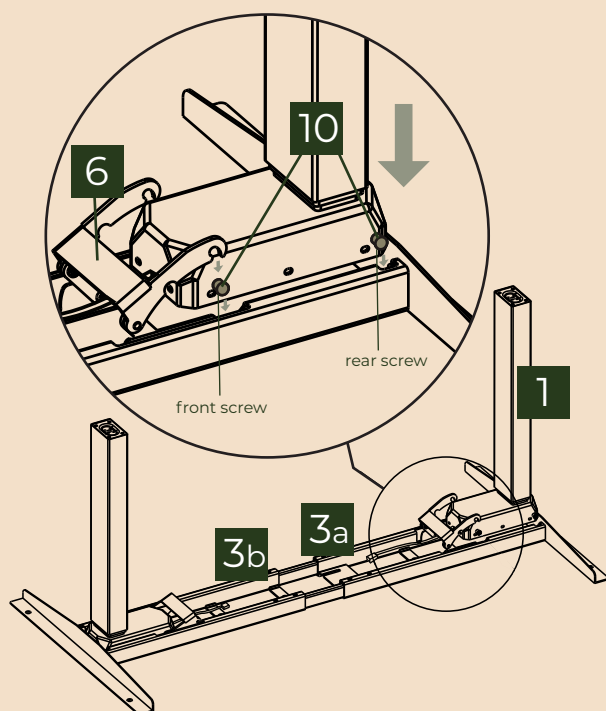


Step 2a: Align Leg in Frame

- Align the four M6x18 Hexagon Socket Half-Thread Screw (Part 10) on the Leg with the four slots on the Frame End (Parts 3a/3b).
- Place Leg (Part 1) into the frame, making sure to catch the front and rear screws into their respective slots. Slide the Leg forwards slightly - towards the Lock Buckles (Part 6)- to lock it in place.
- Align the hooked ends of the Lock Buckles with the two front screws (Part 10).

* Please note that the M6x18 Hexagon Socket Half-Thread Screw (Part 10) are pre-installed on the Leg (Part 1).

** Please note that the Lock Buckles (Part 6) are pre-installed on the Frame Ends (Part 3a/b)

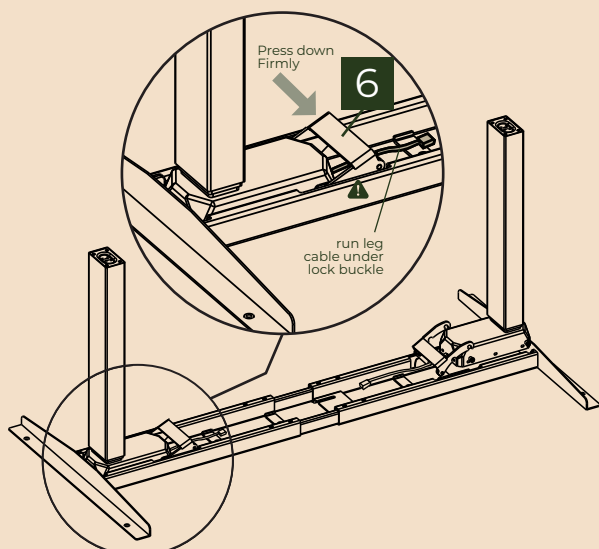


Step 2b: Lock into Place

- Ensure that the cable exiting the Leg runs under the Lock Buckle (Part 6).
- Press down on the middle of the Lock Buckle firmly with your palm to lock the Leg, Frame and Side brackets all together.

⚠ Pinching Risk :
Please be mindful of your fingers

3 STEP THREE: Attaching Frame to Table Top

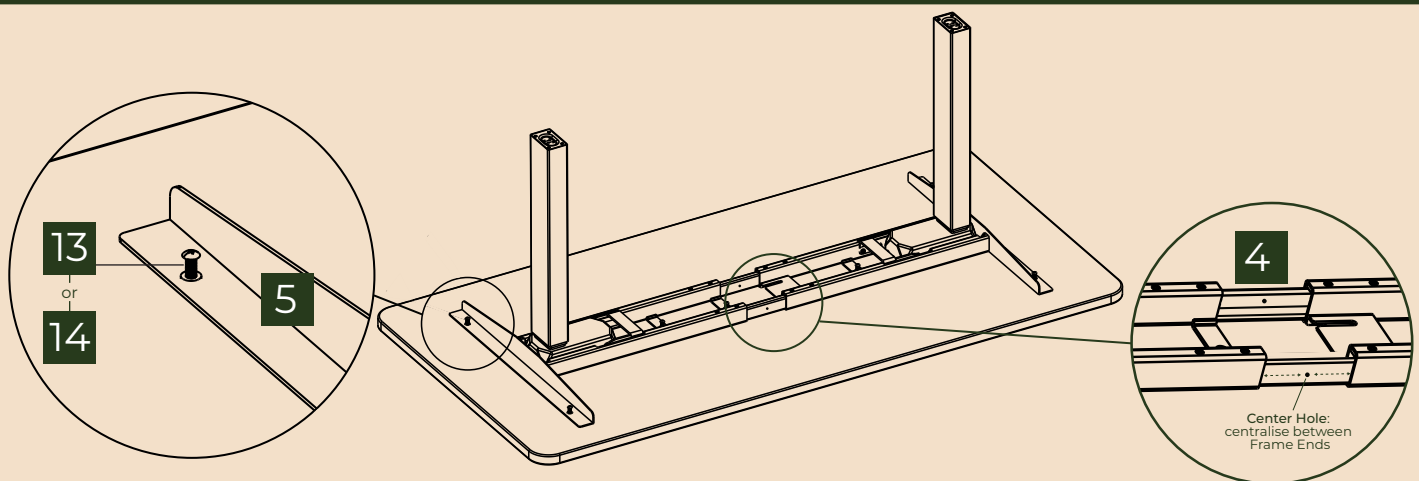


A. For Pre-Drilled Table Tops:

- Place frame on table top.
- Adjust frame to align with pre-drilled holes on table top. Using the center holes as a marker, ensure that the **Center Rails (Part 4)** are centralised between the two frame ends.
- Insert and tighten **M6x12mm Pan Head Screw (Part 14)** to attach frame to table top (Via **Side Brackets (Part 5)**).
- Repeat for all four corners.

B. For Table Tops without Pre-Drilled Holes:

- Place frame on table top.
- Double-check the frame is properly positioned on the underside of the table top. Using the center holes as a marker, ensure that the **Center Rails (Part 4)** are centralised between the two frame ends.
- Attach frame to underside of table top using four **ST5x20mm Wood Screws (Part 13)** provided.


4 STEP FOUR: Attaching the Foot

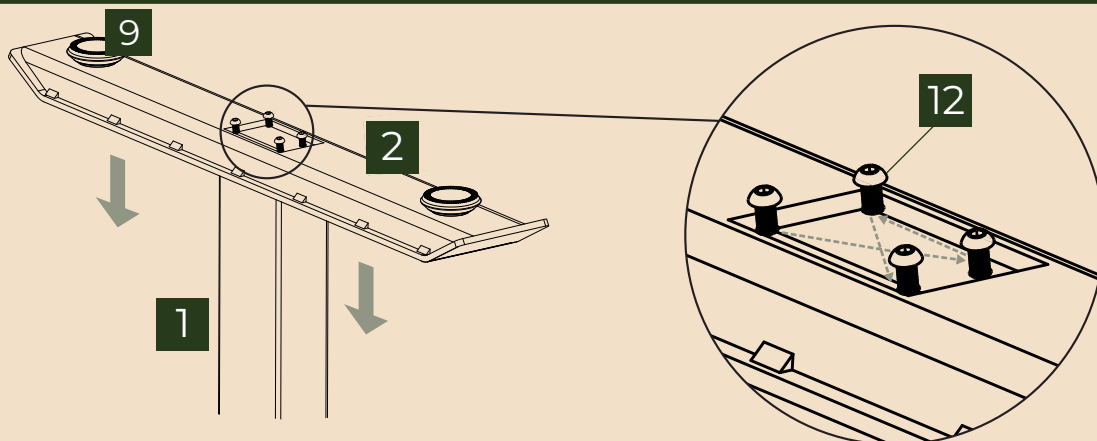

* Please note that the **Foot Glides (Part 9)** are preinstalled on the foot.


- Place **Foot (Part 2)** on top of **Leg (Part 1)**.
- Insert four **M6x14mm Machine Screws (Part 12)** and tighten in a cross pattern
- Repeat for the other side.

5 STEP FIVE: Installing the Control Box

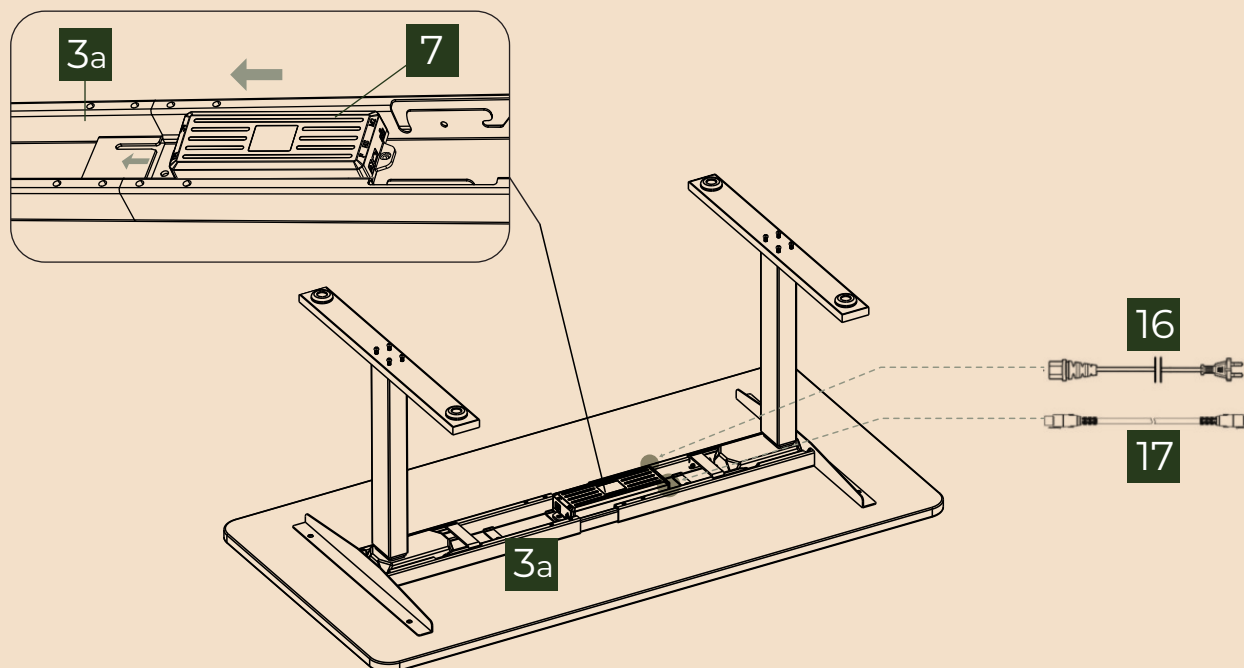

- Install the **Control Box (Part 7)** into **Frame (Part 3a)** by slotting it into place.
- Connect the Leg cables to the control box.
- Use **Extension Cable (Part 17)** if the leg cable is unable to reach the control box.
- Connect the **Power Cord (Part 16)** to the Control Box.


6 STEP SIX: Installing the Controller

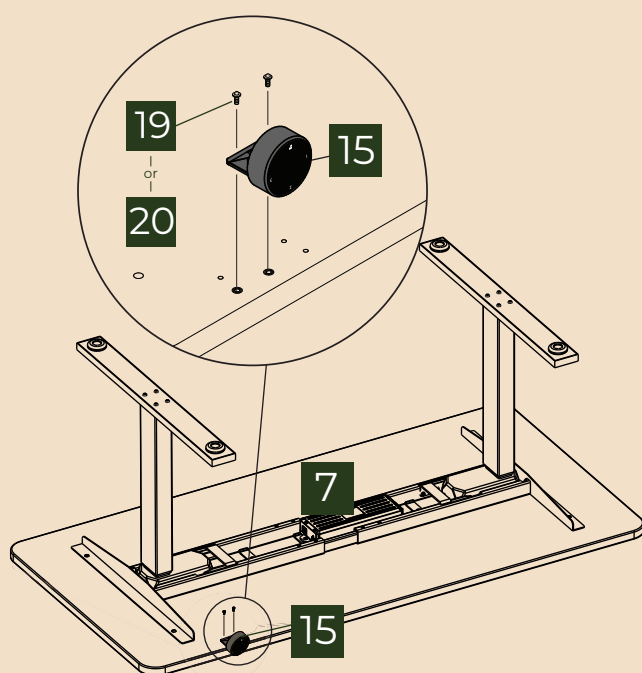

- Turn **Health Coach Controller (Part 15)** upside down and place it onto the underside of the table top.
- Align Health Coach Controller to desired position (either left or right of worktop). For pre-drilled worktops, use **M4x12mm Pan Head Screws (Part 19)** to secure the Health Coach in place. Use **ST5x16mm Wood Screws (Part 20)** for non-drilled worktops.
- Plug in cable* to Health Coach Controller, and connect the other end of the cable to the **Control Box (Part 7)**.

*Cable comes packaged with Health Coach Controller.


7 STEP SEVEN: Installing the Cable Tray

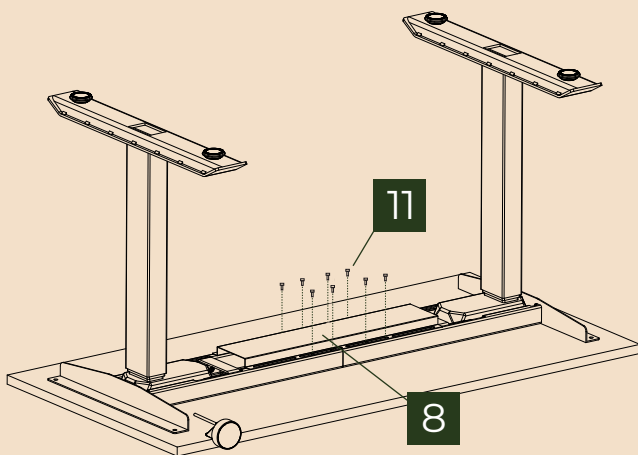

- Position the Cable Tray (Part 8) on the Frame (Part 3a/b).

- Using eight M8x38mm Pan Head Screws (Part 11) and the allen wrench provided, secure the Cable Tray to the Frame.

8 STEP EIGHT: Flipping your new EverDesk+ Over

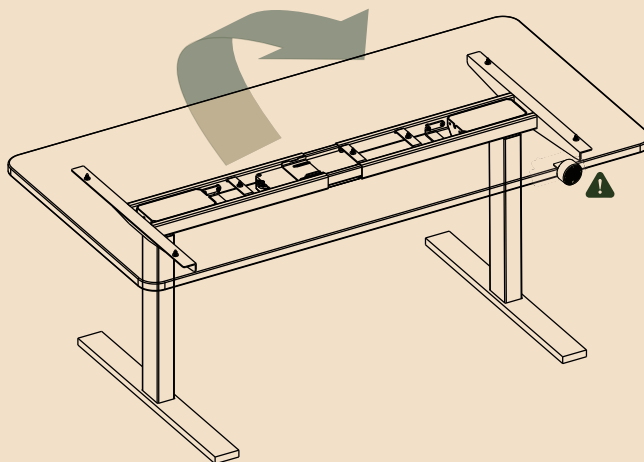

! Make sure to flip the desk over on its rear edge – do not flip the table on the side with the controller installed.

- Grab desk base and flip assembled table right side up.
- Plug Power Cord (Part 14) into outlet to power the desk.



everdesk+